

Premium DVR 4, 8, 16 Channel Models

User`s Manual



MADE IN KOREA

FCC Compliance Statement

Notice to Users: This equipment has been tested and found to comply with the limits for a Class A digital device. Pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at own expense.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION

Des changements ou des modifications non expressément approuvées par le responsable de la conformité pourraient annuler l'autorisation de l'utilisateur à exploiter l'équipement.

The equipment complies with the requirement of FCC CFR 47 PART 15 SUBPART B, Class A.

Explanation of Graphical Symbols





This symbol indicates the presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.

Ce symbole indique la présence d'instructions importantes et de maintenances dans le manuel accompagnant le produit



This symbol indicates the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Ce symbole indique la présence de « haute tension » non-isolé dans le produit qui peut avoir pour conséquence un risque de la décharge électrique aux personnes.

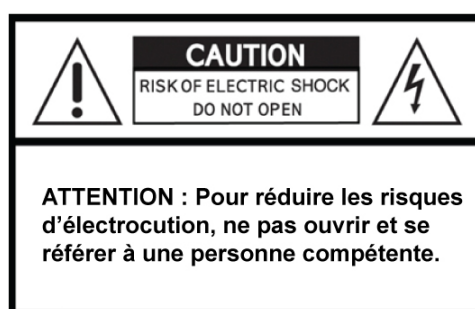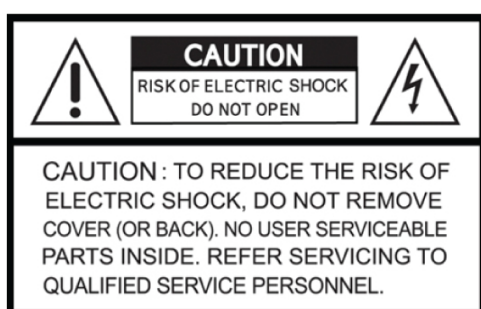


Warnings

- Installation and servicing should be performed only by qualified and experienced personnel.
- Power off the DVR when connecting cameras, audio, or sensor cables.
- The manufacturer is not responsible for any damage caused by improper use of the product or failure to follow instructions for the product.
- The manufacturer is not responsible for any problems caused by or resulting from the user physically opening the DVR for examination or attempting to fix the unit.
- The manufacturer may not be held liable for any issues with the unit if any labels are removed in the product.

Cautions

- This product has free voltages (100V and 240V). See installation instructions before connecting to the power supply.
- This product uses a Lithium battery.
- To avoid any risk of explosion, do not replace the battery on the main board by anything other than a Lithium battery.
- Dispose of used batteries according to the manufacturer's instructions.
- This equipment and all communication wirings are intended for indoor use only.
- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

WEEE(Waste Electrical and Electronic Equipment)

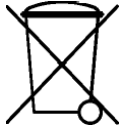

Customers in European Union countries are advised to dispose this product, at the end of its useful life, as per applicable local laws, regulations and procedures.

Important Safeguards

1. Read Instructions

- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

2. Retain Instructions

- The safety and operating instructions should be retained for future reference.

3. Cleaning

- Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

- Never add any attachments and/or equipment without manufacturer approval as such additions may result in the risk of fire, electric shock, or other personal injury.

5. Water and/or Moisture

- Do not use this equipment near water or in contact with water.

6. Accessories

- Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult and serious damage to the equipment.
- Wall or shelf mounting should follow the manufacturer's instructions and should use a mounting kit approved by the manufacturer.



- Move this equipment and cart combination with care. Quick stops, excessive force and uneven surfaces may cause the equipment and cart combination to overturn.

7. Power Sources

- This equipment should be operated only from the type of power source indicated on the marking label. If not sure the type of power, please consult to distributor or local power company.

8. Power Cords

- Operator or installer must remove power, BNC, alarm and other connections before moving the equipment.

9. Lightning

- For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

10. Overloading

- Do not overload wall outlets and extension cords to avoid the risk of fire or electric shock.

11. Objects and Liquids

- Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock.
- Never spill liquid of any kind on the equipment.

12. Servicing

- Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage Requiring Service

- Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - ① When the power-supply cord or the plug has been damaged.
 - ② If liquid is spilled or objects have fallen into the equipment.
 - ③ If the equipment has been exposed to rain or water.
 - ④ If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
 - ⑤ If the equipment has been dropped or damaged the cabinet.
 - ⑥ When the equipment exhibits a distinct change in performance—this indicates a need for service.

14. Replacement Parts

- When replacement parts are required, ensure the service technician uses replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

15. Safety Check

- Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

- This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

ATTENTION

RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UN TYPE INCORRECT
DISPOSEZ DE BATTERIES EN ACCORD AVEC LES INSTRUCTIONS

18. Operating Temperature

- An operating temperature range is specified so that the customer and installer may determine a suitable operating environment for the equipment.

19. Elevated Operating Ambient Temperature

- If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the specified operating temperature range.

20. Reduced Air Flow

- Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

21. Mechanical Loading

- Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

22. Circuit Overloading

- Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over-current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.




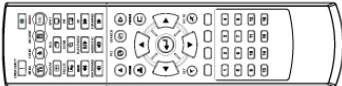

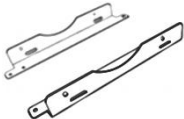

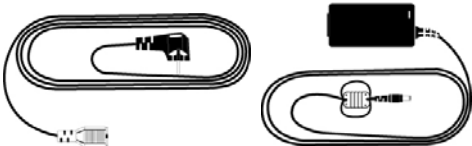
23. Reliable (Grounding)

- Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (for example, use of power strips).
- Connection of ground wire is highly recommended to protect the DVR from external electric shock, such as lightening, electrical surge.

Warning

Warranty is void if seal or label is removed or damaged.

The List of Configuration

DVR Set	<p>A Type</p>  <p>4 / 8 / 16CH</p> <p>B Type</p>  <p>4 / 8 / 16CH</p>
CD (Software/Manual)	
Remote Controller	
Screws	
HDD Brackets	
Data Cable	
Power Cable	

Operation Precautions

● Power Off

- Do not turn DVR off, or plug off the power adapter while DVR is in operation (record/playback). Otherwise, it may cause permanent damage to the equipment. Please click (↵) SETUP>SYSTEM>Shutdown sequentially and then remove the power after DVR is shut down completely. It is safe to wait for 5 seconds before turning the power on again.
- Do not turn DVR off, or plug off the power adapter while External storage device (e.g., USB memory stick, removable external hard disk and the like) in use. Otherwise, it may cause permanent damage to the equipment. Make sure that the power switch is in the "ON" position until data storage is completed. Please be aware that removing the storage device cause the same damage to the equipment.
- Do not turn DVR off, or plug off the power adapter during the format of the hard disk. Otherwise, it may cause permanent damage to the equipment. Make sure that the power switch is in the "ON" position until the formatting of the disk is completed.

● HDD Installation / Addition / Moving / Replacement / Removal

- For installation/addition/replacement/Removal of HDD (DVD-RW), make sure that DVR is turned off. Otherwise, it may cause permanent damage to the HDD (DVD-RW).
- When wish to power DVR off, please click (↵) SETUP>SYSTEM>Shutdown sequentially and then remove the power after DVR is shut down completely.
- **Installation/Addition/Moving/Replacement:** Start 'HDD initialization' including formatting. Otherwise, DVR won't recognize the hard disk and may begin to function abnormally. Please follow the below procedure for 'HDD initialization'.
 - ① (Date/Time setup) Set up the current date and time (SETUP>SYSTEM>Admin>Date/Time).
 - ② (Initialization of system setup) All setup values are restored to original factory default settings. (SETUP>SYSTEM>Information>Status>Setup>Default).
 - ③ (HDD format) HDD format is done by SETUP>SYSTEM>Admin>Storage>Format. If there are more than two HDDs, each must be formatted, separately. When the format is completed, DVR will auto-reboot.
- **Removal:** Follow the Remove procedure even when a pre-installed hard disk has been removed.
 - SETUP>SYSTEM>Admin>Storage>Format, click (↵) 'Removed' item under the discrete Format headings of a corresponding HDD to discard 'HDD' item. When the Remove procedure is completed, DVR will auto-reboot.

● Date / Time Change

- Any change in Date/Time is immediately applied onto live video (LIVE), but the date/time when the recording was done are not changed.
- Make sure to reboot DVR after adjusting the Date/Time.
- Also, do not forget to execute SETUP>SYSTEM>Shutdown in sequence before reboot.

● Upgrade

- Do not upgrade until install a hard disk drive. Make sure that upgrade when the hard disk drive is in proper operation.

● Using a Mouse

- **Left mouse button:** have the same function as **Enter (↵)** on the Front panel of DVR.
- **Central button (wheel):** have the same function as **Search** key on the Front panel of DVR(display search menu).
- **Right mouse button:** display a number of 'Function keys' (please see 'Input Device and Screen Icons>Using a mouse' in this manual).

● PLAY / PAUSE Key

- Press the **PLAY/PAUSE** key to one-touch playback on the viewing screen (playback the recorded video from the last one minute).
- Every time pressing the **PLAY/PAUSE** key during playback mode, it is changed to '1X PLAY' and 'PAUSE'. The displayed sign on the screen also changes from ► to II.
- If wish to change mode (1X PLAY, REW, FF, BACKWARD, FORWARD) during playback, always press the **PLAY/PAUSE** key first (please see if the sign II is shown on the screen).
- Press the **PLAY/PAUSE** key to back up. Make sure that the backup is done in 'PAUSE' mode.

● Camera Title

- Camera Title displayed in Record and Playback modes of DVR is set to CAM1 ~CAM16. Registering camera title in setup menu (DEVICES>Camera/PTZ>Title) is to make every setup process easier.

Table of Contents

Server

1. PRODUCT FEATURES	10
1.1 Unpacking	10
1.2 Service	10
1.3 System Connection Diagram	10
2. INSTALLATION	12
2.1 Hard disk and DVD-RW Installation	12
2.1.1 SATA Port	12
2.1.2 HDD Installation	12
2.2 Connector Wiring	12
2.2.1 Video-In/Loop Out Connections	12
2.2.2 Monitor Connections	12
2.2.3 Audio Connections	12
2.2.4 TCP/IP(Ethernet) Connections	13
2.2.5 Alarm Connections	13
2.2.6 RS-485/422 Connections	13
2.2.7 USB Connections	13
2.2.8 RS-232 Connections	13
2.2.9 Factory Reset Switch	13
2.2.10 Grounding (Earthing)	13
2.2.11 Factory Reset Switch	13
2.2.12 Power Supply connections	14
2.2.13 Connections Guideline	14
3. INPUT DEVICE AND SCREEN ICONS	15
3.1 Front Panel	15
3.2 Using a Remote Controller	15
3.3 Using a Mouse	15
3.4 Screen Icon	16
4. SETUP	17
4.1 Login / Logout	17
4.2 SYSTEM	18
4.2.1 Information	18
4.2.2 Admin	21
4.2.3 Account	24
4.2.4 System Log	27
4.2.5 Exit	27
4.2.6 Shutdown	27
4.3 DISPLAY	28
4.3.1 OSD	28
4.3.2 Main Monitor	29
4.3.3 Spot Monitor	30
4.3.4 Spot Monitor Control on Display Mode	30
4.4 DEVICES	30

4.4.1 Network	30
4.4.2 Camera / PTZ	34
4.4.3 Audio	35
4.4.4 Alarm In	36
4.4.5 Alarm Out	36
4.4.6 Serial In	37
4.5 RECORD	37
4.5.1 Setting	37
4.5.2 Schedule	39
4.5.3 Pre Alarm	40
4.5.4 Motion Detection	41
4.5.5 Holiday	41
4.6 LINK	42
4.6.1 Alarm In	42
4.6.2 Motion Event	43
4.6.3 Video Loss	43
4.6.4 System Event	44
4.6.5 Popup Link	44
5. OPERATION INSTRUCTION	45
5.1 Viewing	45
5.1.1 First Image	45
5.1.2 View Format	45
5.1.3 Digital Zoom	46
5.1.4 Freeze Live Image	46
5.1.5 Pan / Tilt Control	46
5.1.6 System Log	47
5.1.7 Key Lock	48
5.1.8 Emergency Recording	48
5.2 Search	48
5.2.1 Date / Time Search	48
5.2.2 Calendar Search	49
5.2.3 Event Search	50
5.3 Playback	50
5.4 One-touch Playback	51
5.5 Digital Zoom in Playback	51
5.6 Archive	51
5.7 Menu Bar	52
5.8 Color Control and Position	53
5.9 Alarm Out Control	54
6. CMS PRO	56
6.1 CMS Pro Features	56
6.1.1 Introduction	56
6.1.2 Features	56
6.1.3 System Requirements	56
6.2 Installation	57

6.2.1	Software Installation	57	7.4	Search Mode	101
6.2.2	Login	58	7.4.1	Date/Time Search.....	102
6.3	Menu	59	7.4.2	Event Search.....	103
6.4	Setup.....	60	7.4.3	POS/ATM	103
6.4.1	Local Setup - Device.....	60	7.5	Disconnection.....	105
6.4.2	Device Group Setup	62	7.6	Uninstallation.....	106
6.4.3	Local Setup - Environment	63	8.	XCMS VIEWER	108
6.4.4	Local Setup - Account.....	66	8.1	System Recommendations	108
6.4.5	Local Setup – E-map	67	8.1.1	Program Installation Method	108
6.4.6	Remote Device Setup.....	69	8.2	Login.....	110
6.4.7	Change Password	70	8.3	Watch Mode	110
6.4.8	Help.....	70	8.3.1	Login Screen	110
6.5	View.....	70	8.3.2	Local Setting.....	111
6.5.1	Server List.....	70	8.3.3	Live.....	114
6.5.2	Remote Device System Log	71	8.4	Search Mode	117
6.5.3	Remote Device Event Log	71	8.4.1	Date/Time Search	117
6.5.4	CMS System Log.....	72	8.4.2	Event Search.....	119
6.5.5	Health Check	73	8.4.3	POS/ATM	119
6.5.6	Show All Windows	74	8.5	Disconnection.....	121
6.6	Application	75	8.6	Uninstallation.....	122
6.6.1	Search.....	75	9.	CMS WEB CLIENT.....	124
6.6.2	Exit.....	75	9.1	Setup and Login	124
6.7	Live (Live Video Monitoring System)	76	9.2	Live Display	125
6.7.1	Overview	76	9.3	Playback Screen.....	126
6.7.2	Live Monitor Menu	76	10.	CMS MOBILE VIEWER.....	128
6.7.3	Screen Layout Control.....	83	10.1	iPhone Mobile	128
6.7.4	Change Division Display.....	83	10.1.1	System Requirements	128
6.7.5	Sequencing	84	10.1.2	Installation	128
6.7.6	Audio Volume Control.....	84	10.1.3	Site Registration	130
6.8	Search.....	85	10.1.4	Connection	131
6.8.1	Overview	85	10.1.5	Live View (Portrait View)	131
6.8.2	Time Bar Search.....	85	10.1.6	Live View (Landscape View)	132
6.8.3	Event Search	87	10.1.7	PTZ Control	132
6.8.4	POS/ATM Search	87	10.1.8	Search	133
6.8.5	Thumbnail Search.....	88	10.1.9	Snapshot gallery.....	134
6.8.6	Smart Search.....	88	10.1.10	Setting	135
6.9	E-Map.....	89	10.1.11	Uninstallation	135
6.9.1	Overview	89	10.2	iPad Mobile.....	136
6.9.2	Controls	89	10.2.1	System Requirements	136
6.9.3	E-map Camera – Instant Playback.....	89	10.2.2	Installation	136
6.9.4	Alarm In/Out Control	90	10.2.3	Site Registration	138
6.9.5	Audio.....	90	10.2.4	Connection	138
6.10	Uninstalling CMS Pro	91	10.2.5	Live View (Portrait View)	139
7.	ICMS VIEWER.....	93	10.2.6	Live View (Landscape View)	140
7.1	System Recommendations.....	93	10.2.7	PTZ Control	140
7.1.1	Program installation Method	93	10.2.8	Search	141
7.2	Login	94	10.2.9	Snapshot gallery.....	142
7.3	Watch Mode	95	10.2.10	Setting	143
7.3.1	Log-in Screen	95			
7.3.2	Local Setting	95			
7.3.3	Live	98			

10.2.11 Uninstallation	143	12.4 Link	170
10.3 Android Phone(mViewer Pro).....	144	12.4.1 Link Setup.....	170
10.3.1 System Requirements	144	12.4.2 Schedule Setup	171
10.3.2 Installation.....	144	12.5 Setup.....	171
10.3.3 Site Registration	145	12.5.1 Title	171
10.3.4 Connection.....	145	12.5.2 Port Setting.....	172
10.3.5 Live View (Portrait View).....	146	12.5.3 OSD Display	172
10.3.6 Live view (Landscape View)	147	12.5.4 Pattern Setting.....	172
10.3.7 PTZ control	148	12.6 Search.....	175
10.3.8 Alarm Out Control	148		
10.3.9 Search.....	149		
10.3.10 Snapshot Gallery	150		
10.3.11 Setting.....	150		
10.3.12 Uninstallation	151		
10.4 Android Phone	152		
10.4.1 System Requirements	152		
10.4.2 Installation.....	152		
10.4.3 Site Registration	153		
10.4.4 Connection.....	154		
10.4.5 Search.....	155		
10.4.6 Audio.....	155		
10.4.7 PTZ control	156		
10.4.8 Information.....	156		
10.4.9 Disconnection	156		
10.4.10 Uninstall	157		
10.5 Blackberry Mobile.....	158		
10.5.1 System Requirements	158		
10.5.2 Installation.....	158		
10.5.3 Site Registration	158		
10.5.4 Connection.....	159		
10.5.5 PTZ Control	160		
10.5.6 Disconnection	161		
10.5.7 Uninstallation	161		
11. KEYBOARD CONTROLLER	163		
11.1 Connection	163		
11.1.1 Configuration Diagram I.....	163		
11.1.2 Configuration Diagram II.....	163		
11.1.3 Configuration Diagram III.....	164		
11.2 Keyboard Setup in DVR	164		
11.3 Keyboard Configuration	165		
11.4 Operation	165		
11.4.1 DVR/PTZ Mode conversion.....	165		
11.4.2 DVR Control Mode.....	165		
11.4.3 PTZ Control Mode	166		
12. SERIAL IN (POS)	168		
12.1 Usage of Serial-In Function	168		
12.2 Connection Method	168		
12.3 Connection DIAGRAM.....	168		

1. Product Features

1.1 Unpacking

- This equipment is an electronic appliance, so it should be handled with special care.
- After unpacking, please check if all the following items are included.
 - DVR Main body
 - **A and B Type** : Power Supply Adapter (DC 12V, 3.33A) and Power Supply Cable
 - Remote Control With 2 AAA batteries
 - Installation CD (CMS Software & User's Manual)

1.2 Service


- If there is any problem in the product, please refer servicing to a supplier or a distributor with qualified service personnel.

Warning

Warranty is void if seal or label is removed or damaged.


1.3 System Connection Diagram

A Type - 4 / 8 / 16 Channel Series DVR

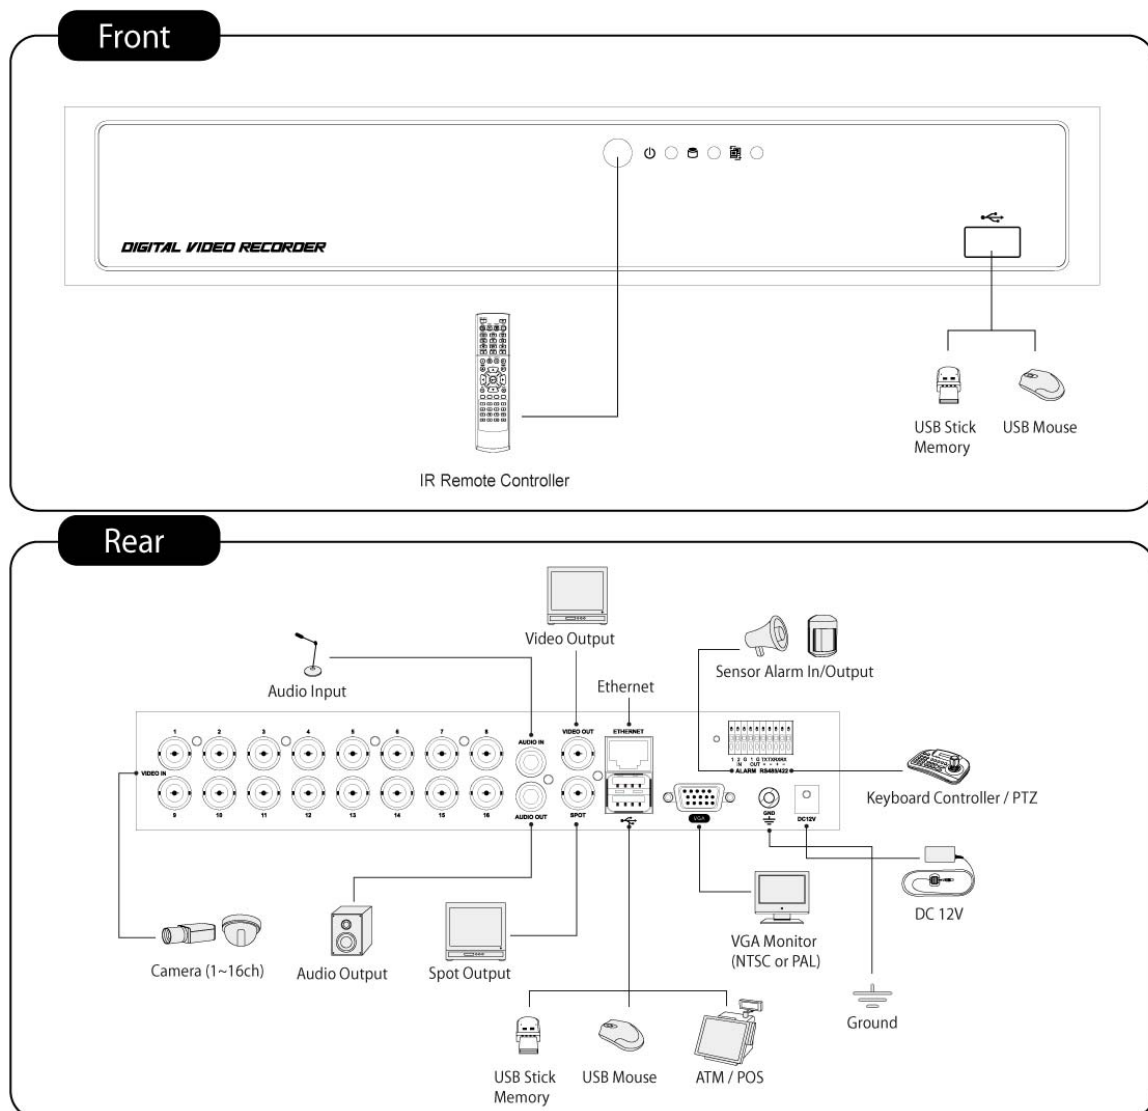


B Type - 4 / 8 / 16 Channel Series DVR

Front

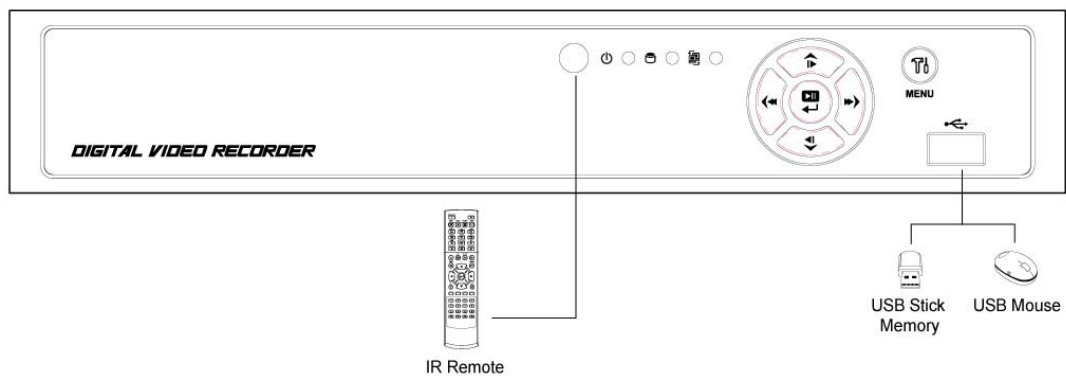

Rear

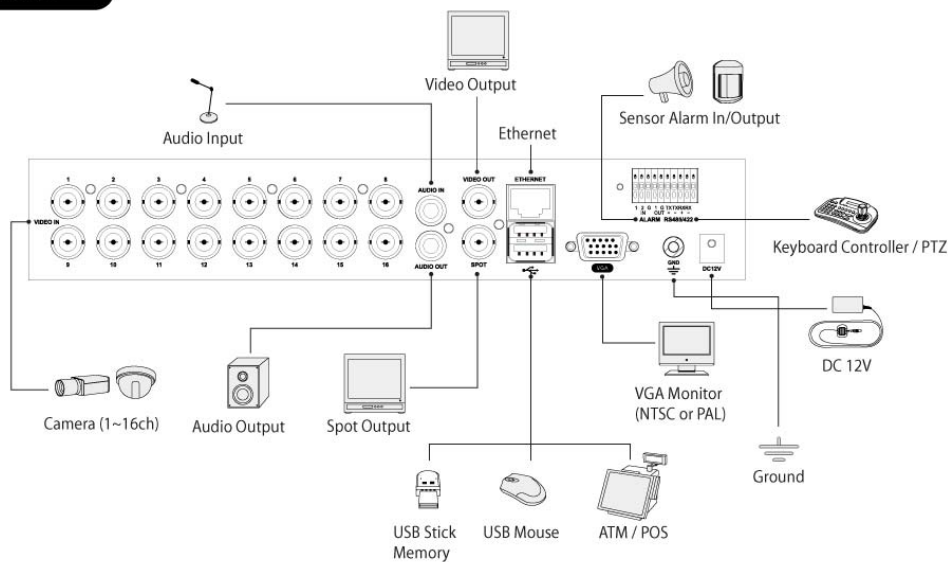

2. Installation

2.1 Hard disk and DVD-RW Installation

2.1.1 SATA Port

- Main substrate of these DVRs have one SATA port: it is indicated as SATA 1.
- Only one SATA device (hard disk) is possible to connect in Serial to the SATA port.

4 / 8 / 16 CH DVR	Storage	SATA 1 Port
	HDD	1

2.1.2 HDD Installation

- Securely fix a hard disk by using bracket and screws provided herewith.
- Please do not use any different hard disk cables (data cable and power supply cable) other than ones we provide.
- Otherwise, it may cause damage to the hard disk.

CAUTION

Install hard disk after DVR power is off. Otherwise, it may cause permanent damage to the hard disk. To turn off DVR, please click (↵) SETUP>SYSTEM>Shutdown. Also, wait for 5 seconds before plugging in power supply again.

CAUTION

- For installation/addition/replacement/Removal of HDD (DVD-RW), make sure that DVR is turned off. Otherwise, it may cause permanent damage to the HDD (DVD-RW).
- **Installation/Addition/Moving/Replacement:** User should start 'HDD initialization' including formatting. Otherwise, DVR won't recognize the hard disk and may begin to function abnormally. Please follow the below procedure for 'HDD initialization'.
 - ① (Date/Time setup) Set up the current date and time (SETUP>SYSTEM>Admin>Date/Time)
 - ② (Initialization of system setup) All values in setup are restored to factory default settings
 - (SETUP>SYSTEM>Information>Status>Setup>Default)
 - ③ (HDD format) HDD format is done by SETUP>SYSTEM>Admin>Storage>Format. If there are more than two HDDs, each must be formatted, separately. When the format is completed, DVR will auto-reboot.
- **Removal:** Follow the Remove procedure even when a pre-installed hard disk has been removed. In
 - SETUP>SYSTEM>Admin>Storage>Format, click (↵) 'Removed' item under the discrete Format headings of a corresponding HDD to discard 'HDD' item. When the Remove procedure is completed, DVR will auto-reboot.

2.2 Connector Wiring

2.2.1 Video-In/Loop Out Connections

- Connect a camera to 'VIDEO IN'.

2.2.2 Monitor Connections (Video Out, VGA and Spot)

- Use with CCTV monitor and computer monitor. Please connect the CCTV monitor to 'VIDEO OUT', the computer monitor to 'VGA', respectively. If necessary, connect another CCTV monitor to 'SPOT'.

2.2.3 Audio Connections

- Connect an audio device to 'AUDIO IN' and a speaker system to 'AUDIO OUT'. Please use a speaker system with volume adjustable.

2.2.4 TCP/IP(Ethernet) Connections

- Connect to '**ETHERNET**' connector with the LAN cable.
- When connect to Internet, use an ordinary LAN cable (Non-cross cable). However, when connect directly to a PC, please use only 'Crossover cable'.

2.2.5 Alarm Connections

- Connect Alarm Input (Sensor) to '**AI 1~AI 2**' connectors and connect Sensor Common to '**G**' connector.
- Connect Alarm Output (buzzer, siren, etc.) to '**AO 1**' connectors and connect Common to '**G**' connector.
- Connect Pan/Tilt receiver (or Pan/Tilt camera) to '**RS-485/422**' connector. Please observe proper (+) and (-) polarity.

2.2.6 RS-485/422 Connections

- PTZ Camera connector.
- Please use TX+, TX-, RX+ and RX- terminals.

2.2.7 USB Connections

- There are three identical USB ports in front and in rear. It is possible to connect a USB memory stick to archive data or a mouse to control the device.

2.2.8 RS-232 Connections

- This port is not in use for users. Do not connect any devices through this port.

CAUTION

WHEN USING THE RS232 SERIAL PORT, USERS MUST REQUEST FOR ASSISTANT TO QUALIFIED TECHNICAL PERSON OR SERVICE REPRESENTATIVE.

2.2.9 Factory Reset Switch

- Reset the switch to restore all setup values of menus to factory default settings. It is also possible to use to initialize System Log file.
- The switch is located in a pin hole on the left-hand side of the USB connector of the back panel.
- Put the clip pin into the switch hole on the monitor (Live) screen and keep pressing until the switch has clicked.

CAUTION

Press factory reset switch only in live mode. Never press in setup mode.

2.2.10 Grounding (Earthing)

- Connection of ground wire is highly recommended to protect the DVR from external electric shock, such as lightning, electrical surge

2.2.11 Factory Reset Switch

- Reset the switch to restore all setup values of menus to factory default settings. It is also possible to use to initialize System Log file.
- The switch is located in a pin hole of the back panel.
- Put the clip pin into the switch hole on the monitor (Live) screen and keep pressing until the switch has clicked.

CAUTION

Press factory reset switch only in live mode. Never press in setup mode.

2.2.12 Power Supply connections

- Plug the power supply adapter (**DC 12V, 3.33A**) which include in this product to '**DC12V**' connector and plug another side to power source. Adapter input voltage is a free volt (100 VAC ~ 240 VAC). Please do not use any different power supply adapter because it may cause the DVR to malfunction.

2.2.13 Connections Guideline

- **Video out Connector:** If only the monitor is connected to VIDEO OUT connector, please set the impedance switch on the rear side of the monitor to 75 ohms to prevent abnormally bright or collapsed images. If wish to connect another device (e.g., a recorder) to the back of the monitor, please set the impedance switch on the rear side of the monitor to HIGH Z (High Impedance) and set the last device to 75 ohms.
- **Alarm Input Connector:** Do not input any type of voltage to the AI 1~AI 2 connectors.

3. Input Device and Screen Icons

3.1 Front Panel

A Type



4 / 8 / 16 Channel DVR

B Type



4 / 8 / 16 Channel DVR

KEYS	PTZ KEY	Operating mode	Setup mode
▲, ▼, ◀, ▶		• Control Pan/Tilt rotation of up/down/left/right in PTZ mode	• Up/Down/Left/Right on screen cursor control
Power LED (Red)		• Light off: DVR off • Light on: DVR on	
HDD LED (Green)		• Light off: Stop recording • Blink : Recording/Playback modes (HDD Access), Archive in operation	
Network LED (Yellow)		• Light off: failed to connect to Ethernet • Blink: Connected to Ethernet	

3.2 Using a Remote Controller

- Follow the procedure below when using the remote controller for multi DVRs.
 - Check System ID (e.g., between 1 and 255) of the DVR that wish to use.
 - (SETUP>SYSTEM>Information>Status>System ID).
 - Holding up the remote controller to face towards the DVR and press the System ID numbers one by one, while pressing ID button on the remote controller. Note that the System ID is a **3-digit number**. Button '10' functions the same as '0'.
 - (e.g.: If System ID is 3, press 10>10>3 buttons in sequence while pressing the ID button)













3.3 Using a Mouse

- Mouse provides an easier access to adjustment. Refer to below for proper use.
- Left mouse button functions the same as **Enter** (↵) key on the front panel of DVR.
- Right mouse button displays the following "Function keys" on screen.
- Click Search menu at "Function Keys" the same as **Search** key on the front panel of DVR. Press the button, then the Search menu will appear on screen.

Name of Key	Function	Name of Key	Function
Display	Change display mode	Event	Display System Log
Sequence	Display each channel sequentially	Search	Enter Search Mode
Spot	Use spot monitor	Setup	Enter Setup
Zoom	Zoom in a camera	Emergency	Activate Emergency record

Freeze	Freeze on live/recorded display	Shutdown	Pre-step before Power off (SETUP>SYSTEM>Shutdown)
PIP	Picture in Picture function	Cancel	Cancel Function key menu
PTZ	En/Disable PTZ control		


3.4 Screen Icon

Icon	Description	Icon	Description
	Continuous recording mode		In Audio recording
	Event recording mode (Alarm In/Motion)		CMS access indication/ No. of accesses (up to 4)
	In recording		In channel sequencing
	PTZ registration / PTZ mode		Lock
	Remote Controller		Setup in HDD Overwrite mode
	Setup in HDD No Overwrite mode (HDD Full)		Setup in HDD No Overwrite mode (recording)


4. Setup

4.1 Login / Logout

- At the default setting of DVR, user has to input the password to enter the set up menu.
- Please press SETUP key to enter the setup menu and the following screen will appear.

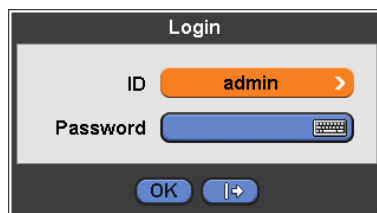

- In order to use all functions and privileges, login is as ID: admin.
- Default Password is "1111".
- At Setup>System>Account, Administrator should set a user rights depending on each users separately in "Login Settings".
- After login successfully, following screen will appear:

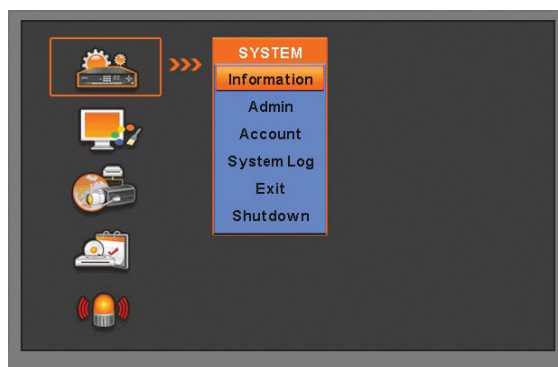

- Recording continues during setup.
- Main menu consists of 5 sub menus.
 - **(SYSTEM / DISPLAY / DEVICES / RECORD / LINK)**
- There is no factory default in the case of passwords.
- To escape from the setup menu, please click(↵) on SYSTEM>Exit on the screen. Then, the following dialogue box will appear.



- Please choose 'OK' to log out.
- User may select the Main menu with ◀, ▶ direction keys or mouse click. Please click (↵) the submenu to choose a submenu under the Main menu.

NOTE

Press AUDIO/ESC in the setup screen, start operation alike CANCEL (ESC). It will not operate live or playback mode but only in the setup menu.

4.2 SYSTEM

4.2.1 Information


- Please click (↔) SYSTEM>Information and the following screen will appear.


Status

Site Description

- Decide name of DVR.
- Please click (↔) keyboard icon on Site Description frame and the following virtual keyboard will appear.

- Please click (↔) desired letters (characters) on the virtual keyboard to input.

①  Use to erase one character every time.

②  Use to erase the whole sentence.

- Please choose 'OK' to confirm the input and choose 'Cancel' to cancel.

System ID

- Control DVRs by one remote controller by setting DVR IDs.
- Please click (↔) ▲, ▼ direction keys on the right-hand side of the System ID frame to set the ID of DVR. Take any whole number **between 1 and 255**.
- While pressing (+) or (-) button, the System ID value increases or decreases by 10 units.

Language

- Please click (↔) Language frame to choose desired language and press (↔) key again.

Setup

- **Default:** Click (↔) Default frame to restore all setup values of menus to factory default settings. Please note that System Log is not initialized.

NOTE

This has a different function from Factory Reset Switch on the back panel of DVR in that System Log is not initialized.


- **Import:** Copy the Menu setup stored in USB memory stick into DVR. Please plug in the memory stick and then click (↔) Import.
- **Export:** Store the Menu setup of DVR in USB memory stick. Please plug in the memory stick and then click (↔) Export.
- When user is on Default, Import or Export process, a message box will ask the progress and click the confirmation icon, then a message box will show whether its success or failure.

System Log

- **Export:** Store the System Log contents in USB memory stick. Please plug in the memory stick and then click (↔) Export.
- When user is on Default, Import or Export process, a message box will ask the progress and click the confirmation icon, then a message box will show its success or failure.

Version

- When user complete Status data input, please click (↔) Version and the following screen will appear.

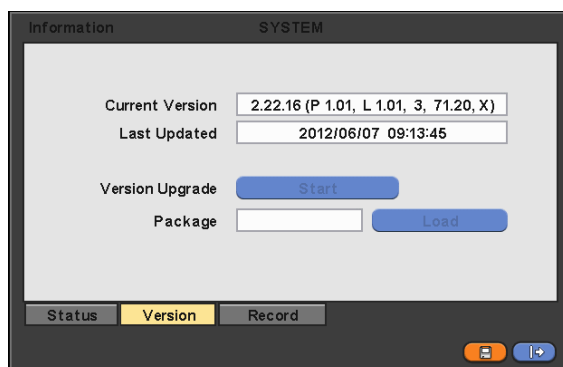

Version Upgrade

- User may upgrade DVR software.
- Please follow the Upgrade procedure below.
 - ① Plug USB memory stick having upgrade file into DVR.
 - ② Click (↔) Load frame. Then, software version stored in the USB will appear on the left-hand side.
 - ③ Click (↔) Start frame to start the upgrade.
 - ④ When the upgrade is completed, a dialogue box pops up. Please choose 'OK' and DVR will auto-reboot.

NOTE

Upgrade file must be placed without folder. Otherwise SYSTEM will not be able to recognize the file.

CAUTION

DO NOT UPGRADE UNTIL INSTALL A HARD DISK DRIVE. MAKE SURE TO UPGRADE WHEN HDD IS IN PROPER OPERATION.

CAUTION


PLUGGING OUT USB DEVICE OR FORCED POWER-OFF MAY CAUSE PERMANENT DAMAGE.

CAUTION

REMOTE UPGRADING WILL CAUSE SYSTEM TO CHANGE ALL THE SETTINGS TO DEFAULT EXCEPT NETWORK SETTING.

Record


- When user completes Version input, please click (↩) Record. Then, the following screen will appear.

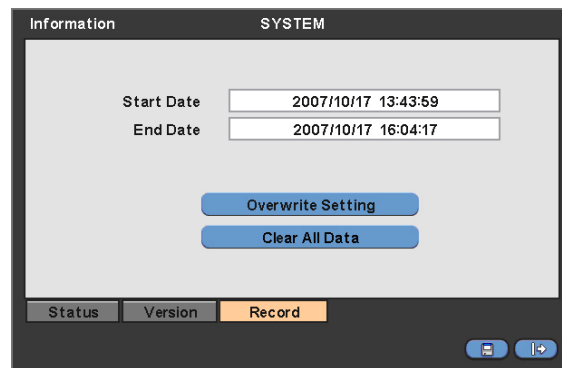

- The screen shows start time and end time of recorded data.

Overwrite Setting

- Click (↩) Overwrite Setting button and the following screen will appear.

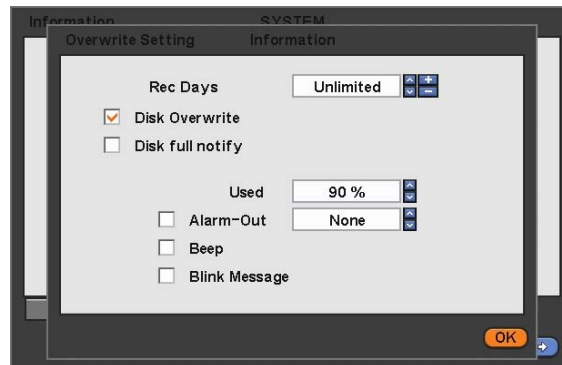

- User shall designate the total recording days from 1 day to 30 days and unlimited.
- User may set for beeping or notifying messages that notify the used percentage of disk.
- Check Disk Overwrite and user may activate the overwrite function.
 - This function makes restart the recording from the beginning when the HDD is full. The previous recorded data will be erased from the first one. Following icon will display in bottom of live mode
- ① Uncheck (☐) Disk Overwrite, recording will stop automatically when the HDD is full.
- ② At no Overwrite mode, icon will appear when HDD capacity is full that indicates the recording has stopped and, icon will appear while the recording is going on.
- ③ If user changes this setting, the warning message will appear. Then click (↩) “confirmation” button and user may change the setting.
- If user checks (☑) Disk full notify item, the warning message will appear as the used amount of disk.
 - Used**
 - User may set the certain value of HDD usage for notification. It will notify at that point. The values are from 50 ~ 100%.
 - Alarm-Out**
 - The Alarm-out will happen at the used amount of HDD which is specified at Used.
 - Beep**
 - Check (☑), the warning sound will happen at the used amount of HDD which is specified at Used.
 - Blink Message**
 - Check (☑), the warning message “Disk Used(xx%)!” will appear on the OSD.

CAUTION

IF USER USES "Rec Days" FUNCTION, DVR WILL STORE ONLY THE DAYS THAT SPECIFIED BY USER. PLEASE BEWARE OF DATA LOSS DUE TO "Rec Days" FUNCTION.

NOTE

Notify setting does not affect saving the recorded data. It only gives notification and keep recording until hard disk is full.

NOTE

For more specific setting about Alarm-out, use Setup>DEVICES>Alarm Out.

Clear All Data

- Use to delete or purge all normal recorded data from database. Please follow the procedure below.
 - ① Click (↔) Clear All Data frame.
 - ② When a dialogue box asking "Remove All Data?" shows, choose 'OK'.
 - ③ Then, Progress window will appear and the process starts.
 - ④ When all data are deleted, a dialogue box asking "Are you sure to remove log?" will pop up.
 - ⑤ Choose 'OK' to delete all the recorded data as well as System Log.
- When user finished all the necessary inputs to SYSTEM menu, please click (↔) 'OK' on the bottom to go back to SETUP screen.

NOTE


This might take a while to completely delete all data. In case of 80GB HDD for example, it takes about 90 seconds.

CAUTION

DELETED DATA CANNOT BE RESTORED.

4.2.2 Admin

- Please click (↔) SYSTEM>Admin and the following screen will appear.

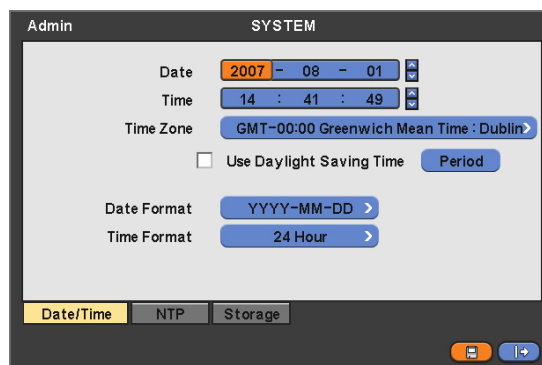**Date / Time****Date**

- This menu will allow user to adjust the settings.
- Please follow the procedure below for time adjustment.
 - ① Click (↔) items (Y, M, D) to change. A designated item will be highlighted in a box (Y: Year, M: Month and D: Date).
 - ② Adjust the number by clicking (↔) ▲, ▼ buttons on the right-hand side.
 - ③ Repeat the same procedure to change Y, M and D.

Time

- This menu will allow user to adjust the current time. The adjustment procedure is same as of Date.

CAUTION


IF ADJUSTED DATE/TIME IS PRIOR TO RECORDED DATA, DATA AFTER NEW DATE/TIME MAY BE ERASED.

CAUTION

ANY CHANGE IN DATE/TIME IS IMMEDIATELY APPLIED ON VIEWING SCREEN (LIVE), BUT THE DATE/TIME WHEN THE RECORDING WAS DONE IS NOT CHANGED. MAKE SURE TO REBOOT DVR AFTER CHANGING THE DATE/TIME. DO NOT FORGET TO EXECUTE SHUTDOWN (SYSTEM>Shutdown) BEFORE REBOOT.

Time Zone

- Please click (←) Time Zone frame to see the list of nations and choose one.
- Click (←) a check box next to Use Daylight Saving Time. When user dwells in a region of DST area, please check it (i.e. ☒).
- If DST is observed, please click (←) Period and the following screen will appear.

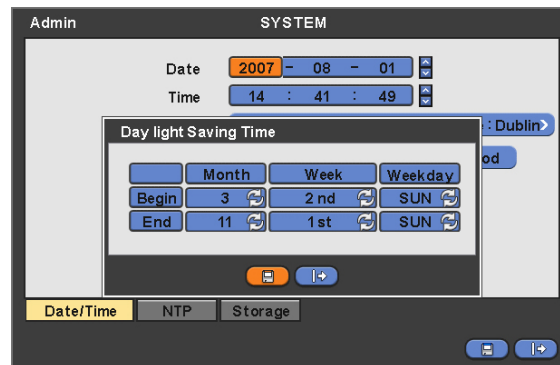

- Adjust the dates of beginning (Begin) and end (End) of DST by 'Month/Week/Weekday'.
- Click (←) the numbers in 'Month/Week/Weekday' for adjustment.
- Choose 'OK' to confirm the setting.

Date Format


- Set date indication format. Please click (←) Date Format frame to select a format from the list.

Time Format

- Set time indication format. Please click (←) Time Format frame to select a format from the list.

NTP

- When user complete Date/Time input, please click (←) NTP and the following screen will appear.

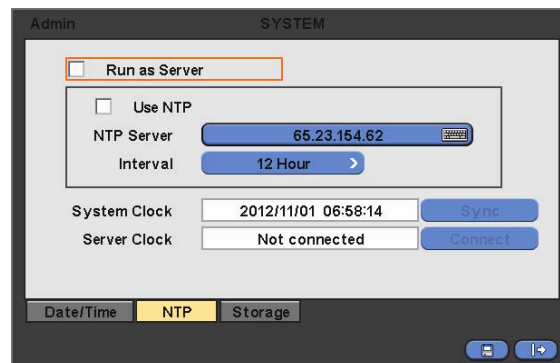

- This menu is for accurate setting of time of day clock in DVR.
- User may check ☒ only one of Run as Server and Use NTP.
 - **Run as Server:** NTP cannot be used in a non-networked environment (Intranet environment). In this case, DVR with Run as Server functions as Time Server.
 - **Use NTP:** Connect to Internet to synchronize DVR clock with Network Time Server's clock.

NTP Server

- Click (↔) keyboard icon in NTP Server frame and the virtual keyboard will appear. Input IP address of NTP server.

NOTE

"Use NTP" function connected to the Time zone, user should set the Time zone correctly to operate the NTP function properly.

NOTE

Currently used NTP is administered by pool.ntp.org and its IP address is 65.23.154.62. However, users are allowed to use IP address of any NTP site.

Interval

- Set clock-update-interval from NTP Server. Normally, user can adjust 1 hour up to 24 hours.

System Clock


- Display DVR clock.

Server Clock

- Display NTP Server's clock if Internet is connected to Server Clock. If not displaying, please click (↔) Connect button.
- When Server Clock is displayed, please click (↔) Sync button to synchronize NTP Server's clock with DVR clock.
- Choose 'OK' to confirm the clock synchronization.

Storage

- When user completes NTP input, please click (↔) save and the following screen will appear.
- Set S.M.A.R.T. (Self-Monitoring Analysis and Reporting Technology) function for HDD format and auto-display of HDD information. DVD-RW is not shown here.

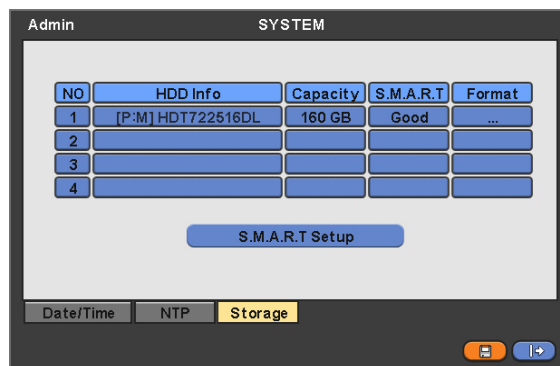

- Four rows will show as follows:
 - 1: SATA 1 Port

Format

- User must format when:
 - install new HDD
 - add another HDD
 - replace HDD
 - move HDD (change installation port)
 - remove HDD
- Click (↔) Add/Remove frame in Format column and choose 'OK' on the dialogue box to start formatting.
- Following format, DVR will auto-reboot. If there are more than 2 HDDs, please format each of HDDs. DVR will auto-reboot when all the HDDs are formatted.
- If the frame changes to '---' after reboot, it means formatting has been properly done.

CAUTION

EXECUTE REMOVE PROCEDURE EVEN WHEN USER REMOVE PREVIOUSLY INSTALLED HDD. THE REMOVE PROCEDURE IS THE SAME AS THE FORMAT PROCEDURE DESCRIBED ABOVE.

S.M.A.R.T

- Click the frame on S.M.A.R.T column and temperature and HDD damage will show.

S.M.A.R.T Setup

- Please click (←) S.M.A.R.T Setup and the following screen will appear.

S.M.A.R.T Setup Admin

☐ Use On ☐ Beep ☐ Blink Message

Inspection Time 03:00 >

Check By Week >

Last Check Time Not Checked

☐ Alarm-Out

Temperature 70 °C

HDD Damage 1 %

☐ Notification Register Email >

OK

- Check the square box ☒ next to Use On. Through S.M.A.R.T function, make alarm message, indicating HDD damage, will show.
- Check ☒ Beep; it will give the alarm sound, indicating HDD damage, as the SMART setup.
- Check ☒ Blink Message, the alarm message will blink on the OSD, as the SMART setup.
- If “Use on” box is unchecked, Beep, Blink Message will be unchecked automatically. Only when “Use on” is checked ☒, user can set Beep, Blink Message function.
- Click (←) Inspection Time frame to set inspection time.
- Click Check by frame to select inspection interval.
- Last Check Time: show the time of the last inspection.
- Check ☒ Alarm out : user can set the alarm out, when S.M.A.R.T function detects Abnormal symptoms from HDD.
- Duration of alarm out operating time can adjust on DEVICES>Alarm Out setup section (please refer 4.4.5).
- Clicking (←) ▲, ▼ direction buttons on the right-hand of alarm-out frame to select the device for alarm out.
- Click (←) ▲, ▼ direction buttons on the right-hand side of Temperature frame to adjust to maximum temperature for the HDD used in DVR. In general, it is 55°C.
- Click (←) ▲, ▼ direction buttons on the right-hand side of HDD Damage frame to set the permissible level of HDD damage (%). HDD is a very crucial element for DVR recording, so set the permissible level within 1% to 2% to assure maximum safety.
 - While pressing (+) or (-) button on the rightmost side of Temperature or HDD Damage item, a target value increases or decreases by 10 units.
- Check ☒ Notification, user can send the email notification to registered email address, when S.M.A.R.T function detects Abnormal symptoms from HDD.
- Choose ‘OK’ to confirm the setting.

4.2.3 Account

- Please click (←) SYSTEM>Account and the following screen will appear.


Account SYSTEM

Group	User
1 Admin ...	1 admin ...
2	2
3	3
4	4
5	5
6	6
7	7
8	8

New Group Login Settings New User

New Group

- Please click (↵) New Group and the following screen will appear.

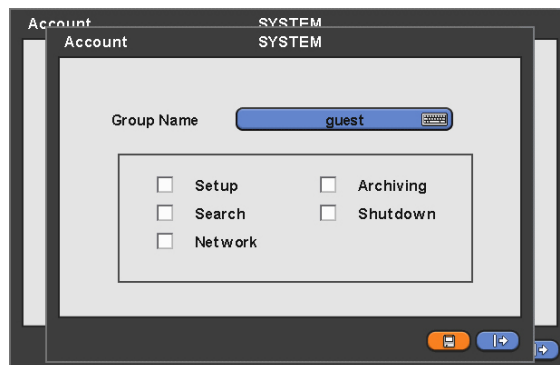

- Click (↵) keyboard icon on the right-hand side of Group Name frame. Then, the virtual keyboard will show. Please click (↵) desired characters (up to 8 characteristics) on the virtual keyboard.
- Do provisioning for Group Name by selectively checking ☒ some of the following items (Setup, Search, Network, Archiving and Shut Down).
- Choose 'OK' to confirm the setting.


Login Setting

- Please click (↵) Login Settings and the following screen will appear.
- Selectively enable password protection for important operations (Setup, Search, Network, Archiving and Shut Down).
- Please check ☒ the operations that wish to enable password protection.

CAUTION

USER WILL NOT BE ASKED TO ENTER YOUR PASSWORD FOR OPERATION(S) WHERE PASSWORD PROTECTION IS NOT ENABLED.

- Choose 'OK' to confirm the setting.

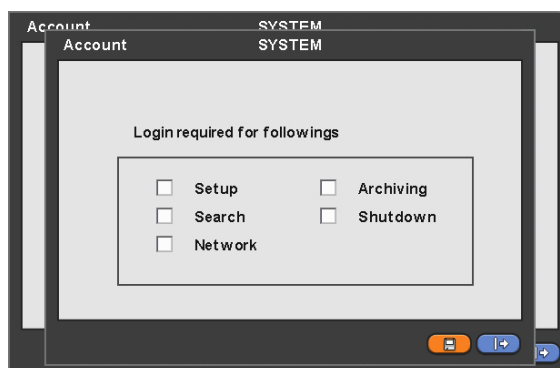

New User

- Please click (↵) New User and the following screen will appear.
- Click (↵) the keyboard icon on the right-hand side of User Name frame and the virtual keyboard will appear. Click desired characteristics (up to 8 characteristics) on the virtual keyboard.
- Input Password and Confirm.

Account SYSTEM

User Name: peter

Password: ****

Confirm: ****

Select Group: Admin

Buttons: OK, Cancel, Add

- Choose 'OK' to confirm the setting. Then, lists of Group and User will show as follows.

Account SYSTEM

Group		User	
1	Admin ...	1	admin ...
2	Guest ...	2	peter ...
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	

Buttons: New Group, Login Settings, New User, OK, Cancel, Add

- Click (↩) to delete the set Group or User.
- User may create up to 8 Groups and 8 Users.
- Choose 'OK' to confirm the setting.

Password Resetting

- Click ID on User column. The following screen will appear.

Account SYSTEM


User Name: admin

Password: ****

Confirm: ****


Buttons: OK, Cancel, Add

Second Screenshot: A numeric keypad overlay is shown over the password fields, with an OK button below it.

- This is a screen for password resetting.
- Input password by clicking the keyboard icon on the right-hand side of the frame.
- Use  key if wish to erase password on keyboard.

4.2.4 System Log

- Please click (←) SYSTEM>System Log and the following screen will appear.

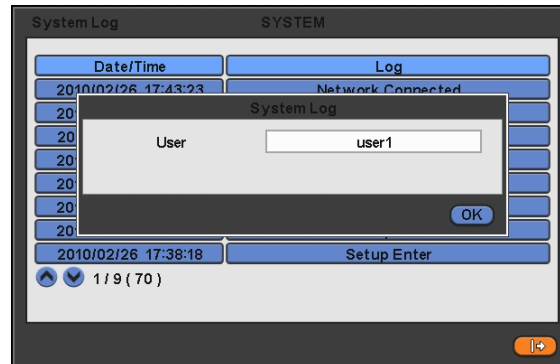

- System Log displays diverse events as below events by specifying the user account who actually has accessed the DVR.
 - Setup (Menu) Enter/Exit
 - Playback Mode Enter/Exit
 - Network Access Enter/Exit
 - Archive Success/Fail
 - System Start/shut down
 - S.M.A.R.T. Check
 - NTP Sync/ Server Success/Fail
 - Send E-mail Success/Fail
 - HDD Format Success/Fail
 - Data clear Success/Fail
 - USB Upgrade Success/Fail
 - DVR Setup Change by Remote
 - Before/After Time Adjust
- System Log removal procedure is as follows:
 - Execute Clear All Data in SYSTEM>Information>Record and choose 'OK' on the popup dialogue box. Please note that all normal recorded video data are deleted from database.
 - Press Factory Reset Switch on the back panel. Please note that the entire menu setup is also defaulted.

4.2.5 Exit

- Please click (←) SYSTEM>Exit and choose 'OK' on the popup dialogue box to exit from the setting.

CAUTION

ANY CHANGES MADE IN SETUP ARE APPLIED AFTER EXIT.

4.2.6 Shutdown

- Shutdown is a function to help user safely turn the DVR off. Please use the proper shut down procedure to avoid damaging to our DVR system. Do not remove the power during shut down.


CAUTION

DO NOT TURN DVR OFF WITHOUT USING THE PROPER SHUT DOWN PROCEDURE. OTHERWISE, IT MAY CAUSE DAMAGE TO DVR. ALWAYS REMOVE THE POWER AFTER SHUT DOWN.

- Click (←) SYSTEM>Shutdown and then choose 'OK' on the dialogue box to confirm.
- When user select Shutdown menu, the OSD menu on the screen disappears.
- Reboot the DVR after Shutdown. Turn off the DVR and wait for 5 seconds before restart.


4.3 DISPLAY

- Please click (⇐) DISPLAY and the following screen will appear.

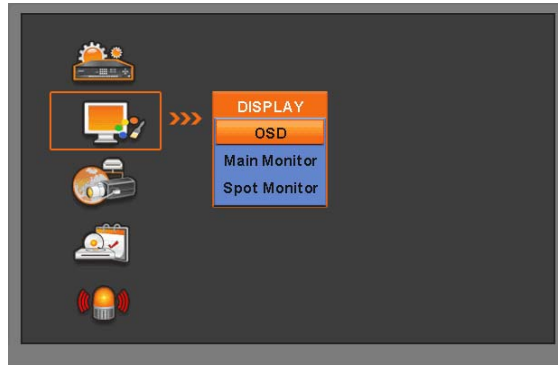

4.3.1 OSD

- Please click (⇐) DISPLAY>OSD and the following screen will appear.

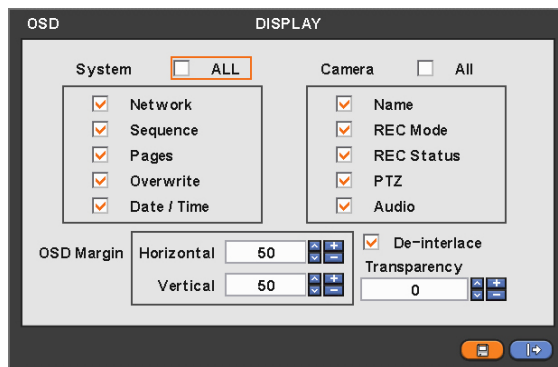

- The OSD menu will allow user to configure full features (i.e., on/off every letter and icon) displayed on the screen.
- Letters and icons are divided under System and Camera categories. If click (⇐) 'All', all items are on/off at once.

OSD Margin

- The OSD Margin menu will allow user to adjust the position of OSD (letters) on the monitor. Use it when some of letters are dropped out and invisible on the monitor.
- Adjust Horizontal to change margin between both ends of the monitor on horizontal side and OSD. Margin range is between **0 and 50**, with a larger number representing greater margin.
- Adjust Vertical to change margin between both ends of the monitor on vert 130.
- Vertical side and OSD Margin range is between **0 and 50**, with a larger number representing greater margin.
- While pressing (+) or (-) button, a target value increases or decreases by 10 units.

De-Interlace


- This function changes playback display into Progressive Scan or Interlace Scan. Check (☑) De-Interlace, then frame will display as the Progressive Scan and shows the better picture quality.

Transparency

- The Transparency menu will allow user to alpha-blending of OSD menu on the monitor. Transparency is the quality that an object or substance has when user can see through it.
- Transparency range is between **0 and 100**, with a larger number representing can see through it. (default 0)
- While pressing (+) or (-) button, a target value increases or decreases by 10 units.

4.3.2 Main Monitor

- Please click (←) DISPLAY>Main Monitor and the following screen will appear.

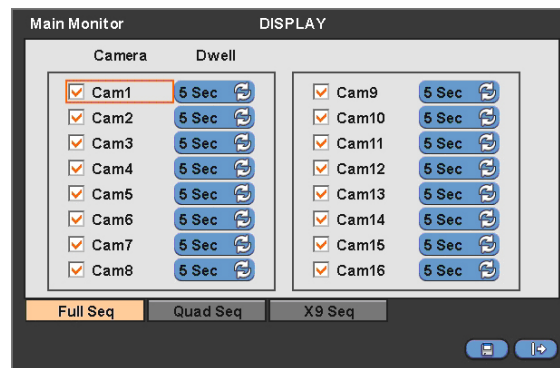

- The Main Monitor menu will allow user to adjust channel sequencing interval of Main monitor.

Full Seq

- Adjust interval for 'Full screen sequencing'.
- Check ☒ check box next to the camera that wish to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.

Quad Seq


- Use only with 8 / 16 channel DVRs.
- Adjust interval for 'X4 Split Screen sequencing'.
- Check ☒ check box next to the camera that wish to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.
- '4 Split Screen sequencing' is disabled in the following modes.
 - **8 channel DVR:** 3x3 Mode
 - **16 channel DVR:** 4x4 Mode

X9 Seq

- Use only with 16 channel DVR.
- Adjust interval for 'X9 Split Screen sequencing'.
- Check ☒ check box next to the camera that wish to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.
- '9 Split Screen sequencing' is disabled in 4X4 Mode.

4.3.3 Spot Monitor

- Please click (←) DISPLAY>Spot Monitor and the following screen will appear.

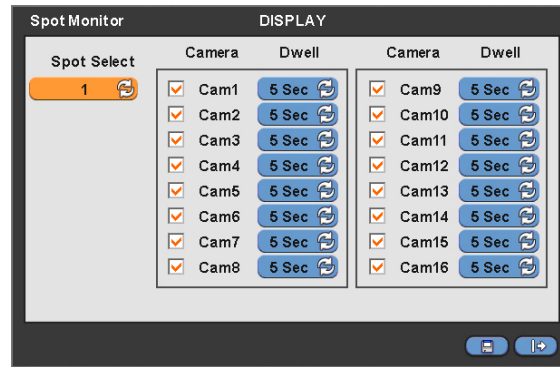


- This menu will allow adjust interval of channel sequencing of Spot monitor.
- Click (←) Spot Select to choose Spot monitor to be set up.
- Check (check box next to the camera that wish to include in sequencing. Any camera with unchecked check box will be excluded from channel sequencing.
- Adjust the rotation interval of camera by clicking Dwell column. The rotation interval changes to **3>5>10>15>30>60 seconds** by each press.

4.3.4 Spot Monitor Control on Display Mode

- Every click of the “SPOT” menu item on mouse right click menu will indicate “SP”, “SP1” on the right bottom of main monitor.
 - SP mode: Sequential display is activated as configured on spot monitor Setup menu.
 - SP1 mode: Displayed channel on Spot monitor 1 can be changed by pressing channel button. Sequence stops at “SP1” mode.

4.4 DEVICES

- Please click (←) DEVICES and the following screen will appear.

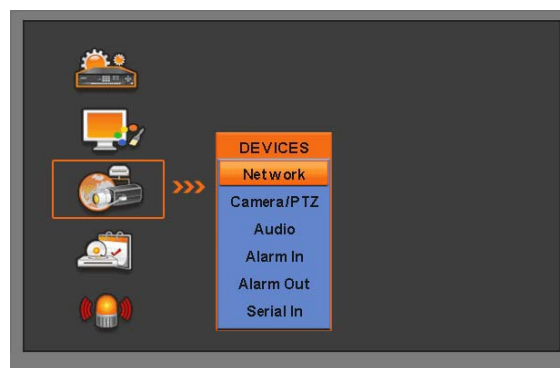

4.4.1 Network

- Please click (←) DEVICES>Network and the following screen will show.

The screenshot shows the 'Network' configuration window with the 'DEVICES' tab selected. Under 'Network Type', 'STATIC' is chosen. Below it, the following fields are filled: IP Address (192.168.10.97), Subnet Mask (255.255.255.0), Gateway (192.168.10.1), and DNS Server (192.168.10.1). At the bottom, there are tabs for 'LAN' (selected), 'DDNS', 'Port', and 'Notification'. A 'Run' button is visible at the bottom right.

LAN

Network Type

- Please click (↔) Network Type. Every time click (↔), it changes to Static (fixed IP) and DHCP (floating IP).
- In Static, user must manually set the static IP address for use.
 - Set IP Address, Subnet Mask and Gateway. Please ask your network administrator for more details.
 - To input address, please click (↔) and execute the keyboard icon on the right-hand side of each frame.

The screenshot shows a numeric keypad for entering an IP address. The display at the top shows '222.222.222.10'. The keypad includes digits 1-9, 0, a decimal point, and a back arrow. Below the keypad are 'OK' and '↔' buttons.

- In DHCP, IP Address, Subnet Mask, Gateway and DNS Server will have input automatically.

DNS Server

- When user set Network Type to DHCP, DNS server will be inputted automatically.
- When user set Network Type to Static, please click (↔) the keyboard icon on the right-hand side of DNS Server frame and manually input the address.

CAUTION

NOTE THAT DNS SERVER ADDRESS IS IP ADDRESS OF YOUR COMMUNICATIONS COMPANY NAME SERVER PROVIDING INTERNET SERVICE. IT IS NOT THE IP ADDRESS OF DDNS SERVICE SITE.

DDNS

- Please click (↔) DDNS and the following screen will appear.

The screenshot shows the 'DDNS' configuration window. At the top, there are checkboxes for 'Dvrdomain.com' (unchecked) and '3rd party' (checked). Below this, the following fields are filled: DDNS Server (dvrdomain.com), Port (95), MAC Address (empty), Domain Name (ddns04-4f~c9.dvrdomain.com), ID (empty), and Password (empty). A 'Run ddns service' button is at the bottom. The bottom navigation bar shows 'LAN', 'DDNS' (selected), 'Port', and 'Notification' tabs. A 'Run' button is at the bottom right.

- 'Floating IP system', although being predominantly used over Internet, is very inconvenient for users because its address varies every time when user access. The best alternative is DDNS (Dynamic Domain Naming System) which uses name (domain name) instead of IP address (numbers). DDNS automatically recognizes ever changing, floating IP addresses, so it will allow easy Internet access.
- Dvrdomain.com
 - Check ☒ a checkbox of Dvrdomain.com to use Dvrdomain.com Server.
 - As for DDNS Server, Dvrdomain.com will be showing as default.
 - As for Port, 95 will be shown as default. If '95' is unable, please consult with a product distributor.

- When user press Get Domain Name button, Domain Name and MAC Address value will automatically display after 10 seconds.
- Choose 'OK' to confirm the setting.

- 3rd Party
 - Check ☒ a checkbox of 3rd Party to use dyndns.org or no-ip.com Server.
 - As for DDNS Server, dyndns.org will be showing as default. No-ip.com can be selected by clicking the arrow.


- As for Domain Name, user has to input the Domain Name given from the selected DDNS Server.
- As for ID and Pass word, use the user ID and Password to log in to the selected DDNS Server.
- Click "Run ddns service" to start mapping from DVR to DDNS Server.
- Choose 'OK' to confirm the setting.

NOTE

User must join 'dyndns.org' or 'no-ip.com' prior to using it as DDNS server. Please check corresponding website for more information.

Port

- Please click (↔) Port and the following screen will appear.

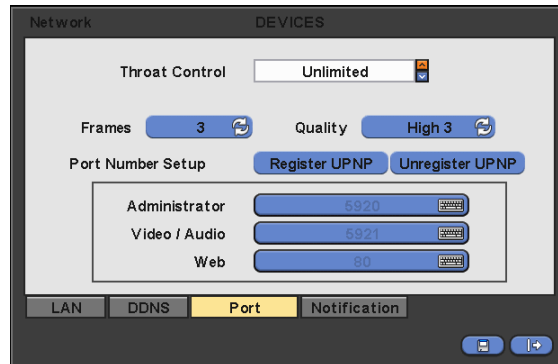

- Network Throat is for setting an average transfer speed.
- Please choose the suitable speed according to the users' network environment.
- There are total of 14 different network throat controls users may choose. (bps: bit per second) 26 kbps, 128 kbps, 256 kbps, 512 kbps, 1 Mbps, 2 Mbps, 4 Mbps, 8 Mbps, 10 Mbps, 20 Mbps, 40 Mbps, 80 Mbps, 100 Mbps, Unlimited(default).
 - Ethernet support Max. 1000Mbps.
- Network video transmission speed and quality can be configured by pressing “Frames” and “Quality” buttons as follows.
 - Frames 1, 2, 3, 4, 5, 7, 15 frames for NTSC (1, 2, 3, 4, 5, 6, 12.5 frames for PAL)
 - Quality : Std. 1, Std. 2, Std. 3, Std. 4 (standard), High 1, High 2, High 3, Super 1, Super 2, Super 3
- The Port Number Setup menu will allow users to set Administrator and Port Number for Video/Audio and Web Port.
- The Port Number Setup menu has two selections of “Register UPNP” or “Unregister UPNP”.
- Click (↔) “Register UPNP” for automatic port forwarding.
- Click (↔) “Unregister UPNP” to do port forwarding manually.
- For Port Number Setup, please get an approval of the network administrator in connection with CMS program.
- Port number
 - **Administrator:** 5000~65535
 - **Video / Audio:** 5000~65535
 - **Web:** 1~65535
- Choose 'OK' to confirm the setting.

CAUTION

IT IS NOT ABLE TO CHANGE Port Number DURING CMS ACCESS TO DVR.

CAUTION

PLEASE CHECK THE ROUTER FOR UPNP SUPPORTABILITY BEFORE START USING THE UPNP FEATURE.

CAUTION

CHANGES BEING MADE ARE APPLIED AFTER COMPLETE SETUP TO EXIT.

CAUTION

ONCE PORT NUMBERS ARE CHANGED, IT MUST BE CHANGED THE PORT NUMBERS OF CMS (Central Monitoring Station) PROGRAM AS WELL.

Notification

- Please click (↔) Notification and the following screen will appear.

Network DEVICES

Add E-Mail

No	E-Mail Address
1	
2	
3	
4	
5	

1 / 1

SMTP Server

Sender ID

Password

☒ Use dvrdomain.com

SMTP Port 25

Attachment None

Duration 1 Sec

LAN DDNS Port Notification

- The Notification menu allows to send users the message of the Event occurred in DVR via E-Mail.
- Click (⌨) the keyboard icon on the right-hand side of Add E-Mail frame and the virtual keyboard will appear. Please register E-Mail address. E-Mail address should contain @.
- Click (⌨) the keyboard icon on the right-hand side of SMTP Server frame and the virtual keyboard will appear. Please register the SMTP Server. SMTP server can be set up by the users to have own SMTP server on their site.
- Click (⌨) the keyboard icon on the right-hand side of Sender ID frame and the virtual keyboard will appear. Please register an ID to the sender mail server (e.g., tony123).
- If users want to use dvrdomain.com which is offered by manufacturer instead of own SMTP server, please click on the check box (use dvrdomain.com).
- Default number of SMPT port is 25. Please note that some particular areas have restriction on the default port. If so, port number 2525 and 587 can be replaceable.
- When an event occurs, users can send an email to a designated mail address by clicking attach button and selecting data to be transmitted. Users may select one of JPEG, VIDEO CLIP and None. In case of transmitting VIDEO CLIP data, set the duration of time for recoded data in duration menu. (e.g., 1 sec, 3 sec, 5 sec).

CAUTION

ACCORDING TO THE VARIOUA LOCAL CONDITIONS; SSL EMAIL SERVERS MAY NOT WORK CORRECTLY WITH THISFUNCTION. IF SO PLEASE INACTIVATE THE SSL FEATURE IN THE SERVER SETUP. NOTE THAT SOME SERVER MAY NOT HAVE THIS INACTIVATE FEATURE

CAUTION

DEPENDING ON THE VARIOUS LOCAL CONDITIONS, SOME e-MAIL SERVERES MAY NOT WORK PROPERLY WITH THIS FUNCTION.

4.4.2 Camera / PTZ

- Please click (⌨) DEVICES>Camera/PTZ and the following screen will appear.

Camera / PTZ DEVICES

No	Title	Cvt.	PTZ	Set.	ID
<input checked="" type="checkbox"/> 1	CAM1	<input type="checkbox"/>	PELCO-D	...	1
<input checked="" type="checkbox"/> 2	CAM2	<input type="checkbox"/>	PELCO-D	...	2
<input checked="" type="checkbox"/> 3	CAM3	<input type="checkbox"/>	PELCO-D	...	3
<input checked="" type="checkbox"/> 4	CAM4	<input type="checkbox"/>	PELCO-D	...	4
<input checked="" type="checkbox"/> 5	CAM5	<input type="checkbox"/>	PELCO-D	...	5
<input checked="" type="checkbox"/> 6	CAM6	<input type="checkbox"/>	PELCO-D	...	6
<input checked="" type="checkbox"/> 7	CAM7	<input type="checkbox"/>	PELCO-D	...	7
<input checked="" type="checkbox"/> 8	CAM8	<input type="checkbox"/>	PELCO-D	...	8


1 / 2

- Click (⌨) the keyboard icon on the right-hand side of each frame on Title column and the virtual keyboard will appear. Then, register titles of cameras.
- If a check box is checked ☒ on No column, a video of the corresponding camera is recorded and displayed on the monitor. However, if user does not check the checkbox, both recording and monitor display stop. Then, DVR picture, instead of a recorded video, will be displayed on the monitor.

CAUTION

WHEN YOU EXCLUDE A CORRESPONDING CAMERA VIDEO FROM RECORDING AND MONITOR DISPLAY (CHECK A CHECK BOX ☐) , MAKE SURE CHANNELS OF LARGE NUMBERS ARE EXCLUDED FIRST.

- If a check box is checked ☒ on Covert column, a video is recorded but is not displayed on the monitor.
- Click (↔) each frame on PTZ column to select PTZ protocols connected to a corresponding camera.
- Click (↔) each frame on Set to set PTZ Settings connected to a corresponding camera.

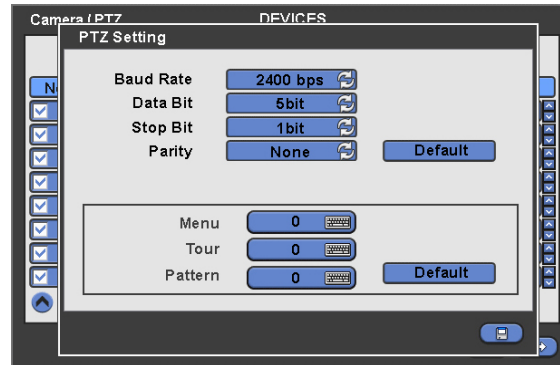

- If users click (**Default**), proper number of selected PTZ will appear automatically. Please choose 'OK' to confirm the setting.
- Menu, Tour and Pattern help user to use OSD function of PTZ camera.
 - PTZ camera itself supports OSD menu, use the setup value to more easily enter and use the OSD menu even in DVR.
 - If OSD enter command is 95 + PSET for example, designate 95 for Menu item,
 - If shortcut key to use Tour function is 71 ~79 + PSET, designate 70 for Tour item and
 - If shortcut key to use Pattern function is 81 ~ 89 + PSET, designate 80 for Pattern item.
 - The setting information herein is used for PAN/TILT control in 5.1.5 (to be described).
 - If click Default, basic setup values are given (i.e., Menu: 95, Tour: 70, Pattern: 80).
 - For further details on setting, please refer to the PTZ camera manual.
- Click (↔) ▲, ▼ direction buttons on the right-hand side of the ID column to set ID number (i.e., 0 ~ 9999) of each PTZ.
- While pressing (+) or (-) button, ID increases or decreases by 10 units.
- Choose 'OK' to confirm the setting.

4.4.3 Audio

- Please click (↔) DEVICES>Audio and the following screen will appear.



- The Audio menu will allow user to choose whether to record Audio.
- When a check box is marked ☒ on No column, corresponding audio and video are recorded. However, if the check box is not marked, audio is not recorded.
- If users check on bind to cam, then the audio and video of same channel will come out. If not, the audio of unchecked channel will not come out. (The default audio channel is No. 1)
- Choose 'OK' to confirm the setting.

4.4.4 Alarm In

- Please click (↵) DEVICES>Alarm In and the following screen will appear.

No	Title	Type
<input checked="" type="checkbox"/> 1	Gate-1	NC
<input checked="" type="checkbox"/> 2	Front	NC

- The Alarm In menu will allow user to give title and to select the type of Alarm input.
- Click (↵) the keyboard icon on the right-hand side of each frame on Title column and the virtual keyboard will appear. Then, please register the title of Alarm input.
- When a check box is marked ☒ on No column, a corresponding Alarm starts operating. However, if user does not check the check box, the operation stops.
- Click (↵) each frame on Type column to select type of a corresponding Alarm input.
 - **NO**: contact is normally open (Normally open)
 - **NC**: contact is normally closed (Normally closed)
- User may change the type of all Alarm input at a time by clicking the Type box on the menu tab.
- Choose 'OK' to confirm setting.

4.4.5 Alarm Out

- Please click (↵) DEVICES>Alarm Out and the following screen will appear.
- The Alarm Out menu will allow user to give title and to select the type and duration of Alarm output.

No	Title	Type	Duration
<input checked="" type="checkbox"/> 1	Gate-1	NC	5 Sec

- Click (↵) the keyboard icon on the right-hand side of each frame on Title column and the virtual keyboard will appear. Then, please register the title of Alarm output.
- When a check box is marked ☒ on No column, a corresponding Alarm output starts operating. However, if user does not check the check box, the operation stops.
- Click (↵) each frame on Type column to select type of a corresponding Alarm output.
 - **NO**: contact is normally open (Normally open)
 - **NC**: contact is normally closed (Normally closed)
- User may change the type and duration of all Alarm output at a time by clicking the Type and Duration box on the menu tab.
- Choose 'OK' to confirm setting.


4.4.6 Serial In

NOTE

Please refer to "14 Serial In".


4.5 RECORD

- Please click (↔) RECORD and the following screen will appear.

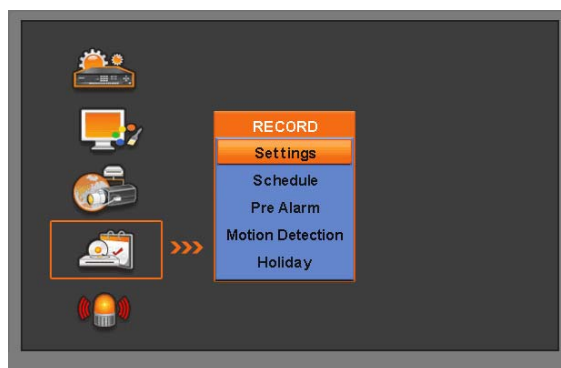

4.5.1 Setting

- Please click (↔) RECORD>Settings and the following screen will appear.

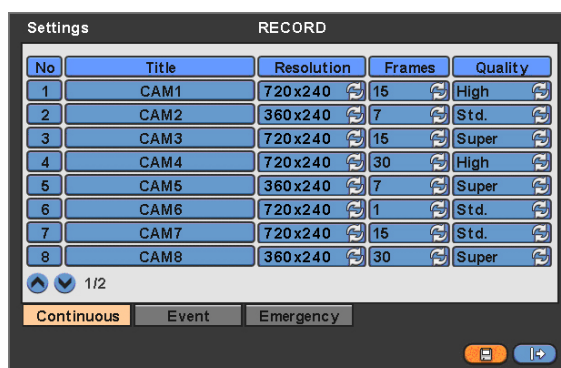

- There are three kinds of recording mode.
 - **Continuous:** record continuously.
 - **Event:** record only when Sensor or Motion calls.
 - **Emergency:** record when press **EMERGENCY** key.

Continuous

- The Continuous menu will allow user to set recording mode.
- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. User cannot change camera titles here.
- Click (↔) each frame on Resolution column to select recording resolution of a corresponding camera. User may select one of **720x480, 720x240 and 360x240. (NTSC)**
- Click (↔) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)

- Click (↔) each frame on Quality column to select recording quality of a corresponding camera. User may select one of **Super, High and Std.**
- User may change the setting values of Resolution, Frames, Quality at a time by clicking the menu tab.
- Choose 'OK' to confirm the setting.

Event

- Please click (↔) Event and the following screen will appear.



- The Event menu will allow user to set Event videos.
- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. User cannot change camera titles here.
- Click (↔) each frame on Resolution column to select recording resolution of a corresponding camera. User may select one of **720x480, 720x240 and 360x240. (NTSC)**
- Click (↔) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)

- Click (↔) each frame on Quality column to select recording quality of a corresponding camera. User may select one of **Super, High and Std.**
- Click (↔) each frame on Duration column to select recording duration (i.e., **1 second ~3 hours**) of a corresponding camera.
- User may change the setting values of Resolution, Frames, Quality and Duration at a time by clicking the menu tab.
- Choose 'OK' to confirm the setting.

Emergency

- Please click (↔) Emergency and the following screen will appear Emergency.
- The Emergency menu will allow user to set Emergency videos.
- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. User may not change camera titles here.




- Click (↔) each frame on Resolution column to select recording resolution of a corresponding camera. User may select one of **720x480, 720x240 and 360x240. (NTSC)**
- Click (↔) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)







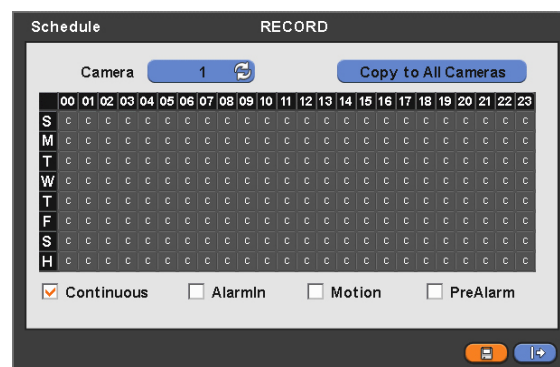



- Click (↔) each frame on Quality column to select recording quality of a corresponding camera. User may select one of **Super, High and Std.**
- Click (↔) each frame on Duration column to select recording duration (i.e., **1 second ~3 hours**) of a corresponding camera.
- User may change the setting values of Resolution, Frames, Quality and Duration at a time by clicking the menu tab.
- Choose 'OK' to confirm the setting.

4.5.2 Schedule

- Please click (↔) RECORD>Schedule.
- Each weekday is composed of 24 'Time blocks'. Each block represent 1 hour.
- Click (↔) Camera frame to select Camera No. 1.
- Please set the recording mode as follows:
 - ① Mark a check box the desired recording mode in the schedule (i.e., Continuous, Alarm, Motion and PreAlarm)). If user wants to stop recording, please clear all check boxes.
 - ② Click block, row, column or all (square box) to register desired recording mode.
 - Click (↔) a block and only the block will be registered.
 - Click (↔) a row (S~H) and the entire row will be registered.
 - Click (↔) a column (00~23) and the entire column will be registered.
 - Click (↔) a square box (top-left side between 'S' and '00') and all the rows/columns will be registered.



- Repeat the procedure for Camera Nos. 2 to 16. If user wants every camera to have the same mode, please click (↔) Copy to All Camera.
- Below lists symbols of the respective recording modes.

-  Continuous
-  Alarm In
-  Alarm In / Continuous
-  Alarm In / PreAlarm
-  Motion
-  Motion / Continuous
-  Motion / PreAlarm
-  Motion / Alarm In
-  Motion / Alarm In / Continuous
-  Motion / Alarm In / PreAlarm


- Choose 'OK' to confirm the setting.

NOTE

Holiday (H) registration is done with a separate menu.

4.5.3 Pre Alarm

- Please (←) RECORD>Pre Alarm and the following will appear.
- Pre Alarm is effectively used when user selected recording mode by Alarm or Motion.
- The Pre Alarm will allow user to check, during playback, the previously recorded video before the record start time.

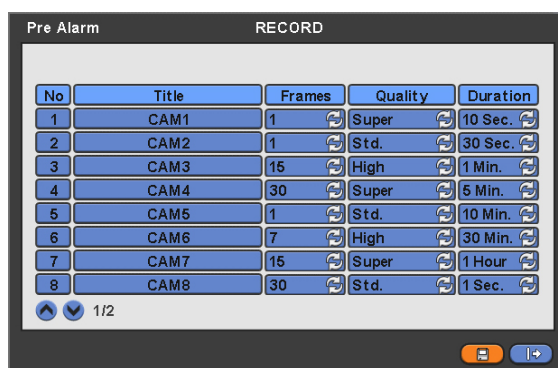

- Each frame on Title column shows camera title registered in DEVICES>Camera/PTZ. User cannot change camera titles here.
- Click (←) each frame on Resolution column to select recording resolution of a corresponding camera. User may select one of **360x240, 720x240 and 720x480. (NTSC)**
- Click (←) each frame on Frames column to select recording rate of a corresponding camera. Recording rate varies by camera. Below lists the maximum recording rate of each camera.

NTSC(PAL)	360x240	720x240	720x480
4 Channel DVR	120(100)	120(100)	60(50)
8 Channel DVR	240(200)	120(100)	60(50)
16 Channel DVR	480(400)	240(200)	120(100)

- Click (←) each frame on Quality column to select recording quality of a corresponding camera. User may select one of **Super, High and Std.**
- Click (←) each frame on Duration column to select recording duration (i.e., **1 second ~ 3 hours**) of a corresponding camera.
- Choose 'OK' to confirm the setting.

4.5.4 Motion Detection


- Please click (↵) RECORD>Motion Detection and the following screen will appear.



- The Motion Detection menu will allow user to set Motion detection alarm.
- Press **SETUP** key (or right mouse button) and the SETUP menu will appear.
- SETUP menu descriptions.
 - **Camera:** select camera for setup.
 - **Sensitivity:** select sensitivity (Low, Normal and High)
 - **Reverse Vert:** activate the entire column at the cursor's position.
 - **Reverse Horz:** activate the entire row at the cursor's position.
 - **Select All:** active all blocks.
 - **Deselect All:** deactivate all blocks.
 - **Copy to All Cameras:** The present channel setup applies to all other cameras. Only when click save button, the changed setup can be saved.
 - **Save:** save the new settings and go back to previous menu (page).
 - **Exit:** ignore the new settings and go back to previous menu (page).
 - **Cancel:** cancel Motion Setup menu.
- Choose 'OK' to confirm the setting.

4.5.5 Holiday

- Please click (↵) RECORD>Holiday and the following screen will appear.

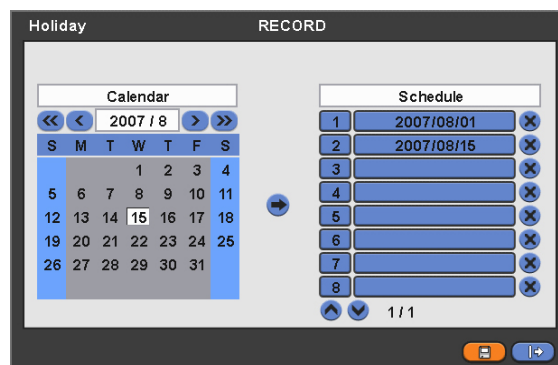


- The Holiday menu will allow user to register holidays. Please follow the registration procedure below.
 - ① Use arrow buttons in the Month Calendar to select Year and Month of holiday to be registered.
 - ►►: search subsequent 'Year'
 - ◀◀: search previous 'Year'
 - ►: search subsequent 'Month'
 - ◀: search previous 'Month'
 - ② Click (↵) on date user need to register as holiday.
 - ③ Click (↵) ADD button and the date just clicked on will be copied to the Schedule frame for registration.

- ④ If wish to cancel the registration of a certain holiday, please click ☐ button next to the Schedule frame.
- Since holidays may vary every year, we recommend user to update on a regular basis.
- Choose 'OK' to confirm the setting.

4.6 LINK


- Please click (↔) LINK and the following screen will appear.

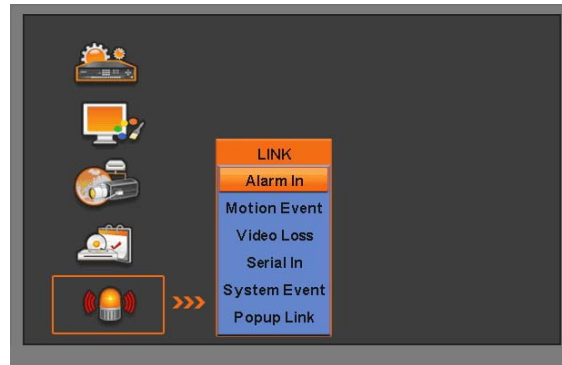

- The LINK menu will allow user to set recording modes of all kinds of alarms (Sensor, Motion Event, Video loss, System Event, etc.), alarm output, e-mail notification and the like.

4.6.1 Alarm In


- Please click (↔) LINK>Alarm In and the following screen will appear.
- Select cameras for recording while the motion sensor is in operation and alarm outputs and set up E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
 - ① Click (↔) Alarm In frame and select Alarm In 1.
 - ② Select cameras for recording when Alarm In 1 is on. Please check ☒ a check box under Link Camera. More than two cameras can be set.
 - ③ Select alarm outputs to be worked when Alarm In 1 is on. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
 - ④ Select E-mail addresses for notification when Alarm In 1 is on. Please check ☒ a check box under Link Notification. More than two E-mail addresses can be set.
 - ⑤ Repeat the above procedure for Alarm In 2.

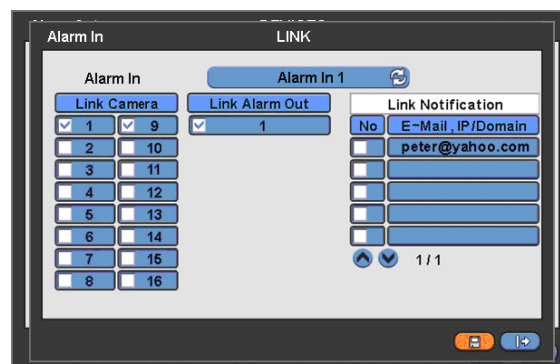

- Choose 'OK' to confirm the setting.

4.6.2 Motion Event


- Please click (↔) LINK>Motion Event and the following screen will appear.

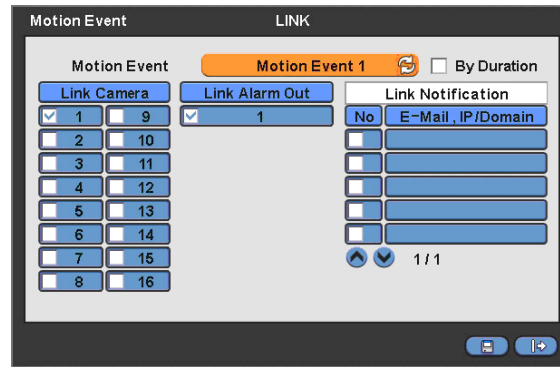

- Select cameras for recording while the motion sensor is in operation and alarm outputs and set up E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
 - ① Click (↔) Motion Event frame and select Motion Event 1.
 - ② Select cameras for recording when Motion Event 1 is on. Please check ☒ a check box under Link Camera. More than two cameras can be set.
 - ③ Select alarm outputs to be worked when Motion Event 1 is on. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
 - ④ Select E-mail addresses for notification when Motion Event 1 is on. Please check ☒ a check box under Link Notification. More than two E-mail addresses can be set.
 - ⑤ Repeat the above procedure for Motion Event 2~ Motion Event 16.
- Click(↔)By Duration box to set up the recording duration and prevent recording caused by event.
- The duration time can be controlled by previous setting mode: RECORD>Settings>Event
- Choose 'OK' to confirm the setting.

4.6.3 Video Loss

- Please click (↔) LINK>Video Loss and the following screen will appear.

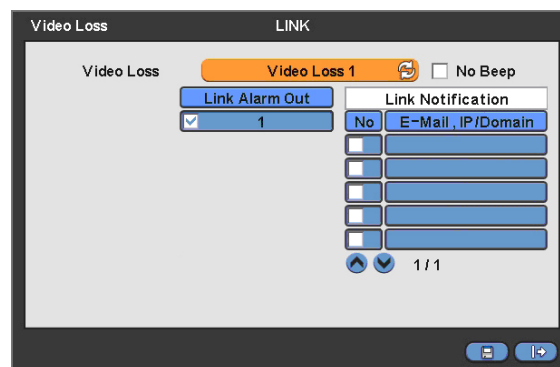


- Select cameras for recording while the motion sensor is in operation and alarm outputs and set up E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
 - ① Click (↔) Video Loss frame and select Video Loss 1.
 - ② Select cameras for recording when Video Loss 1 is on. Please check ☒ a check box under Link Camera. More than two cameras can be set.
 - ③ Select alarm outputs to be worked when Video Loss 1 is on. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
 - ④ Select E-mail addresses for notification when Video Loss 1 is on. Please check ☒ a check box under Link Notification.

More than two E-mail addresses can be set.

- ⑤ Repeat the above procedure for Video Loss 2~ Video Loss 16.
- Click No Beep ☒ to deactivate alert sounds from video loss. Apply to all channel.
- Choose 'OK' to confirm the setting.

4.6.4 System Event


- Please click (↔) LINK>System Event and the following screen will appear.

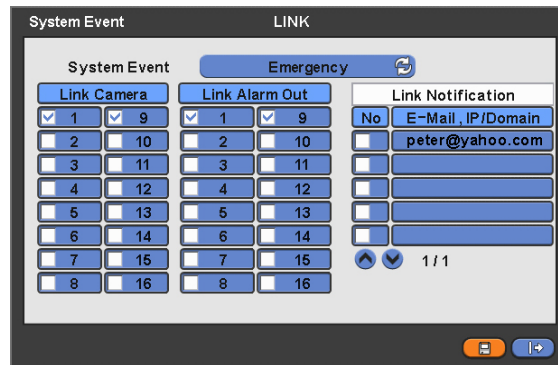

- Select recording cameras and alarm outputs while Emergency recording using **EMERGENCY** key and set E-mail addresses for notification.
- Link Notification displays E-mail addresses registered in DEVICES>Network>Notification.
- Please follow the setup procedures below.
 - ① System Event frame displays Emergency, which user does not have to change.
 - ② Select cameras for recording when emergency occurs. Please check ☒ a check box under Link Camera. More than two cameras can be set.
 - ③ Select alarm outputs to be worked when emergency occurs. Please check ☒ a check box under Link Alarm Out. More than two alarm outputs can be set.
 - ④ Select E-mail addresses for notification when emergency occurs. Please check ☒ a check box under Link Notification. More than two E-mail addresses can be set.
- Choose 'OK' to confirm the setting.

4.6.5 Popup Link

- Please click (↔) LINK>Popup Link and the following screen will appear.

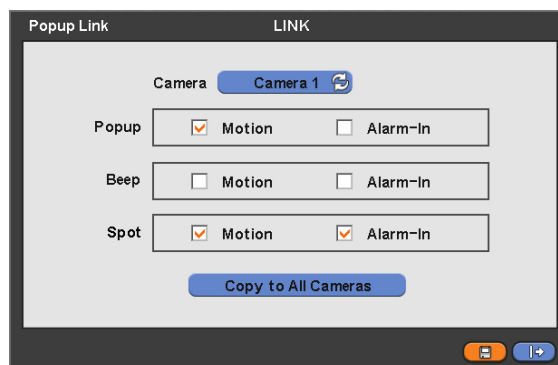

- When Motion or Alarm-In is detected, user can select a popup or beep sound for warning, or have a particular channel of interest to pop-up on Spot Screen.
- Please follow the setup procedures below.
 - ① Select camera
 - ② **Popup**: Please Check ☒ a check box under making the popup screen for main monitor.
 - ③ **Beep**: Please Check ☒ a check box under making beep sound.
 - ④ **Spot**: Please Check ☒ a check box under making the popup screen for spot monitor.
- Click Copy to All Cameras button, then the present channel setup will apply to all other cameras.
- Choose 'OK' to confirm the setting.

5. OPERATION INSTRUCTION

5.1 Viewing

5.1.1 First Image

- Power on DVR and the following live video will appear, while viewing and recording at the same time.



- The screen will display date/time and icons below.

Icon	Description
	Continuous recording mode
	Event recording mode (Alarm In/Motion)
	In recording
	PTZ registration/PTZ mode
	In Audio recording
	CMS Access Indication/No. of accesses (up to 4)
	In channel sequencing
	Setup in HDD Overwrite mode
	Setup in HDD None Overwrite mode(recording)
	Setup in HDD None Overwrite mode(HDD Full)

- On the right bottom side of the screen, disk usage will show by %.
- On the left low side of the screen, , , , , icon will show as the progress.
- At the normal state, HDD Overwrite mode is on and icon shows.
- When Overwrite mode is off (see 4.2.1 Information>Record>Overwrite Setting), will show. And when the disk becomes full, the icon will be changed into .
- Click Emergency recording button, icon will show.

5.1.2 View Format

- The available view formats when the Main Monitor is in viewing mode include Full Screen, Split Screen, Channel Sequencing Screen and PIP screen.
 - **Full Screen:** Please press camera select key (**1~16**) to view the corresponding camera image in full view format.

NOTE

Using a mouse: Double click to view the corresponding camera image in full view format and click one more time to back to Split Screen.

- **Split Screen:** Please press **DISPLAY** key and the available split screens (or multi-window view formats) will display

alternately (i.e., 2x2, 3x3 and 4x4).

- **Channel Sequencing:** Please press **SEQUENCE** key to display images in sequencing view format periodically. This automatic sequence function is not limited to the full screen format, but can be used in any view mode. In 8 channel DVR, 4-camera sequencing view mode is possible and in 16 channel DVR, 4 or 9-camera sequencing view modes are possible.

5.1.3 Digital Zoom

- Select a Channel into Full Screen.
- Drag a portion to zoom by mouse.
- Double click mouse to exit zoomed screen.
- This function works only in the full screen. Users cannot use the digital zoom function in split screen format, channel sequencing or PIP mode.


5.1.4 Freeze Live Image









- Press **FREEZE** key while viewing live image to pause the image.
- The Freeze function works only in the full screen or split screen formats. Please do not use this function in channel sequencing mode or in PIP mode.

5.1.5 Pan / Tilt Control

- Press **PTZ** key to adjust PTZ cameras connected to DVR. Pan/Tilt mode is available only in the full screen format.





- In Pan/Tilt mode, the  icon is displayed on the bottom of the screen.
- Following is the key usage found in Pan/Tilt mode.

Key	Function
▲, ▼, ◀, ▶	Up/Down/Left/Right rotation
	Zoom out
	Zoom in
	Focus near
	Focus far
	Iris Close
	Iris Open
	Save Preset
	Go to the Preset
Menu	Go to OSD main menu

Tour	Run Group Tour 1~9
Patt.	Run Pattern 1~9

- To use a mouse in Pan/Tilt mode, please move the cursor to the lower portion near the center of the screen. To use front button in Pan/Tilt mode, please push setup button. A key pad control will show as follows:



- To save current camera number, select Preset No and  button click.
- To move to preset, select preset No and  button click.
- Available 1 ~ 255 Preset numbers can saved it depends on camera specification.
- As explained earlier in 4.4.2. press Menu button to pop-up PTZ camera OSD setup screen and set up Tour and Pattern items.
 - Since these functions make use of a memory function of the camera itself, user should set them in Camera OSD.
 - Once user completes the setup, close the Camera OSD menu.
 - User can conveniently use Tour and Pattern functions simply by clicking Tour and Pattern buttons.
 - Particulars on how to setup each function on OSD Menu are found in the manual of a corresponding camera.

NOTE

It is required to set Menu as Preset number 95 from camera in order to call camera menu display by clicking 'menu' button or using 95+Goto button.

NOTE

Suppose a command for using Tour function is 71 ~ 79 + PSET and if you had set Tour to 70, use Preset No: 1 ~ 9 + Tour button to benefit the Tour function (70 + 1~9).



5.1.6 System Log

- Press **EVENT** key and the System Log screen will appear.

System Log	
SYSTEM	
Date/Time	Log
2007/08/01 14:23:50	Playback Exit
2007/08/01 12:33:46	Playback Enter
2007/08/01 12:31:48	Search Exit
2007/08/01 12:31:39	Search Enter
2007/08/01 12:19:09	Playback Exit
2007/08/01 11:35:26	Network Disconnected
2007/08/01 11:31:03	Setup Enter
2007/08/01 10:56:43	Setup Exit
1 / 8 (61)	

- Please refer 'SETUP>SYSTEM>System Log' to learn different events listed on the System Log and see how to delete the System Log.

5.1.7 Key Lock


- Press **AUDIO>FF>FORWARD** keys in sequence to operate the key lock function. This function is indicated by  icon in the lower portion on the right-hand side of the screen.
- Once the Key Lock function is activated, user cannot use any key. If wish to use a key, please enter the correct password to release the key lock function. If Password is not required, simply press ENTER  key.

5.1.8 Emergency Recording

- When user presses **EMERGENCY** key, recording starts right away regardless of preset recording mode.
- Emergency recording is not operated while SETUP.
- Press Emergency key one more time to stop the emergency recording.

5.2 Search




- This involves searching recorded video to playback the wanted video of a specific date and time.
- Press **SEARCH** key on the viewing screen, or Click Search menu at “Function Keys” and the following Search menu will appear.

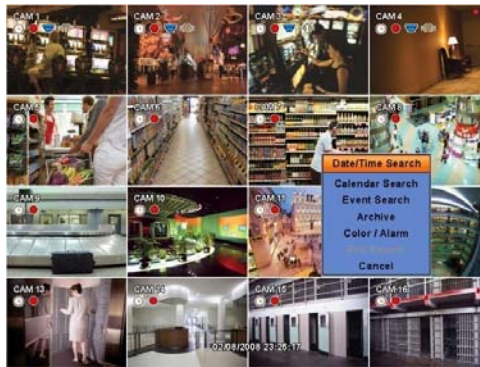

- There are three ways to search video, i.e., by date/time and by calendar.
 - **Date/Time Search:** search by inputting date/time.
 - **Calendar Search:** search by using calendar.
 - **Event Search:** search by event.


5.2.1 Date / Time Search

   - Please click () Date/Time Search in SEARCH menu and the following input box will appear.


- Follow the procedure below to search video by date/time.
 - ① Click () the date and/or time whichever user needs to change and block the item. The designated item will be marked in a square.
 - ② Click ,  buttons on the right-hand side to adjust the values.
- Choose 'Search' to confirm the setting. Then, the selected video will be played back.
- Playback continues from the designated time until the last recording time.

5.2.2 Calendar Search

- Please click (↔) Calendar Search in SEARCH menu and the following input box will appear.

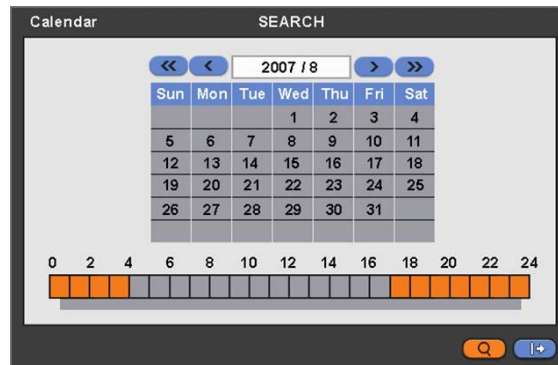

- Dates and Time with recorded data available will be high-lighted.
- Follow the procedure below to search video by calendar.
 - ① Select Year and Month by using the arrow buttons in the calendar.
 - ►►: search subsequent 'Year'
 - ◄◄: search previous 'Year'
 - ►: search subsequent 'Month'
 - ◄: search previous 'Month'
 - ② Click (↔) a date. The date will be displayed in black color.
 - ③ Click (↔) the box on the time indication bar to select the search time. The selected time zone will be focused in different color.
 - ④ Click (↔) the selected time box to show pop-up window on the screen, If there is a recorded data.

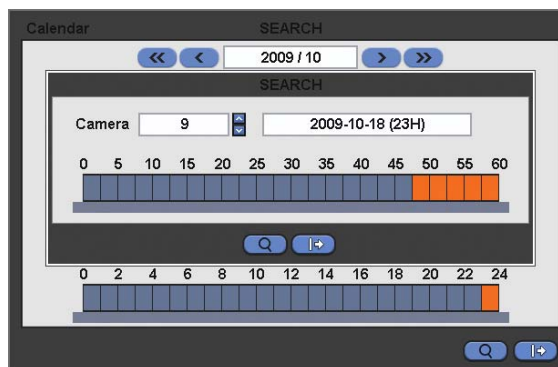

- ⑤ The screen will show selected date/time.
 - ⑥ Click ▲▼ button for selecting cameras.
 - ⑦ Selected camera will show the time bar 0-60 and It will be marked on 2.5minutes basis during selected time zone.
 - ⑧ Click (↔) the box on the time indication bar to select the start time of the video playback.
- Click (↔) Search to start playing back the selected video.
 - Playback continues from the designated time until the last recording time.

NOTE

Click (↔) search button for showing entire channel search based on different time frames.

5.2.3 Event Search

- Please click (↔) Event Search in SEARCH menu and the following input box will appear.
- This involves searching recorded video to playback the selected video of a specific date and time.
- Press **SEARCH** key on the viewing screen, or use the mouse wheel (central button) and the following Search menu will appear.

- ① Designate Event Search start time.
- ② Designate Event Search end time.
- ③ Select camera (video) to search data.
- ④ Check a check box (Motion / Alarm In / Emergency / Serial In) Check box.
- ⑤ Click on Search Index button to recorded search event data.

5.3 Playback

- This involves searching recorded video to playback the wanted video of a specific date and time in search mode.
- Press **SETUP** key or please press the mouse right button and click in Playback mode. Then, the following screen will appear.



- There are three ways to search video, i.e., by date/time and by calendar.
 - Date/Time Search: search by inputting date/time.
 - Calendar Search: search by using calendar.
 - Event Search: search by event.
- There are three other functions in playback mode;
 - Archive: The Archive function will allow user to copy the recorded video (moving images and still images) from a storage device (USB memory stick).
 - Exit Search: From playback display to live display.
 - Cancel: Hide menu in playback mode.
- Playback mode runs in the available maximum number of split screen format. To change the viewing mode, please press **DISPLAY** key or **Camera Select** key (1~16).

NOTE

Using a mouse: Double click to view the corresponding camera image in full view format and click one more time to back to Split Screen.

- Move the cursor of the mouse and the keypad control will appear at the bottom near the center of the screen.
- Every time user presses the **PLAY/PAUSE** key during playback mode, it is changed to '1X PLAY' and 'PAUSE'. The displayed sign on the screen also changes from ► to II.
- Following is the key usage found in playback mode. User may also use the keypad provided on the screen.

Go to Start	I◀	• Go to start of recorded data
REW	◀◀	• Fast reverse playback (changes to x2, x4, x8, x16, x32, x64 and Extreme with each press)
BACKWARD	◀I	• Frame-by-frame reverse still image playback
PLAY	►	• Playback mode: 1X PLAY
PAUSE	II	• PAUSE
FORWARD	I►	• Frame-by-frame forward still image playback
FF	►►	• Fast forward playback (changes to x2, x4, x8, x16, x32, x64 and Extreme with each press)
Go to End	►I	• Go to end of recorded data

- Press **SEARCH** key to stop playing back video.

5.4 One-touch Playback


- Press the **PLAY/PAUSE** key or double click the mouse wheel (central button) in the viewing mode. Then, user will be able to view the wanted recorded video right away without going through the search procedure. The video plays back the recorded video from the last one minute. To stop playing back the video, please press **SEARCH** key.


5.5 Digital Zoom in Playback

- Users are able to use Digital Zoon function in full screen playback.
- Drag a partition on to the screen, then the partition will enlarge as a full screen.
- Double click the left button of mouse to exit the zoom-in screen.

5.6 Archive

- The Backup function will allow user to copy the recorded video (moving images and still images) from a storage device (USB memory stick).
- Please execute Backup Live or playback.
- Follow the backup procedure.
 - ① Press **ARCHIVE** key. In case of using a mouse, please press the mouse right button and click in Archive. Then, the following screen will appear.

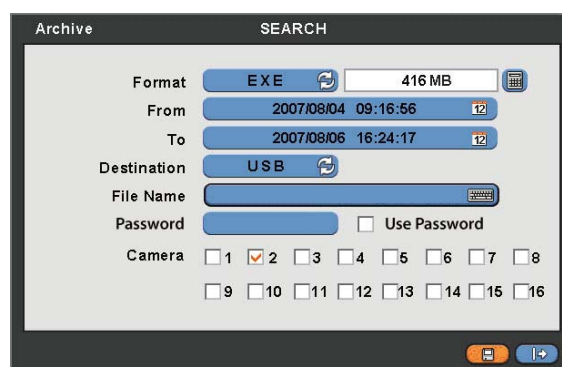

- ② Click (↔) Format frame to select EXE, AVI or JPEG. Choose EXE or AVI for storing moving images; and JPEG for still images.
- ③ Click (↔) the keyboard display on the right-hand side of FROM frame to set the storage start time.
- ④ Click (↔) the keyboard display on the right-hand side of TO frame to set the storage end time.
- ⑤ Click (↔) Destination frame to select a storage device out of USB and DVD-RW.
- ⑥ Click (↔) the keyboard display on the right-hand side of File Name frame to input a file name. User does not need to input extension (exe, avi, jpeg). Please note that the file is not going to be stored unless user inputs a name.
- ⑦ To set the Password to the file that users want to save, mark the check box of “use Password”. Then, Click the keyboard button and set a password.
- ⑧ Check ☒ a check box next to a camera with the video that want to store. User can archive multi channel at the same time.
- ⑨ Click (↔) the Calculator button  on the rightmost side of Format line to check the data capacity for backup. The capacity will show only for EXE Archive.
- ⑩ Click (↔) Start button. Then, Progress bar will appear and the storage process proceeds. The progress bar does not show actual progress time. Depending on to the file size, it will appear again even after it shows 100%. It is important not to detach storage device until DVR displays “Archive Success” message.
- ⑪ If the storage is done properly, Archive Success message will pop up. Please choose ‘OK’ to confirm. If the storage fails, Archive Fail message will pop up. In this case, user must try again.

NOTE

Please do not use jpeg format while archiving in live mode.



NOTE

Please do not change the settings by DVR or CMS, while back up.

NOTE

Please enter all the necessary information before Click ‘START’.

NOTE

If the When the targeted file size is over 2GB, press “” button on the right again after the first “ARCHIVE SUCCESS”. And DVR will continue to archive to another file with the extension of “-002” Automatically added. In case of DVD media, change the media after the first file is finished and press “” to continue to the rest of progress.

CAUTION

PLEASE DO NOT USE THE SPACE WHEN ENTER BACKUP FILE NAME.

CAUTION

 
WHILE BACKUP PROCEDURE, PLEASE DO NOT DETACH STORAGE DEVICE OR POWER OFF THE DVR. OTHERWISE, IT MAY CAUSE PERMANENT DAMAGE TO THE DVR OR THE STORAGE DEVICE. IN SUCH CASE, USER MUST REBOOT THE DVR. IF THE DVR DOES NOT OPERATE PROPERLY, USER MIGHT NEED TO CONTACT SERVICE CENTER.

CAUTION

WHEN ARCHIVING IN AVI FORMAT, IT ONLY SUPPORTS 1CH AND DOES NOT SUPPORT AUDIO AND PASSWORD FEATURES.

5.7 Menu Bar

- Menu bar enables users to control all function as front button on the OSD screen.



- Move the mouse cursor to bottom around Date and Time indication then Menu bar will show up on the live screen.
- Each icon functions as below;



: Exit the Menu Bar



: Safely turn off the DVR



: Enter Archive mode



: Enter PTZ control mode



: Enter Setup mode



: Turn the display as 1 channel full screen. Additional click on full screen, it will change to next channel in sequence.



: Turn the display as 4 channels split screen, Additional click on quad-screen, it will change to the next four channels in sequence.



: Turn the display as 8 channels split screen, Additional click on 8 channels split screen, it will change to the next eight channels in sequence.



: Turn the display as 16 channels split screen, There is no changes when additional click on 16 channels split screen.



: Activate the Sequence as configured on spot monitor Setup menu.



: Displayed channel on Spot monitor 1 can be changed by clicking the wanted channel. Sequence stops at "SP1" mode.



: Displayed channel on Spot monitor 2 can be changed by clicking the wanted channel. Sequence stops at "SP2" mode.



: Displayed channel on Spot monitor 3 can be changed by clicking the wanted channel. Sequence stops at "SP3" mode.



: Do not activate spot.



: Play Instant Playback



: Enter Calendar Search



: Date and Time Search



: Enter Event Search

2010/12/31 15:45:29

: Showing current Date & Time

5.8 Color Control and Position

- Please click (↔) **Color /Alarm** in SEARCH menu and the following input box will appear.

NOTE

THIS FUNCTION IS ENABLED ONLY WHEN **LIVE MODE** AND **1 CHANNEL MODE**



- If user clicks (**Default**), proper number of Color Control or HSTART/VSTART will appear automatically. Please choose 'OK' to confirm the setting.
- Click (↔) ▲, ▼ direction buttons on the right-hand side of Brightness/Contrast/Saturation to set adjust color of the screen (i.e. 0 ~ 255)
- Click (↔) ▲, ▼ direction buttons on the right-hand side of HSTART / VSTART to set adjust display poison.
- If user wants every camera to have the same mode, please click (↔) Copy to All Camera.
- Choose 'OK' to confirm the setting.

5.9 Alarm Out Control


- Please click (↔) **Color / Alarm** in SEARCH popup menu or in front panel and the following input box will appear.

NOTE

THIS FUNCTION IS ENABLED ONLY WHEN **LIVE MODE AND 4 SPLIT SCREEN MODE OR HIGHER.**

NOTE

ONLY 1 ALARM OUT IS AVAILABLE.

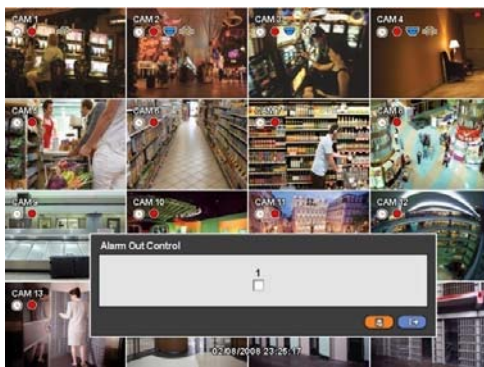

- Please click (↔) **Color / Alarm** in SEARCH popup menu or in front panel and the following input box will appear.
- Choose 'Close' to confirm the setting.

CMS Pro **Full-featured Enterprise Class Surveillance Solution**

User`s Manual



6. CMS Pro

6.1 CMS Pro Features

6.1.1 Introduction

- The CMS Pro is a central surveillance system solution that monitors multiple sites with video, audio and event signals from DVR over networks.
- The software supports different windows of live viewer, playback player, interactive map viewer, various search panes and event signal monitoring panes.

6.1.2 Features

- This program does not limit the number of units to register and monitor. The program displays up to 512 live videos; up to 256 channels on one screen and 256 channels on the other screen. The program supports as many monitors as a PC supports. Users may open windows or panes of live video displaying, data playing, event signal monitoring, map displaying, etc. Users can compose the central management system by choosing required widows or panes.
- The software supports different windows of live viewer, interactive map viewer, and event signal monitoring panes.
- The program displays event signals in real-time by receiving from devices over the network.
- On the program, users may control PTZ cameras and relay outputs on the server or DVR. By attaching microphone and speaker system to devices on site, users may make bi-directional audio communication over the network.
- The main Search window provides users with various ways of searching data on DVR.
- The map supports multi-layer structure, so that each map on different layers can respond interactively. On the map, users may lay out icons of each device. Event signal triggers the icons on the map to blink, so that users may monitor event signals on the map. And Users can check the live view of individual camera on the map by clicking the video icon.
- With 5 different types of search function, users can search the recorded data according to user's needs.

6.1.3 System Requirements

- CMS Pro may not run properly if the PC does not meet minimum requirements. Other programs should not run on the same PC where this is running. Otherwise, CMS Pro software may not perform as designed.

	Minimum	Recommended
CPU	Intel Core i5	Intel Core i7
Main Memory	2GB	4GB or higher
Video Memory	1GB	2GB or higher
Display Resolution	1024 x 768 (with 32bit color) or higher	
HDD Storage Space	160GB or higher	
Network	100~1000 Mbps Fast Ethernet	
Operating System	Windows XP Professional SP3 / Windows 7 Home edition(32/64) / Windows 7 ultimate (32/64)	
Others	DirectX 9.0 C or higher	

CAUTION

IF DUAL STREAMING IS DISABLED IN DVR, CMS ONLY CAN SUPPORT UP TO 16CH OF HD-SDI CAMERA CONNECTION.

6.2 Installation

6.2.1 Software Installation


- Please follow the program installation procedures below.

① If an old version of CMS Pro program was installed, completely uninstall or delete the old version.


CAUTION

USERS SHOULD COMPLETELY REMOVE CMS PRO PROGRAM OF AN OLD VERSION BEFORE INSTALLING NEW VERSION IN ORDER TO REDUCE COLLISION.


- ② Insert the provided CD in a PC.
③ Run the CMS Pro Setup.exe file.
④ When the following screen appears, click “Next.”

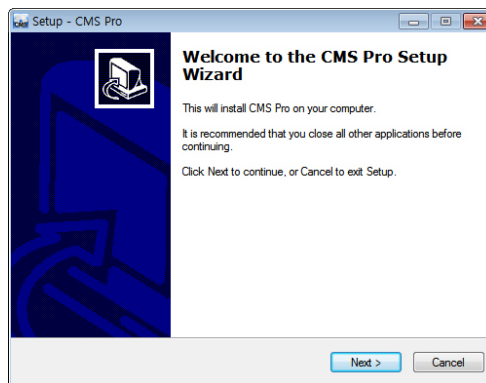


- ⑤ When the following screen appears, select folder and click “Next.”

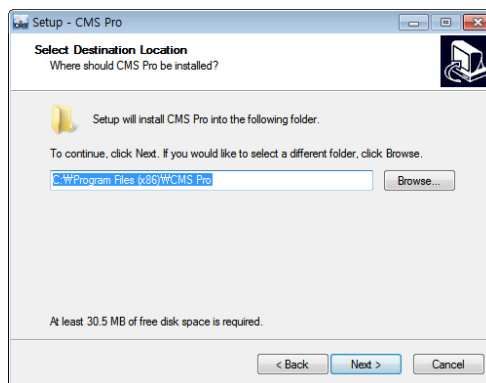

- ⑥ When the following screen appears, select the check box according to user's preference and click “Next.”

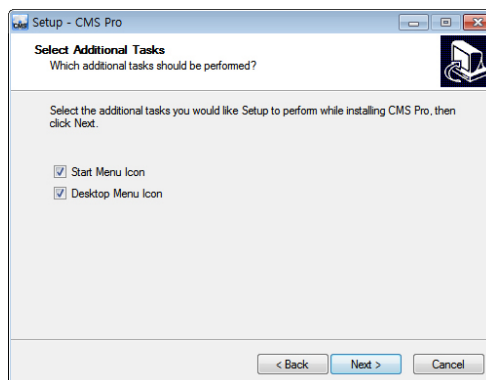

- ⑦ When the following screen appears, click “Install.”

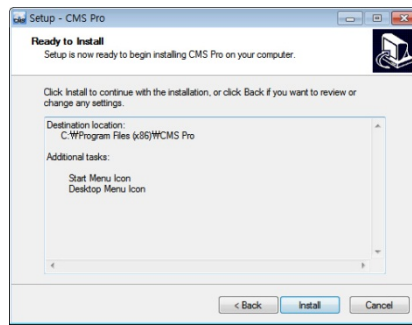

- ⑧ When the following screen appears, click “Finish” to complete the installation.




NOTE

- If the PC has a previously installed CMS Pro, the installer asks whether to overwrite the existing DB or not. The DB contains setting values on the program. If desired to maintain the existing values, click ‘No’ button.
- If the OS is Windows 7, then users have to run program as “Run as an administrator.” Or user can change the property of the program from the menu, properties(right mouse click on the CMS pro icon) > Compatibility > check “ Run this program as an administrator”


6.2.2 Login

6.2.2.1. Login Process

- Open the CMS Pro. Users may open it by selecting the execution file through ‘Start’ menu [Start] – [CMS Pro] or by double-clicking the execution icon on the background.
- Select a user ID in the ‘Login’ window. Users may see the entire list of IDs that are registered into the program by clicking on the drop-down menu in the right-side. Initially, only the Administrator is registered as default.

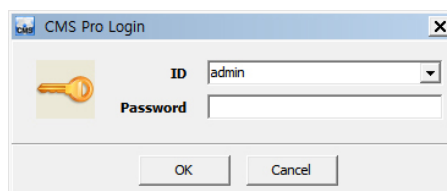

- Enter the corresponding password with the selected ID. The default password of the ‘Administrator’ ID is ‘1111’. Administrator may change the password in the program.

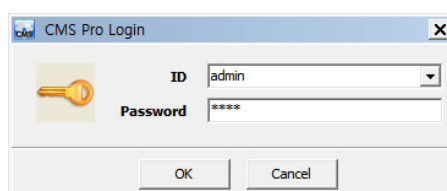


NOTE

Users may change the password in [Setup] – [Change Password] menu. For the detailed information, please refer to the 'Chapter 7.4.4.3 Change Password' page.

The CMS Pro saves settings and layouts on the program of the current user when the program is closed.

6.3 Menu

- Below shows the brief explanation of each part on the screen.

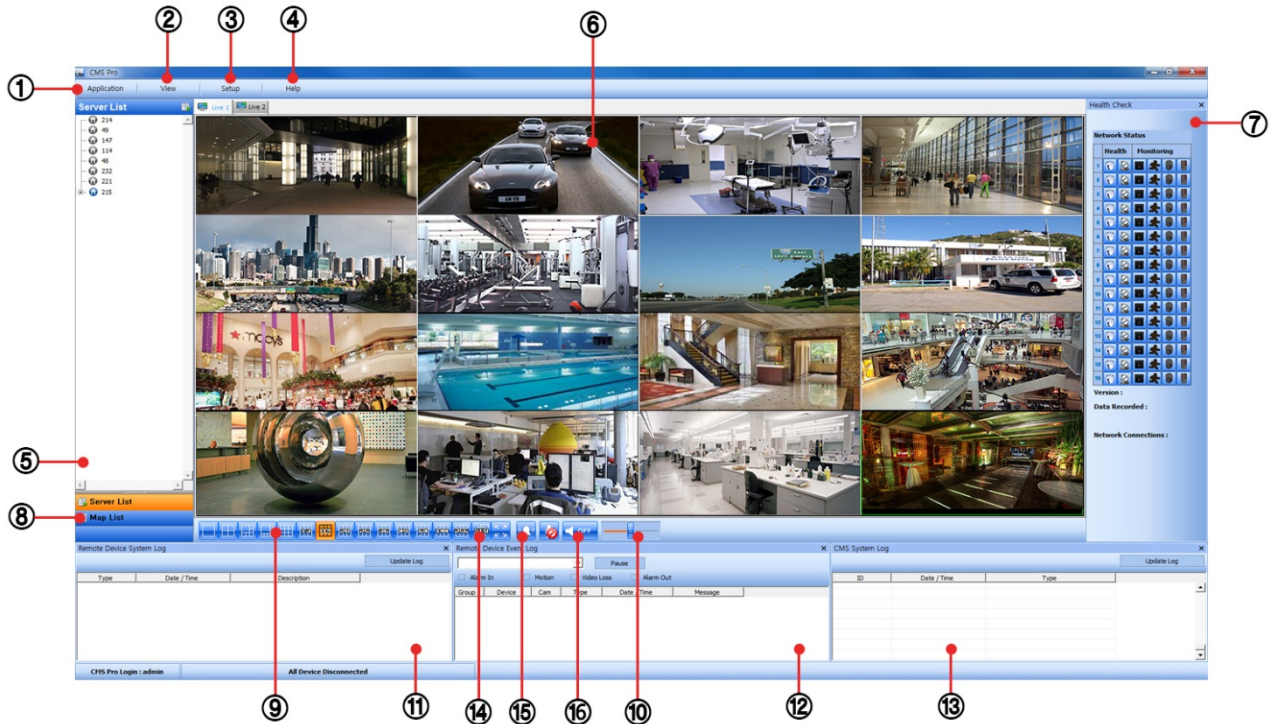

1	Application
2	View set
3	Setup menu
4	Help menu
5	Server list pane
6	Display windows
7	Health check pane
8	Map list pane
9	Screen split selection icons
10	Audio control bar
11	Remote device system log pane
12	Remote device event log pane
13	CMS system log pane
14	Sequencing
15	Event Beep On / Off
16	Audio Status icon


6.4 Setup

6.4.1 Local Setup - Device

- Please make sure the network setting of DVR has been done properly prior to the remote connection setting.

6.4.1.1. Remote Site Connection Setup

- Click Setup – Local Setup – Device to enter the setup and a dialog will pop up as below picture.

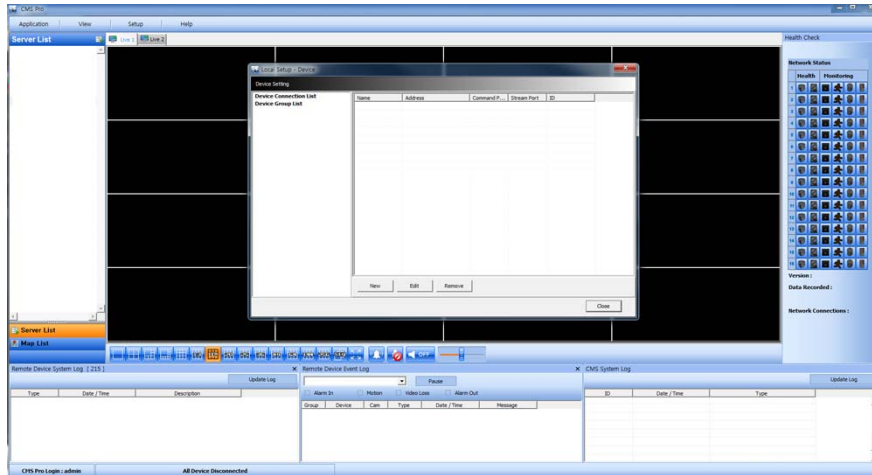

6.4.1.2. New Device Register

Device

- Select “Device Connection List” on left-hand side and click [New] to register new devices.


- Describe the connection information as below. User must fill in where information requested in **bold**.
 - **Device Name**: Type the DVR name to be displayed in the server list pane. Please note that this name has no relation to the ID registered in DVR. Users may create a name to be easily distinguished.
 - **Description**: Type brief description of the site
 - **IP Address**: Input IP address or Domain Name of DVR (check from the SETUP>DEVICES>Network in DVR)
 - **Command Port**: Input Administrator's number among port numbers set in DVR (check from the SETUP>DEVICES>Network in DVR). Default port number is **5920**
 - **Stream Port**: Input Video/Audio number among port numbers set in DVR (check from the SETUP>DEVICES>Network in DVR). Default port number is **5921**
 - **Login ID**: Type authorized ID of the DVR. Default ID is **admin**.
 - **Login Password**: Type correspond password of the ID. Default Password is **1111**
 - **Confirm Password**: Retype the password to confirm
 - **Pop up Display**: User can setting either video pop up or beep on corresponding channel when event occurs.

Camera

- Choose a camera name between DVR and CMS setting or both.
 - Device Camera Name: Display camera name of DVR.
 - CMS Camera Name: Display Camera name of CMS.
 - Both (Device-CMS) Camera Name: Display both as [DVR name]-[CMS name].
- If users mark the “Display to Server List”, camera name is displayed in the server list.
- Type the name of each camera in “Camera Name” item.
- Users will be able to type not only in English but also in their own languages.
- It is possible to erase all names by clicking “Clear all names”.
- Save and close the setting panel by clicking “OK”.
- If users wish to exit without saving, then click “Cancel”.

Scan Device


- This function automatically detects and registers units where currently connected to local network.
- Click “Scan Device”, then following will pop up.

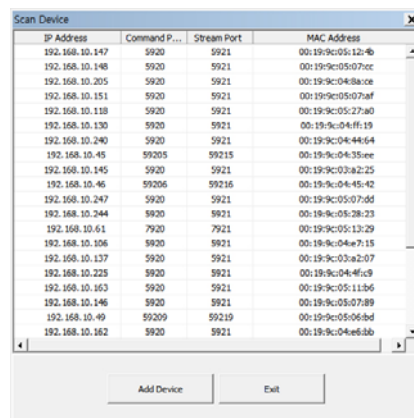

IP Address	Command P...	Stream Port	MAC Address
192.168.10.147	5920	5921	00:19:9c:05:12:4b
192.168.10.148	5920	5921	00:19:9c:05:07:9c
192.168.10.205	5920	5921	00:19:9c:04:8a:cc
192.168.10.151	5920	5921	00:19:9c:05:07:af
192.168.10.118	5920	5921	00:19:9c:05:27:a0
192.168.10.130	5920	5921	00:19:9c:04:ff:19
192.168.10.240	5920	5921	00:19:9c:04:44:64
192.168.10.45	59205	59215	00:19:9c:04:35:ee
192.168.10.145	5920	5921	00:19:9c:02:a2:25
192.168.10.46	59206	59216	00:19:9c:04:45:42
192.168.10.247	5920	5921	00:19:9c:05:07:dd
192.168.10.244	5920	5921	00:19:9c:05:28:23
192.168.10.61	7920	7921	00:19:9c:05:13:29
192.168.10.106	5920	5921	00:19:9c:04:a7:15
192.168.10.137	5920	5921	00:19:9c:03:a2:07
192.168.10.225	5920	5921	00:19:9c:04:4f:c9
192.168.10.163	5920	5921	00:19:9c:05:11:b6
192.168.10.146	5920	5921	00:19:9c:05:07:89
192.168.10.49	59209	59219	00:19:9c:05:06:db
192.168.10.162	5920	5921	00:19:9c:04:e6:bb

6.4.1.3. Edit Registered Site

- Select a site to adjust on local setup window and click “Edit”
- Change the setting then click “OK” to save and exit.
- Alternately, users can also edit the site by right clicking the mouse on the server name in the Server List.

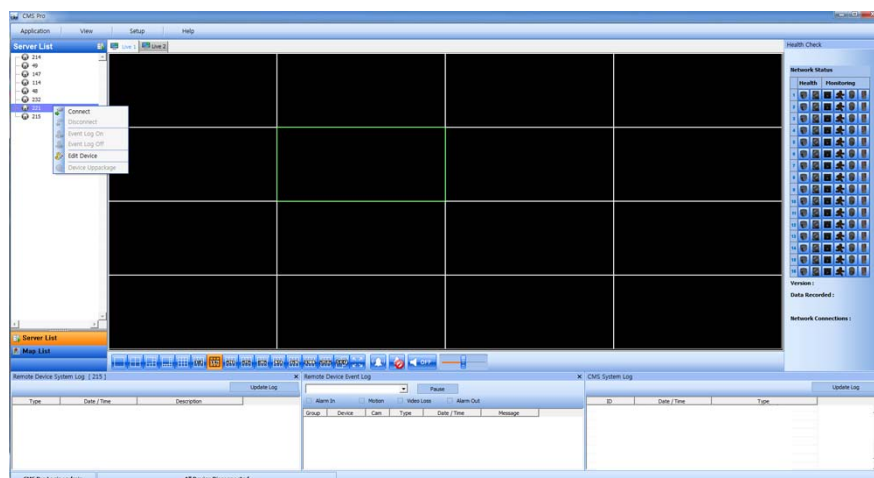

6.4.1.4. Remove Registered Site

- Select a site to delete on local setup window and click “Remove”
- The site will be removed on the local setup window.

6.4.2 Device Group Setup

- It is possible to make a group of multi-devices for user's convenience.
 - Users are able to combine multiple devices as one group of connection for easy control.
 - Users are able to extract the cameras from registered DVRs to make own group of display.




6.4.2.1. New Grouping Setting

- Please click "New" to set up the Group Name, select Division (from 4 to 144), and type the Description.
- Select the site from the server list in the left-hand side of the window.
- Right mouse click and click "connect" on the site or double clicking the device will show the tree of cameras and here users can extract the channel they want.
- To add the channels into new group, drag & drop or double click on the camera.
- Users are able to continue to extract and add the channel by connecting other DVRs.
- Click "OK" to save and exit.
- Users are able to set the pop up display function.
- Select a group to adjust on Group Setting window then click "Edit"

6.4.2.2. Edit Group Setting

- Change the setting then click "OK" to save and exit.
- Right click on server list and select the "Edit Device", and then following pop up window will show up. Users are able to set the "description" and Popup Display

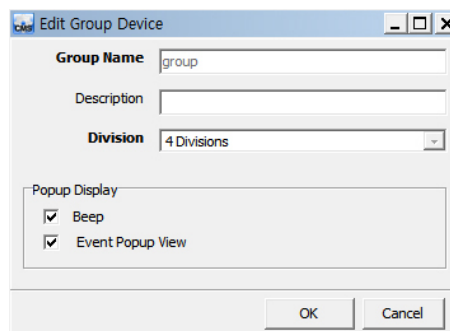


6.4.2.3. Remove Group Setting

- Select a group to delete on Group Setting window then click "remove"
- The group will be removed on the local setup window.

6.4.3 Local Setup - Environment

- This enables users to adjust the default setting for user's convenience.

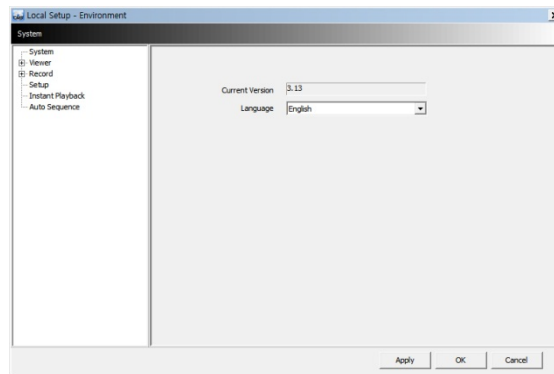


6.4.3.1. System

- Users are able to check the current version of the software.
- Users are able to select the language among English, Korean, Japanese, Russian and Turkish.

6.4.3.2. Viewer

- **Audio**
 - Users are able to control the Audio volume.
- **Video Display**

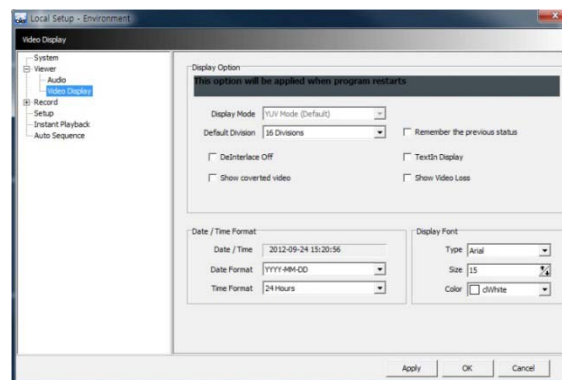

- Users can adjust and set the environment of the Display window.
- The Display option will be applied after program restarts and the contents are as below.
 - Display Mode: It shows the format of display and YUV Mode is the default and it is not adjustable.
 - Default Division: Users can select the number of division of display channels when the program initially displays the screen. (from 1 to 144 division)
 - Users are able to save division of display by marking the “Remember the pervious state” check box.
 - Deinterlace Off: This function changes playback display into Progressive Scan or Interlace Scan. Uncheck (☐) Deinterlace Off, then frame will display as the Progressive Scan and shows the better picture quality..
 - Show converted video: if this box is checked, all the converted displays from DVR will show up.
 - Text-In display: Text data will be overlay on live and playback.
 - Show Video Loss: Popup window will appear, if video loss occurs on the connected DVR.

NOTE

If users check “Show converted video” box, this setting will be applied to playback as well.

NOTE

This option will be applied after program restarts.


- Date / Time format: Users can adjust and set the mode of date / time display in accordance with the location.
 - Date/Time: show current time.
 - Date Format: select the date format among YYYY-MM-DD/MM-DD-YYYY/DD-MM-YYYY.
 - Time Format: select the time format between 24Hours/ 12 Hours AM/PM.
- Display Font: Users can change the font of the name and display time of each channel.
 - Type: select the type of font between Arial / Curier.
 - Size: select the size of the font from 10 to 20and the default is 15.
 - Color: select the color among 16 different colors.

6.4.3.3. Record

• Backup

Users can set the storage path of the image file of Screenshot or Zoom In Screenshot by typing the path or clicking the folder icon.


- Save Directory (Screenshot): Select the save directory by designating the folder in the PC and save format between bmp and jpg.
- Save Directory (Zoom In Screenshot): Select the save directory by designating the folder in the PC and save format between bmp and jpg.

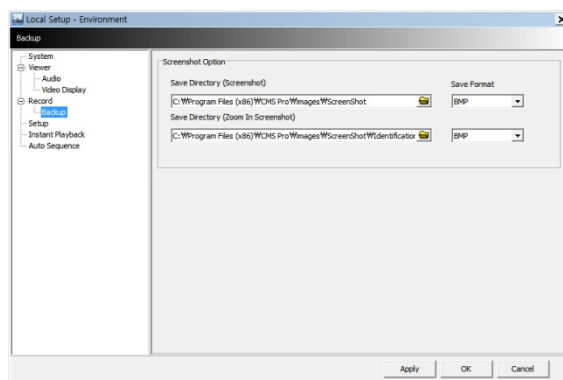

• Instant Recording

Users can set the storage path of the instant recording file by selecting HDD installed in PC.

- Select Drive: Select PC's HDD where instant recording file will be saved from the drop down menu and click "Add". It will show Drive type, Free Space and Total Space of selected HDD.
- Storage List: Added HDDs can be prioritized or deleted. Use Up and Down arrow to prioritize and "Delete" to remove HDD from the list.

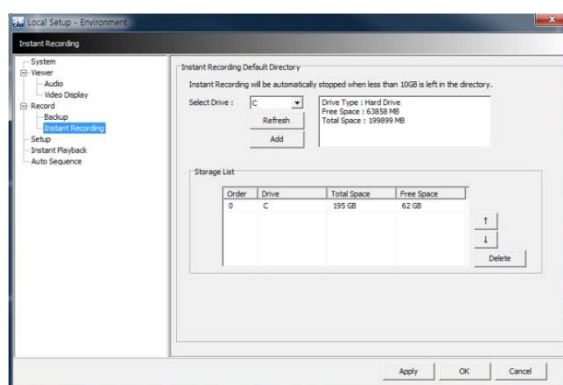

NOTE



Instant Recording will be automatically stopped when less than 10GB is left in the directory.

NOTE

Please refer to Chapter 1.7.2.9 for Instant Recording.

6.4.3.4. Setup


- Select Save Directory: Users can select the save directory of setup data or log data by designating the folder in the PC or other storage device and the change of the directory will be applied only after clicking “OK” button and exit.
- Select Data: Select data which users would like to save in the storage devices.
- Default setup: Initialize the setup to factory default. Click “OK” to exit the program.

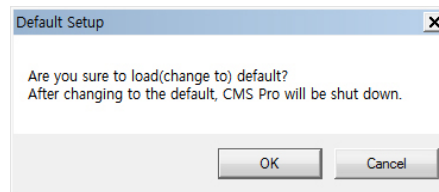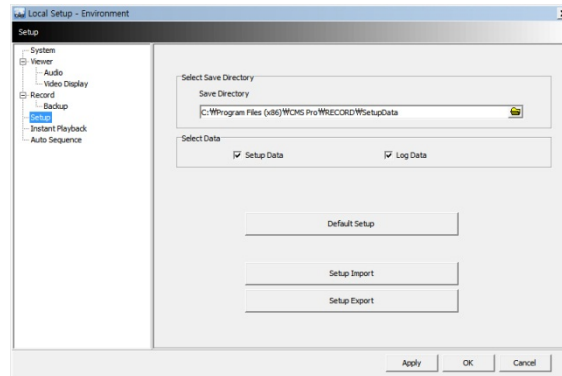


- Setup Import: Copy the Menu setup stored in USB memory stick(or PC HDD) into DVR. Please plug in the memory stick and then click (←) Import.
- Setup Export: Store the Menu setup of DVR in USB memory stick(or PC HDD). Please plug in the memory stick and then click (→) Export.
- Apply: Click the “Apply” button to apply the settings.

6.4.3.5. Instant Playback

- Instant Playback: Users are able to see the recorded data easily by using instant playback function.
- Set the time from which the recorded data is displayed.
- Instant Playback is displayed from the last preset time. (1, 3, 5, 10, 15, 30Min, 1, 3Hour, Default is 3Min)
- For example, if 5 Min is set as a playback period, then users are able to see the last 5 minute's data from the current time.

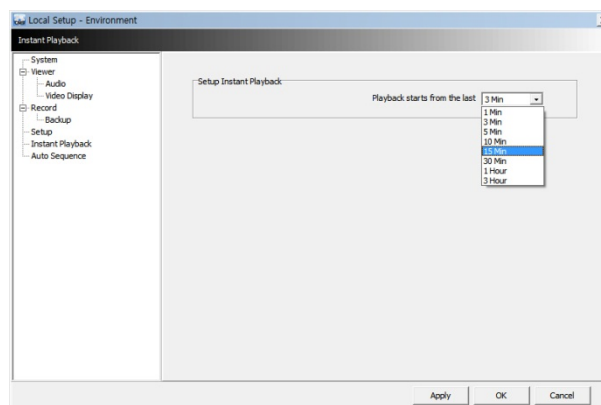


6.4.3.6. Auto Sequence

- Auto Sequence: Users are able to switching the camera view and setup the dwelling time between the different camera views.
- Set the dwelling time by clicking the  to increase and decrease the seconds. Note that it is only limited from 3~60seconds.


6.4.4 Local Setup - Account

- When more than 2 users need to access CMS Pro, multiple User Accounts and its authorization can be set in this menu.
- This setup is only permitted to Admin account holder..

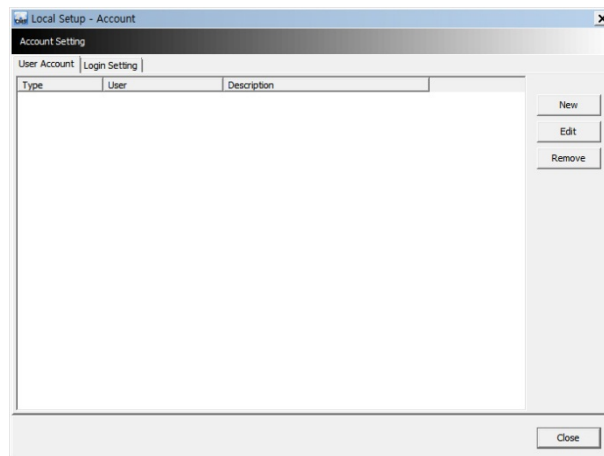

6.4.4.1. Add User Account

- Click “New” button and the following will appear.

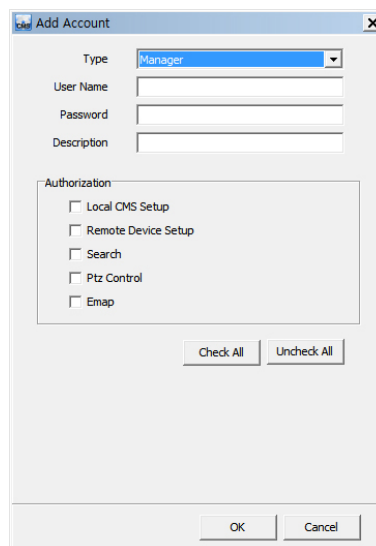

- Type: Select one of the two types of user account, Manager and User from the drop-down menu.
 - While Manager Account allows all of the authorization to be controlled, User Account is permitted to set only Search, PTZ control, and E-map functions.
- Create a User name and Password and then type Description of the account.
- Mark the authorization check boxes (☐) to allow.
 - It is possible to give an authorization selectively to the individual user account.
 - “Check All” grants all the authorizations and “Uncheck All” deprives all the authorizations.
- Click “OK” to save and exit.

6.4.4.2. Edit User Account


- Users are able to adjust its Authorization and Password from EDIT button.
- All the procedures are same as Add User Account.

6.4.4.3. Remove User Account

- Users are able to remove the existing account.
- Select an account to delete then click “REMOVE” button.

6.4.4.4. Login Setting

- This function protects any activities of all Manager/User accounts by asking ID and Password prior to the fulfillments.
- Select the activities from the list () and click “Apply” to save.

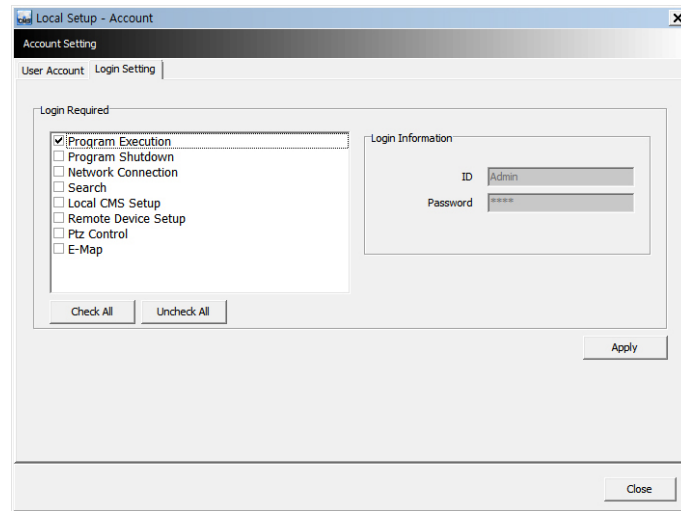


6.4.5 Local Setup – E-map


- Users are able to create various E-maps and it enables monitoring both Live and Playback screen.

6.4.5.1. Registering a New E-map



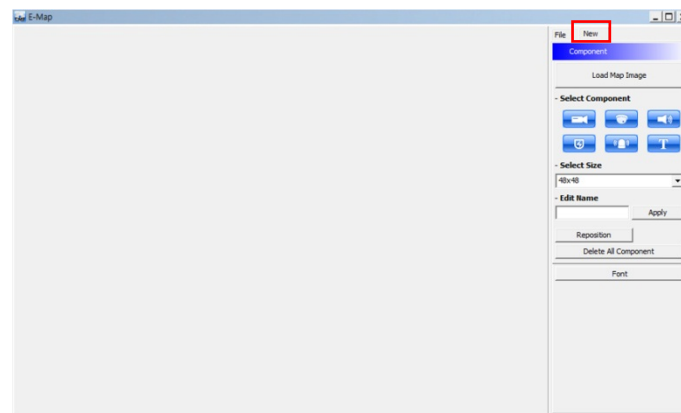


 
- Click “New” Tab to set up the E-Map.

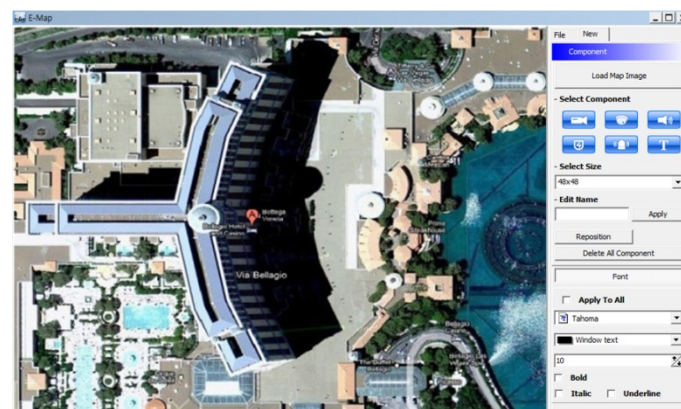







- In order to load an image of the map, click “Load Map Image” that users would like to use as an E-Map.
- Users should select the image format between BMP and JPG.




- Place the icon of cameras, audios and alarms on the map. Each icon's detail is as below.


-  Box Camera. Generally indicates as Outdoor camera.
-  Dome Camera. Generally indicates as Indoor camera.
-  Users can hear the audio in the site by clicking the icon after setting the E-map.
-  The icon will be light on when the alarm in is activated.
-  If users click the icon, the light is on the icon and the alarm equipment such as siren and buzzer will be activated in the site.
-  Users are able to put description in the map using the Text Box.

- Select component


- , , , , ,  Click the icon you want(then the icon turns to orange color) and click again on the place you'd like to locate on the loaded image.
- Users can rotate the icon to the direction that they want and move to other places by dragging.

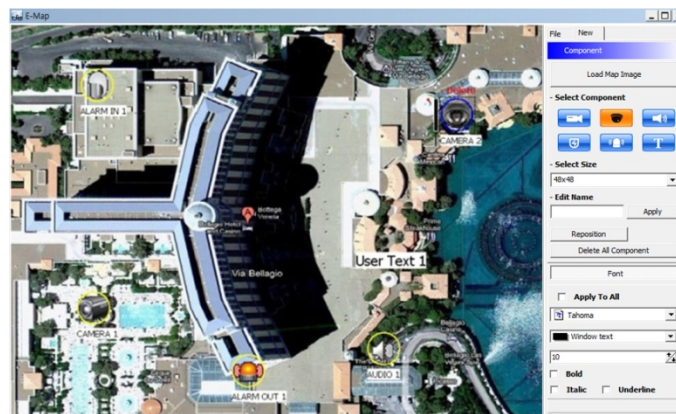

- Select Size: Size of the icon varies from 24*24, 32*32 to 48*48.
- Edit Name: Type the name of the icon and click the "Apply" to change the name.
- Reposition: The icons which are set up on the map can be repositioned into the right place even if the map size is changed (enlarged/reduced).
- Delete All Components: By clicking this button, users can delete all the components in the map at once.
- Font: Change the font of the text of the icon.
 - Click "font", then submenu will appear.
 - Users can select the font style, color, size, and other effects.
 - Check "Apply to All" to apply the change to all the components.

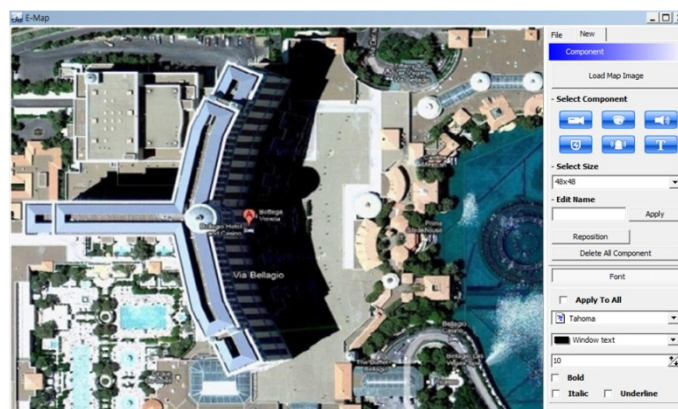

- Click “File” Tab to continue to set up the E-map.
- Type a name of E-map when you finish map setting in “New” menu.
- Click “new” to add a new location in Location list. If the other location is already saved, then select the location from the list.
- Select type among Outdoor, Floor, and Room.
 - Users can set up the hierarchical E-map in their taste.
 - For example, after setting up the floor map, room maps are added under the floor map.
- DVR Name: Select the specific DVR from the list to connect E-map.
- Users are able to check the E-map and its hierarchical structure from the “Registered E-map list”.
 - Here, users are able to load the map, delete the map and show map viewer by clicking mouse right button on the map list.

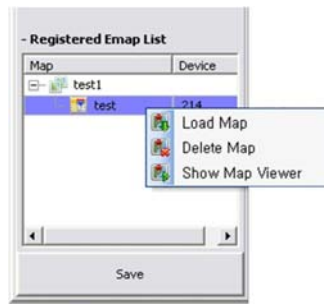


- Click “Save” to save and exit.



6.4.6 Remote Device Setup

- Select one among the connected devices and click “OK”.
- Then the setup window appears same as the one in the DVR.

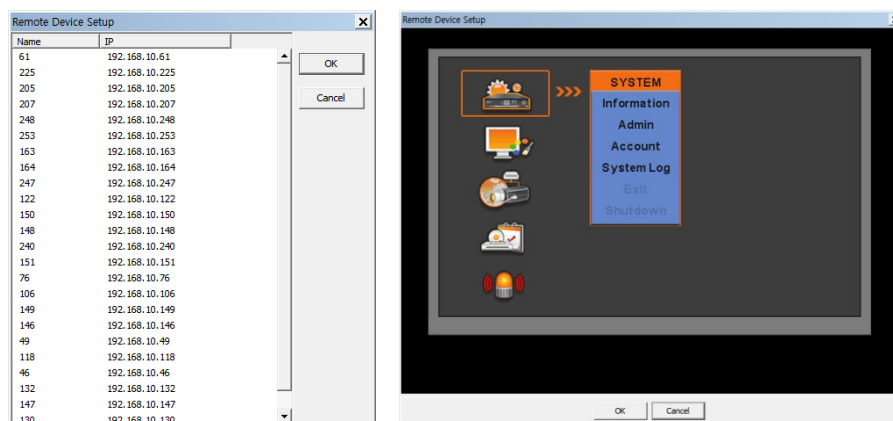


- Click “OK” to save and exit

NOTE

Some settings cannot be modified remotely.

6.4.7 Change Password

- Users are able to change the password of the ID.
 - Password: input the current password.
 - New Password: input the new password.
 - Confirm Password: confirm the new password.

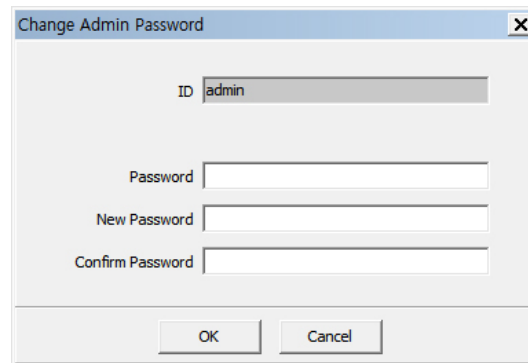


NOTE

User "ID" cannot be modified.

6.4.8 Help

6.4.8.1. About

- The version of CMS Pro can be checked here.

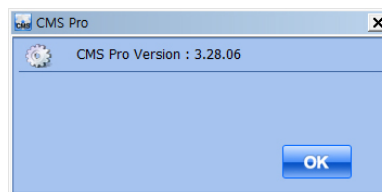


6.5 View


- The viewer of this program is composed with 5 types of different panes.
 - Server List, Remote Device System Log, Remote Device Event Log, CMS System Log and Health Check.

6.5.1 Server List

- When the device is registered, then it is displayed on the Server List.
- If uncheck "Visible" in the server list menu, then the list will not be shown.
- Check "Left" or "Right" to move the list to left or right side of the screen.

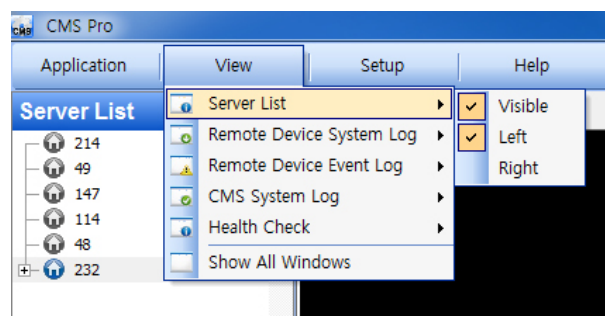


6.5.2 Remote Device System Log

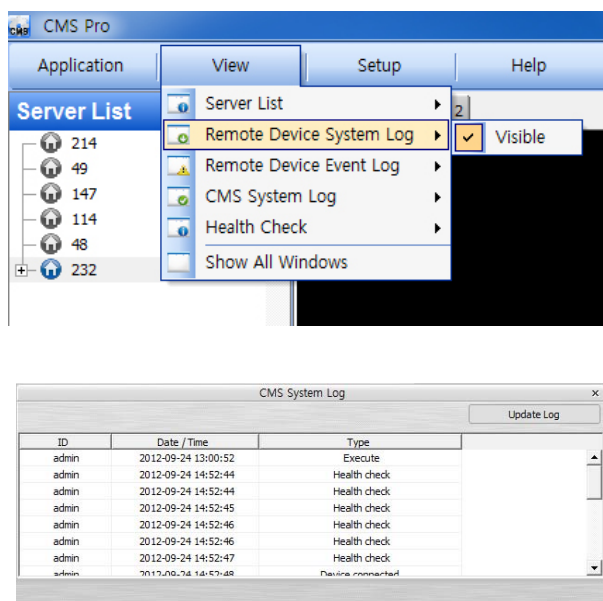

- User can check the system log of the device in this menu.
- Type, Date/Time/Description can be checked.
- The contents in the parenthesis show the name of the device. Ex) [Demo]
- Check "Visible" in the Remote Device System Log menu to see the menu or uncheck "Visible" in order not to see the menu.
- Click the "Update Log" button to update the log.

6.5.3 Remote Device Event Log

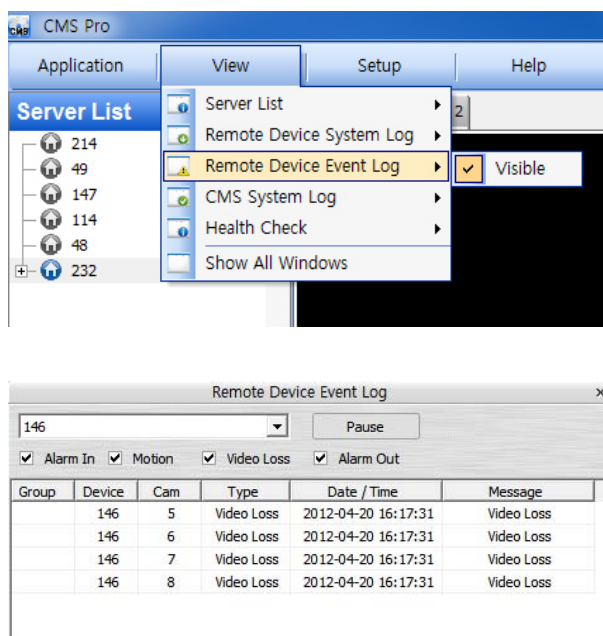


- Check "Visible" in the Remote Device Event Log menu to see the menu or uncheck "Visible" in order not to see the menu.
- Users can select the registered device from the drop down box menu.
- Alarm In / Motion / Video Loss / Alarm Out can be selected separately as Event. (More than 2 events can be selected at the same time.)
- And by clicking "Event log On/Off" after right mouse click on the device in the server list, users can check/uncheck all the events at once.
- When the event operates, the event log will show the information of the event in the list.

- If click the pause button in the menu, then event log will be stopped.
- Click the resume button to resume the system event log. (The log data will be lost during the pause.)

NOTE


The Remote Device Event Log is on when the “pause” is shown while the log is stopped when the “resume” is shown in the menu.

- Double click the detected “Alarm In” or “Motion” event in the remote device event log to check the video of the event.

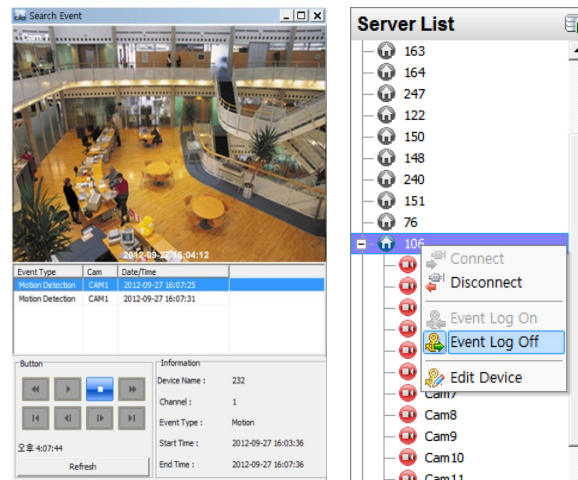

- Click the “Refresh” button to refresh the data.
- Click the right mouse button on the registered device to on/off Event Log in the Server List.
- If user selects “Event Log Off”, all event logs will be unchecked on Remote Device Event Log panel.



6.5.4 CMS System Log

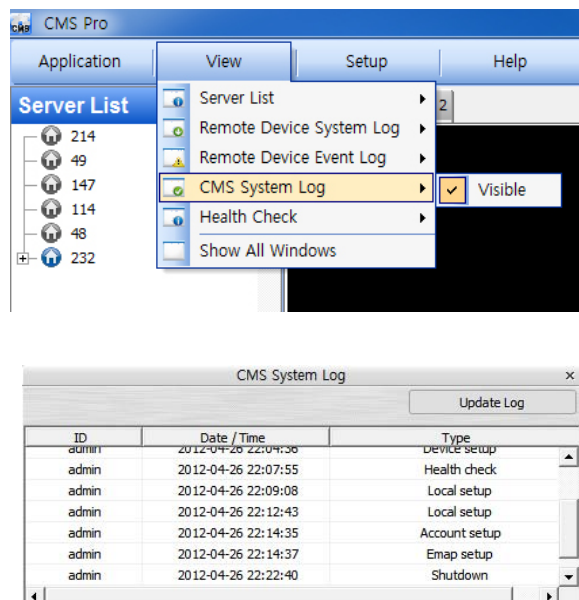

- This is the log menu where users can check the log information of the CMS program.
- Check “Visible” in the CMS System Log menu to see the menu or uncheck “Visible” in order not to see the menu.
- Click the “Update Log” button to update the log.
- Users can classify the Manager and User by checking the ID and get the information of connect/disconnect and shutdown of the user.



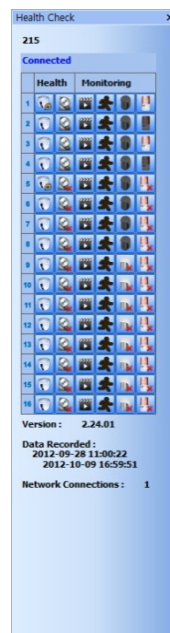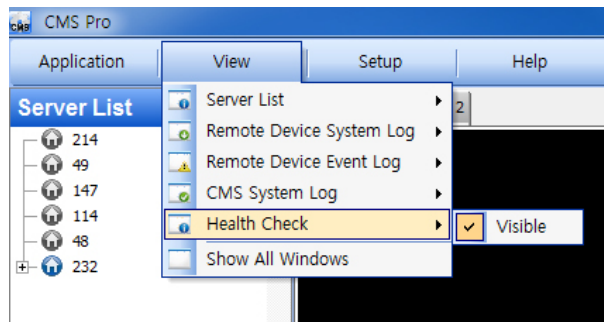

6.5.5 Health Check

- This is the menu where users can easily check the overall status of the device.







- Check “Visible” in the Health Check to see the menu or uncheck “Visible” in order not to see the menu.
- Left mouse click on the device in the server list to see the information of health check.


• HDD Status


 



 





-  HDD is not connected and cannot be added.
-  HDD is connected.
-  HDD is not connected currently but can be added.
-  An error occurred in HDD.

• Camera Status

-  Camera is in covert mode.
-  Camera is connected.
-  Camera is not connected currently but can be added.
-  Camera is not connected and cannot be added.


• Recording Data Status

-  The channel is not being recorded because it's not supported.

-  The channel is being recorded.
-  The channel is not being recorded currently but can be recorded later.
- Alarm In Status
 -  Alarm In is not activated and cannot be added.
 -  Alarm In is being activated.
 -  Alarm In is not activated currently but can be added later.
- Alarm Out Status
 -  Alarm Out is not activated and cannot be added.
 -  Alarm Out is being activated.
 -  Alarm Out is not being activated but can be added later.
- Motion Status
 -  Motion is not activated and supported.
 -  Motion is being activated.
 -  Motion cannot be activated but can be activated later.

6.5.6 Show All Windows


- This function will make visible all the invisible window panes.

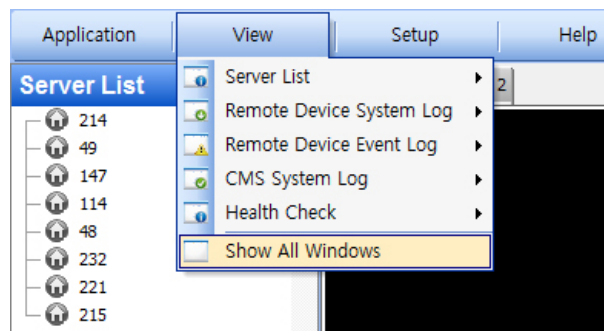

6.6 Application


6.6.1 Search

- There are five different types of search menu; Timebar, Event, POS/ATM, Thumbnail and Smart Search
- The detailed information and directions is described in chapter 8.

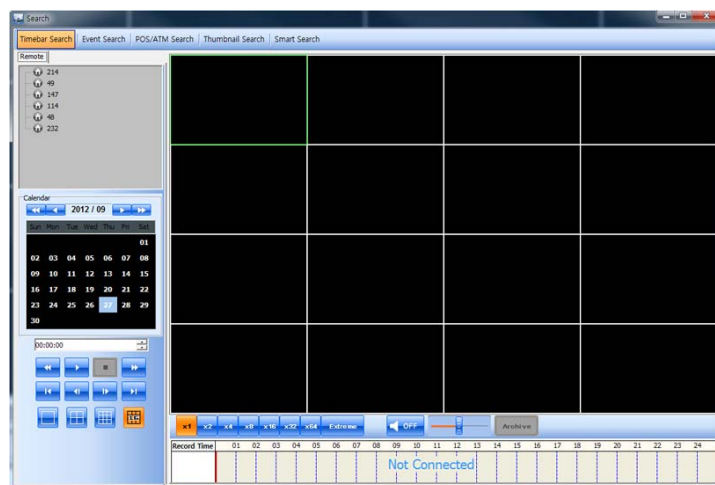

6.6.2 Exit

- If users wish to exit the program, then click the "Exit" in the Application menu.

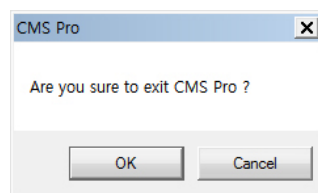



6.7 Live (Live Video Monitoring System)

6.7.1 Overview

- This program is to display live video from multiple channels in customized screen format.
- The program is based on user friendly interface. Users may configure the entire program and open or close the panes and screens in the program.
- The information of the device can be checked and monitored in real time.
- The overall information of recording/live view can be checked.
- 'Login Display' pane is to display the current user ID, authority group, data and time information.
- Dual, Triple monitor can be available and the quadruple monitor can be available by using splitter.
- Two live panes. 256 channels for each pane.

6.7.2 Live Monitor Menu

- The following functions are operated when the right mouse button is clicked on the screen.

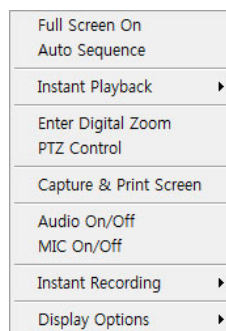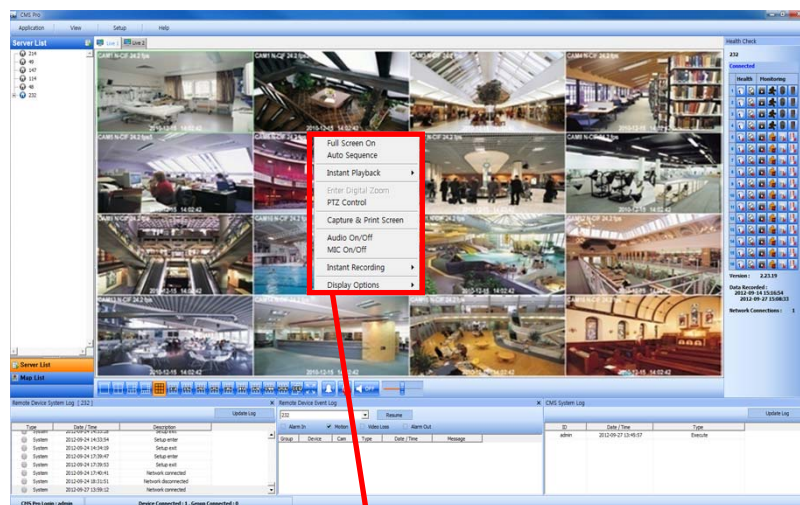

6.7.2.1. Full Screen On

- Click "Full Screen On" to make selected channel into a full screen.
- Click "Full Screen Off" to exit the full screen.




6.7.2.2. Auto Sequence


- Users are able to set the auto sequence.
- When user set the “Auto Sequence” display mode, screen will change to 1 channel display mode and channel will be changed by user’s setup. For more information Please refer chapter 1.4.3.6.

6.7.2.3. Instant Playback

- Instant playback is available in both Live1 and Live2 pane, but screen capture is available in either live1 or live2.

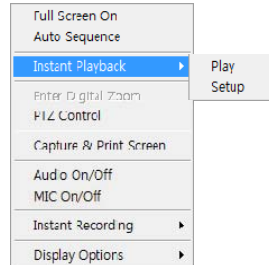

- After right mouse click, move the mouse cursor to “Instant Playback”. Then, play and setup menu will appear.
 - Play: The recorded video of the pre-setup time will be displayed in the playback viewer.
 - Setup: The time of instant playback can be setup in this menu, from 1minute to 3hours. (1Min, 3Min, 5Min, 10Min, 15Min, 30Min, 1Hour, 3Hour. The default time is 3Min.)

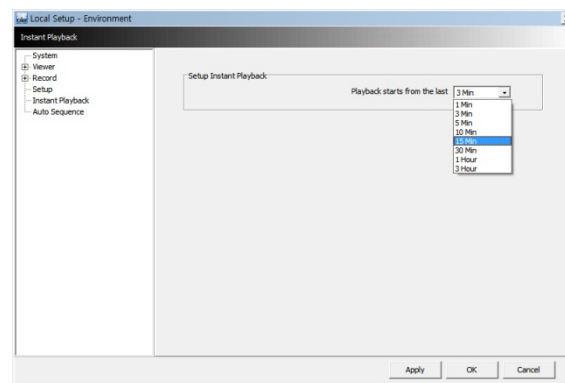


NOTE

Users can also set up the Instant playback in the menu, “Local Setup – Environment”.

- The image capture is supported in the instant playback viewer by clicking right mouse button on “Capture Image.”


NOTE

For more detailed information of captured image, please refer to the Chapter 1.7.2.6 “Screen capture & Image”.

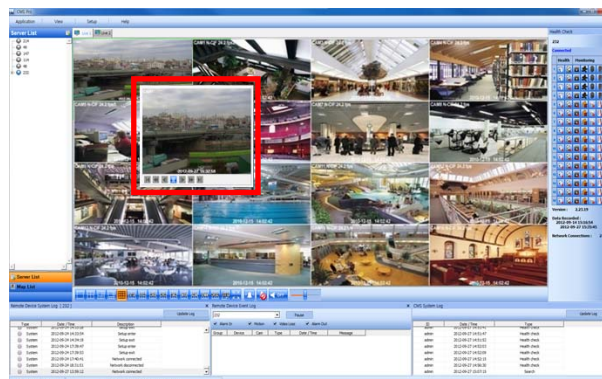


6.7.2.4. Digital Zoom

- To use digital Zoom, please make the display as 1CH.
- Right click on the mouse and select Enter Digital Zoom.

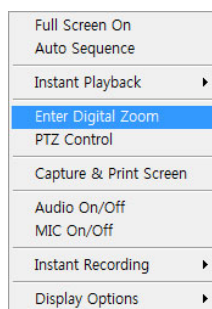

- To Zoom in and out, please use the display function at the corner of the channel Display or click and drag the area wish to zoom in.
- Zoom area can be moved by dragging the position from the corner box.

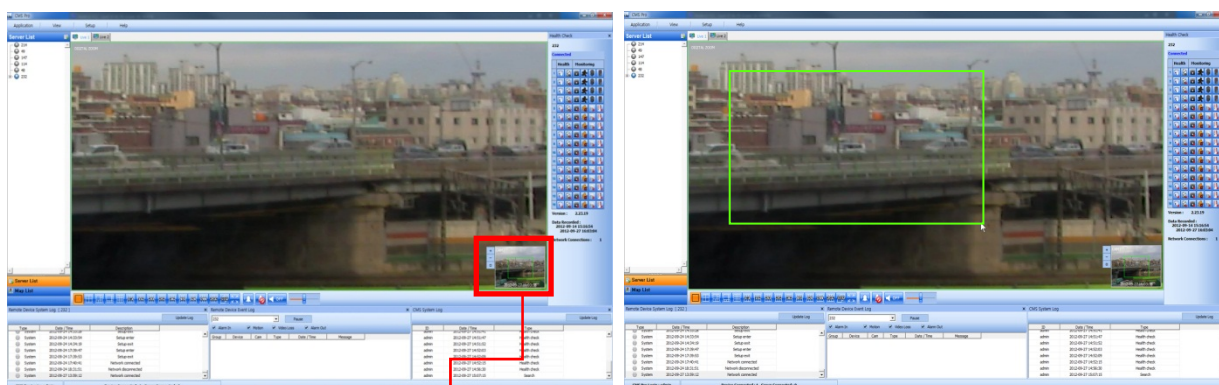

Zoom in / out function



Zoom In




Zoom Out



Zoom Area : The Screen will revert to x4 digital zoom screen.

- After right mouse click on the channel that PTZ camera is connected, select “PTZ control”.

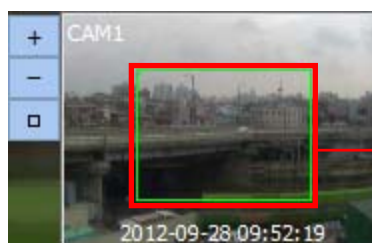


Zoom Area

NOTE



Digital Zoom function can be only used when the display is adjusted as 1 CH.
The digital zoom function is able to zooming approximately x32.

6.7.2.5. PTZ Control

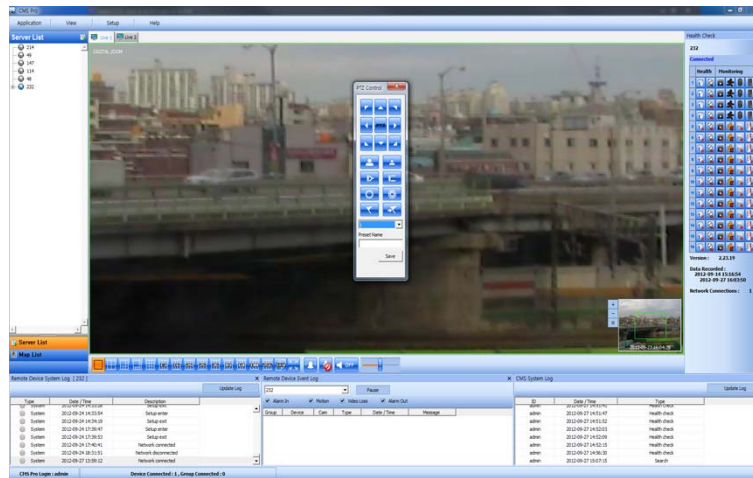- After right mouse click on the channel that PTZ camera is connected, select “PTZ control”.
- Users can designate the certain area and set the name by using “Preset” function.
- Up to 255 presets can be designated.




• Zoom

-  Zoom in
-  Zoom out



• Focus

-  Near Focus
-  Far Focus

• Iris

-  Iris Open
-  Iris Close

• Preset

-  Set Preset
-  Go to Preset
- Drop down menu: Select a preset number which is set in the camera.
- Preset Name: Save the selected preset name.




6.7.2.6. Screen Capture & Print

- After right mouse click, select “Capture & Print Screen”
- The brightness, contrast and saturation can be adjusted to store in users’ taste and can be printed directly.

NOTE

Image adjustment is only possible on the last captured image.

- Users are able to save the captured image by clicking “Save as Image”.
- Create a name of captured image and select the image type between BMP and JPG
- Users are able to choose the folder in which they wish to store the image.

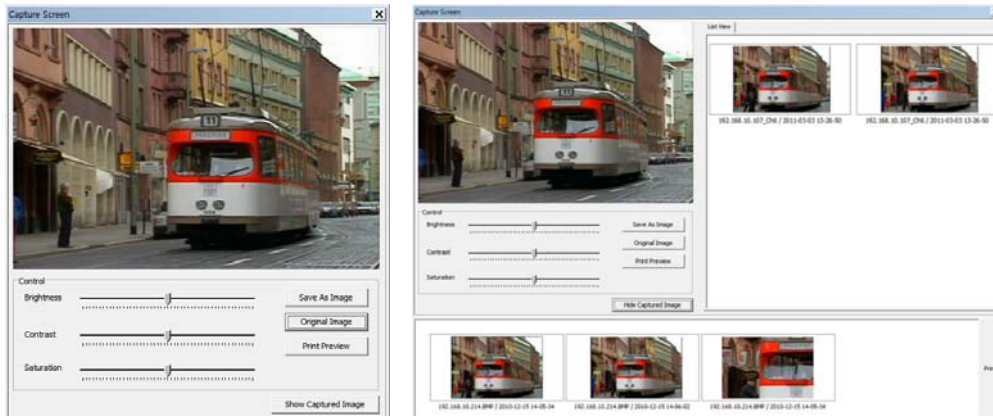

- Click “Show Captured Image” to show the captured images.
- Users can even **recapture** the part of the captured image by dragging the place users want.
- Click “Print” button to print all the captured images at once.
- If users want to print the image one by one, then click the “Print Preview” button.
 - Users can type the title in the text box on the top
 - Add Text: Users can add the description in the text box on the bottom.
 - Delete Text: Delete the last written text at once.
 - Delete all: Delete the all the text in the captured image.




- Click “Hide Captured Image” to hide the captured images.

6.7.2.7. Audio On/Off


- Click right mouse button to on/off audio in the channel.
- Audio On/Off function is applied to only one channel out of all connected channels.

– Once audio is on “OFF” will be changed to show connected audio channel. “CH10”

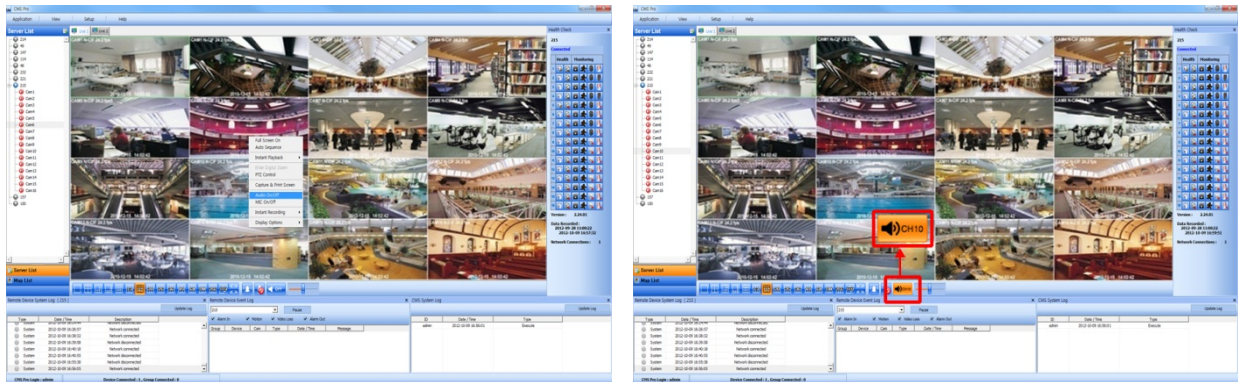

6.7.2.8. MIC On/Off

- Click right mouse button to on/off Mike.
- Users can deliver the audio through the speaker connected to DVR by sending the audio from PC where CMS Pro is activated.

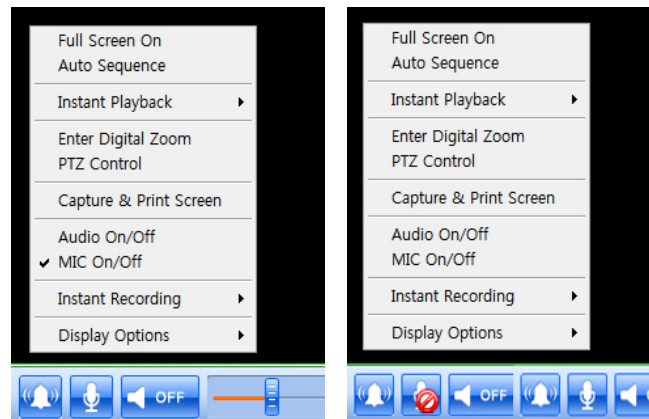

6.7.2.9. Instant Recording


- Click right mouse button to activate the Instant Recording.
- In the Instant Recording, there are three choices of start recording, setup and open folder.
- Click Start Recording to record the particular channel that user wants.




- If user wants to have password for the archiving file, please click 'Use Password' and type the password that users want to use.




- If users click 'OK', It will start recording of particular chosen channel.
- When users want to view the archived file, please choose "Open Folder"

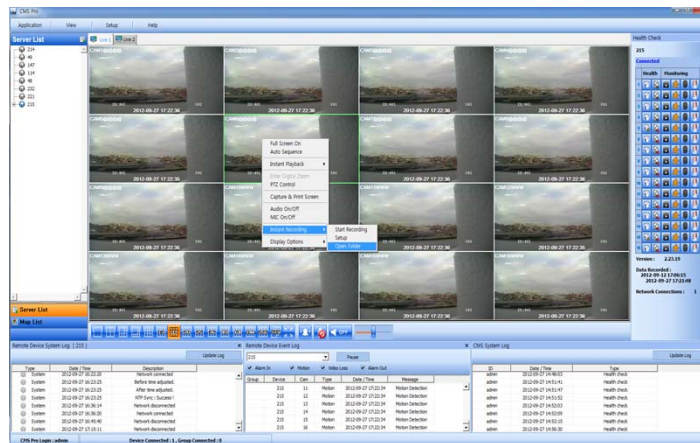

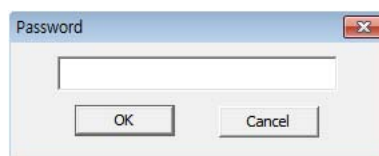

- It will open the saved directory of the file.
- When users double click the created file, password window will pop –up.
- Please type the previous password that users entered in Password setup

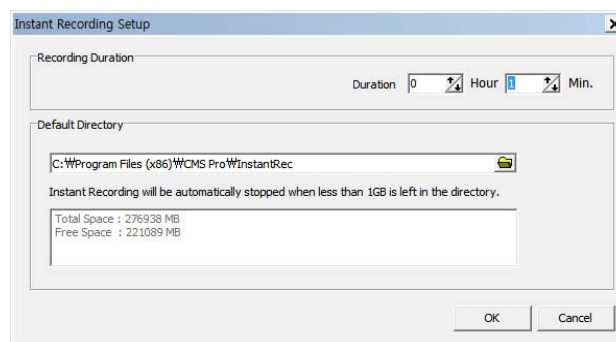


- When Users want to "stop recording", click right mouse again and select Instant Recording and choose "stop recording".
- Choose "Setup" in the Instant Recording to set up the recording duration and default directory.



- In the recording duration, users can setup the hours and minutes by clicking the "upside down arrows" 
- In the Default Directory, users can choose the directory to save the recorded file by clicking the 
- "Open folder" will allow users to select the recorded files and play them.


6.7.2.10. Display Option

- Users can set up the display of camera name and time in “Display Option”.
- After right mouse click, check the “Show Camera Name” to display the camera name or uncheck the menu to hide it.
- After right mouse click, check the “Show Time” to display time or uncheck the menu to hide it.

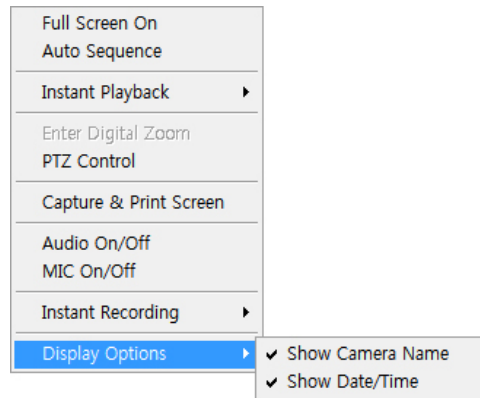


6.7.3 Screen Layout Control

- Since every menu can be relocated by drag and drop, it is easy to customize the lay out in users' taste.

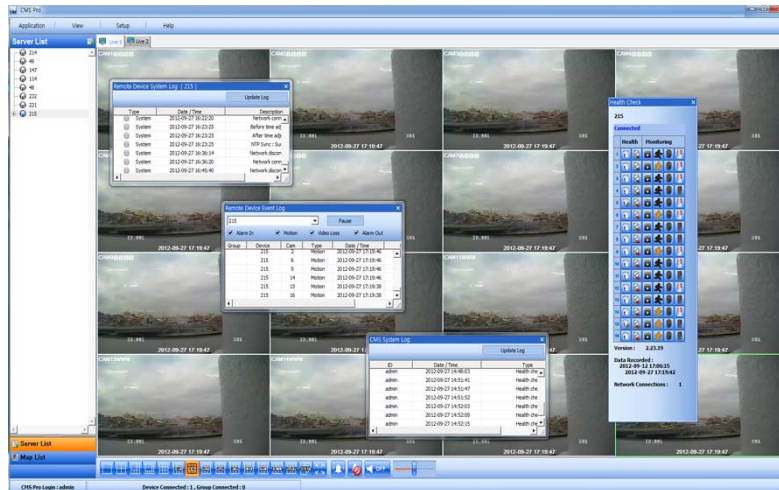



6.7.4 Change Division Display

- From a single full screen to 256 channels, various combination of channel display is provided by clicking the icon at the bottom of the screen.

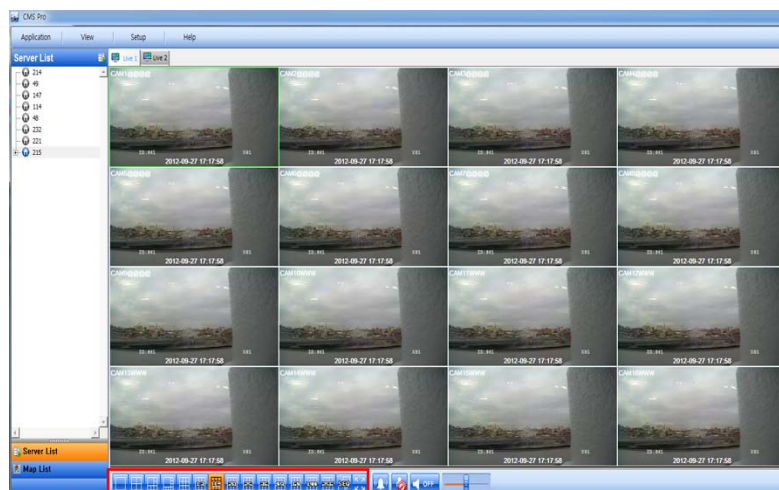


6.7.5 Sequencing

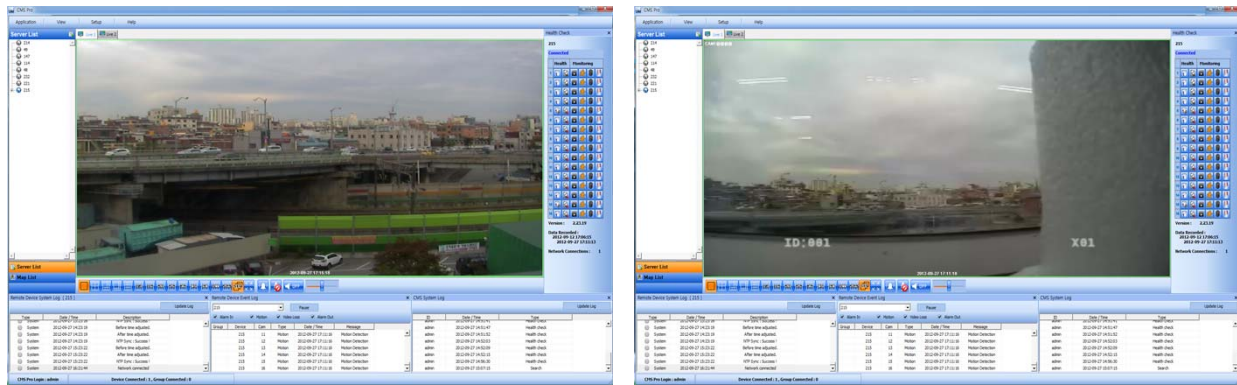

- Click the  to switch the channel according to setup made in auto sequence in Local setup – Environment.
- It is only supported one channel

6.7.6 Audio Volume Control

- Users can control the audio volume using the bar controller at the bottom of the screen.

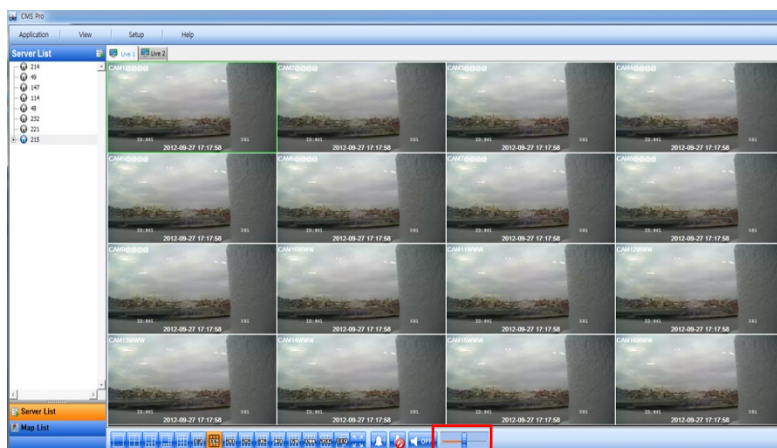

6.8 Search

6.8.1 Overview


- There are five different types of search function and users are able to search the recorded data by using a suitable search function of the five in accordance with their purpose.

NOTE

Search window cannot be closed during playback, also cannot be changed window size. Please close the window after stop. Playback more than 2 channels at the same time is available only in time bar search.


6.8.2 Time Bar Search

- First of all, open a search window by clicking the “search” in the application menu.
- Click the “connect” after right mouse clicking on the device list.
- Once it is connected to the program, date, month and year of the recorded data is highlighted in the calendar.
- The text box in the left-bottom side of the window shows the time of playback video.
- The recorded data of a day is displayed as a colored bar on the time line at the bottom.
- Users can easily search the recorded data by clicking on the time in the time bar.

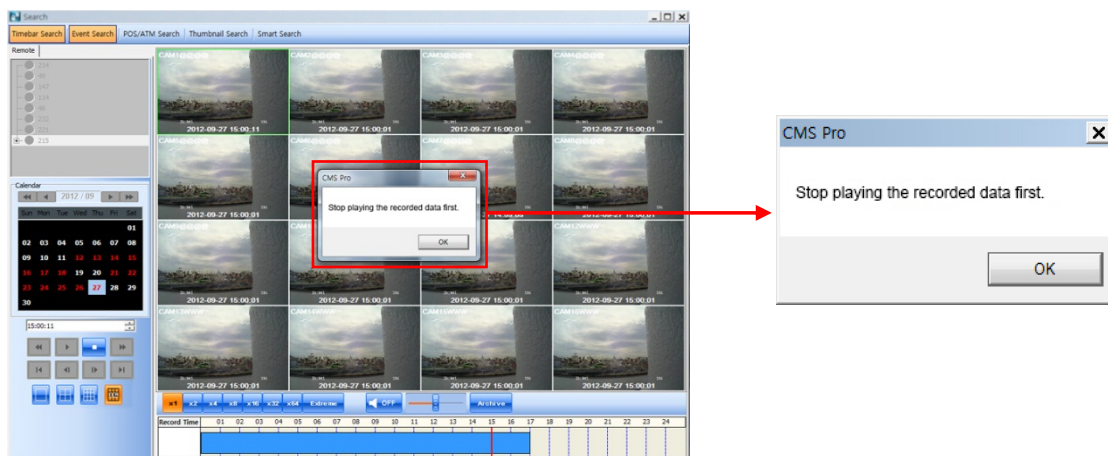

NOTE


Users can change the speed of rewind and fast forward from x1 to Extreme. It is speed of REW and FF, not the one of play.

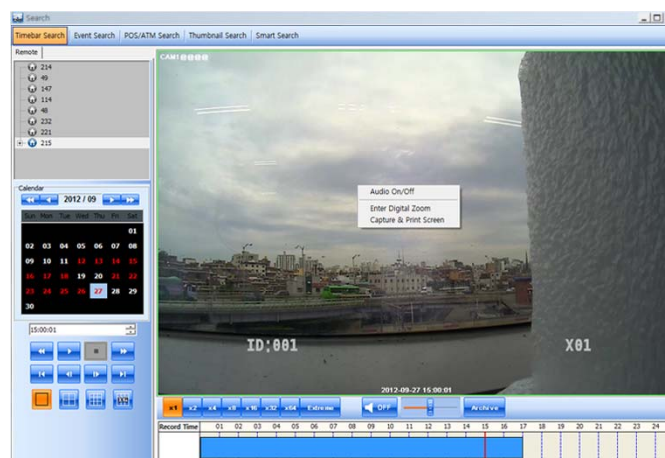


- Users can use Right click to access Audio On/Off, Digital Zoom and Capture and Print Screen.
 - Audio On/Off: User can enable audio function. If Audio is connected Audio Status will change.
 - Enter Digital Zoom: User can use Digital zoom. Please refer 1.7.2.4 Digital Zoom.
 - Capture and Print Screen: User can capture image. Please refer 1.7.2.6 Screen Capture and Image.


NOTE

Audio and Digital Zoom are supported only in 1CH display mode.

- In the playback menu, users are able to decide to search the data from the beginning of the day or from the cursor position.
- Or just simply click on the time line users want, and then click “” button on the left.

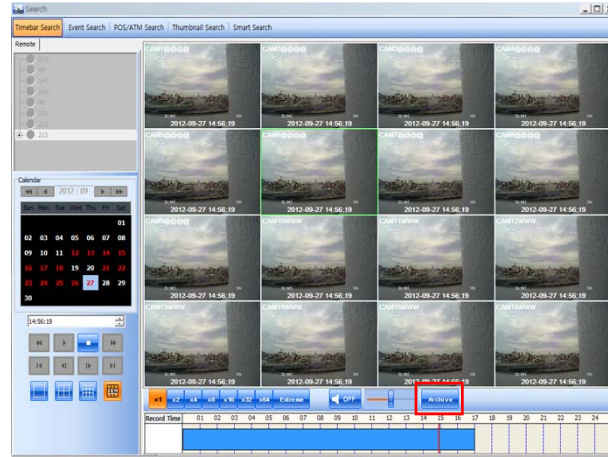


- Click “Archive” button to set up the Archive.
- In this menu, it is available to set the start time, end time, file name, the location of the file, password and the cameras to store.
- After finishing setup, click “Start EXE Backup”.

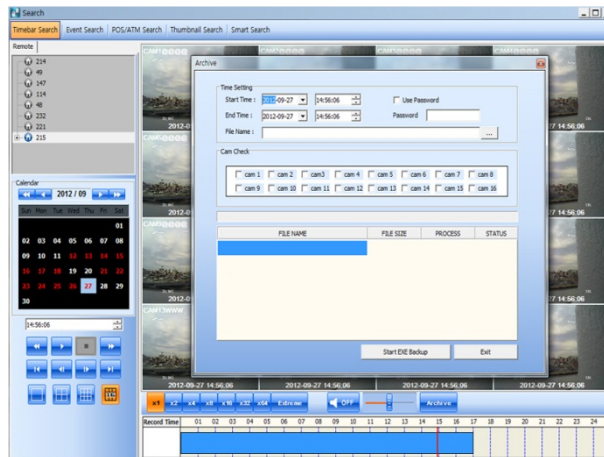**NOTE**

Archiving function is available only in time bar search.

6.8.3 Event Search


- Click the “connect” after right mouse clicking on the device and select the “Event Search”.
- Check the event type which users wish to search among “Emergency”, “Alarm” and “Motion”.
- (Users can select more than 2 event types at the same time)
- Select a camera to search. (Only 1 camera can be selected in event search.)
- Set up the start time and end time in Date/Time setting and click “Search” button.

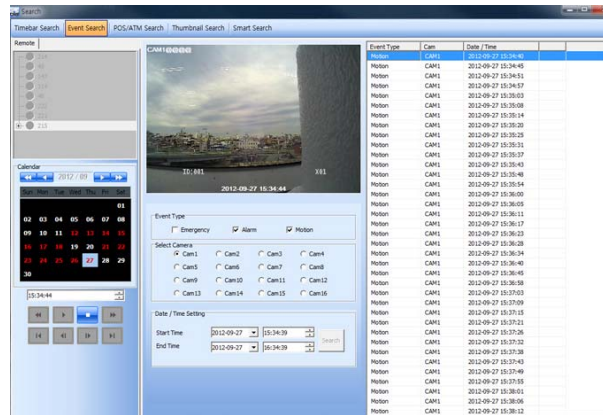

- To check the event that is detected on the right side of the search window, double click the event that users want.

6.8.4 POS/ATM Search


- Click the “connect” after right mouse clicking on the device and select the “POS/ATM Search”.
- Type the text that users want to find in the “POS / ATM” text box.
- Select a camera to search. (Only 1 camera can be selected in this search.)
- Set up the start time and end time in Date/Time setting and click “Search” button.
- The detected text will be displayed in the right side of the search window.
- Double click or click on the event(Text In) and click the play button “▶” to check the playback..
- Text Option – Display unit is transaction (Database)

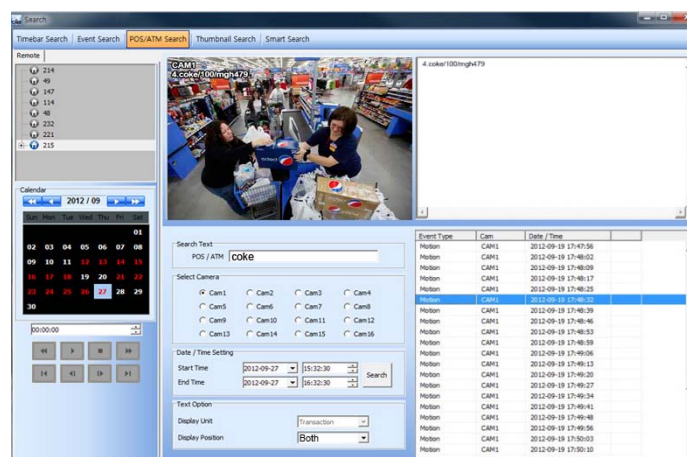

- Display Position – Users are able to select the display option of the playback.
 - Text Window: Only text will be displayed in the top right side of the search window during the playback.
 - Overlay: The text will be overlaid on the playback video.
 - Both: The text will be overlaid on the video and the text window as well.
 - Hide All: The text will not be displayed in both video and the text window.
- To check the event that is detected on the right side of the search window, double click the event that users want.


6.8.5 Thumbnail Search

- Click the “connect” after right mouse clicking on the device and select the “Thumbnail Search”.
- This search function provides the users with the certain number of snapshots of the recorded video of the selected camera.
- It is very convenient and efficient in the aspect that it can save the time to search the data that users want to find by checking the snapshot of every pre-set time.
- Users are able to select the duration of the playback in “Thumbnail Duration” from 1Min to 60Min. (1, 3, 5, 10, 20, 30 and 60Min)
- The number of “Max Capture Count” can be setup as 32, 64, 128 and 256.
- Like other search functions, set up the start time and end time in Date/Time setting and click “Search” button.
- Double click the founded snapshot to check and play the video.
- Click “Stop Search” to stop the search and check the video to the stop time.
- The video will be displayed in the “video display” panel at the bottom of the search window.
- Users can move the panel around the screen and adjust the size of the panel as users want.

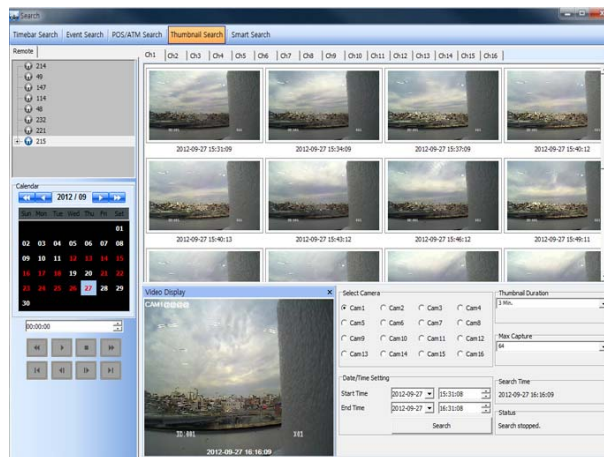

6.8.6 Smart Search

- Click the “connect” after right mouse clicking on the device and select the “Smart Search”.
- This search function provides the users with the smart search option.
- Users can select the area in an individual channel by dragging the certain area in “setting” menu.
(More than 2 areas can be designated in the setting pane.)
- If the movement is detected in the area, it will automatically display the video clip in the search window.
- Users are able to select the one from the 3 types of sensitivity level; Super, High and Standard.

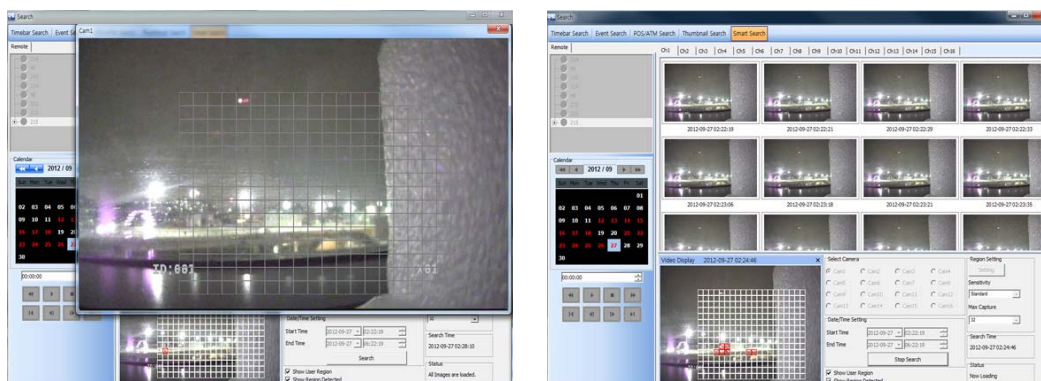


6.9 E-Map

6.9.1 Overview

- The 'Map Viewer' program is to display event signals over map images so that users may acknowledge event status with geographical information.
- Users may perceive event occurrence status with visual notifications on icons over the map image and audible notifications on speaker system of a PC. By clicking on the camera icons on the map, users may launch 'Instant Viewer' window.
- To utilize 'Map Viewer' properly, users should configure map before running 'Map Viewer' program.
(Please refer to Local setup – E-map in chapter 4.4)


6.9.2 Controls

- Users can load the Map Viewer which was set up "in Local Setup - E-Map" by clicking right mouse button on the map in the map list.
- Users can check the information of the device connected E-map in the right side of the Map viewer such as Device status, name, IP / Domain, the maximum number of Camera, Alarm in / out and Audio.

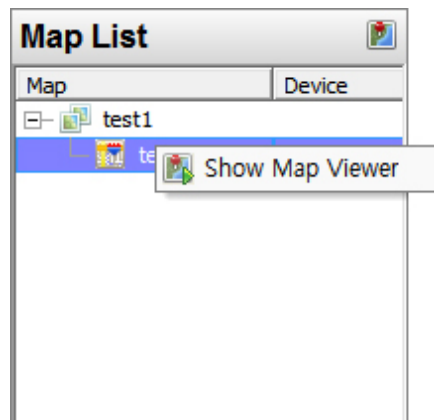

6.9.3 E-map Camera – Instant Playback

- Users are able to load the instant viewer by clicking the camera icon on the map, change the size of the video and move it around the screen.
- Full screen mode is available by clicking right mouse button and select "Full screen".
- Click audio icon to listen to the audio in the site where the audio input is connected.
- Click the alarm out icon to give the signal to the alarm equipment in the site such as siren or buzzer.

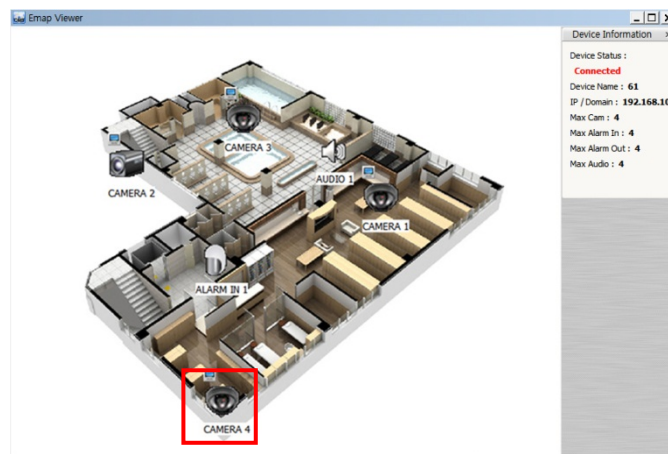




6.9.4 Alarm In/Out Control

- The Alarm In icon on the map will be light on when the Alarm In equipment like sensor or detector is activated in the site.
- If users click the Alarm Out icon, the light is on the icon and the alarm equipment such as siren and buzzer will be activated in the site.


6.9.5 Audio

- Users can hear the audio in the site by clicking the icon on the map.

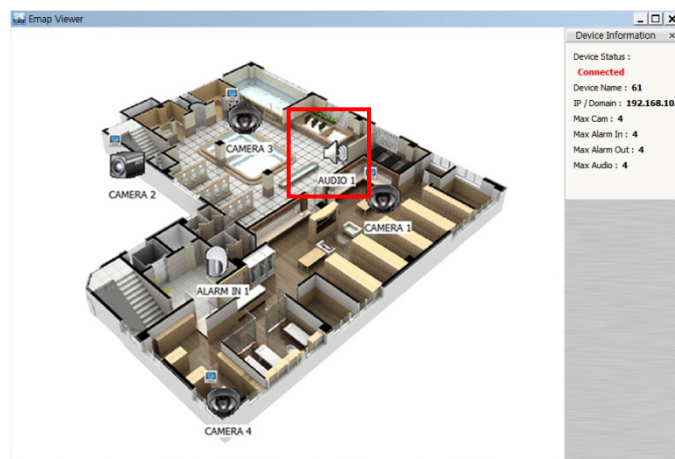


6.10 Uninstalling CMS Pro


- Please click the “Uninstall” file in the CMS Pro folder in the PC.

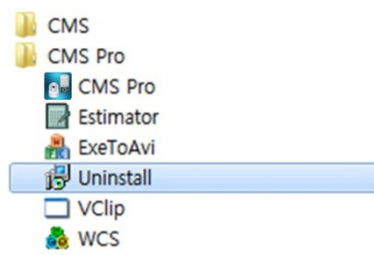

- Click the uninstall file and the following message box will pop up.
- Click “OK” to remove the program and its components.

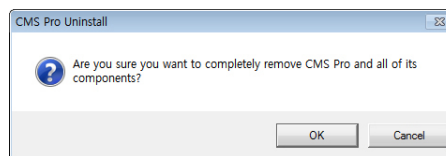

- If uninstall is complete successfully, the following message will pop up.

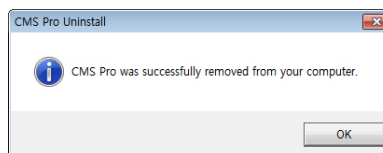

iCMS

User`s Manual




7. iCMS VIEWER


7.1 System Recommendations

7.1.1 Program installation Method

- Please follow the program installation procedures below.
- Open the file 'iCMS.dmg'.

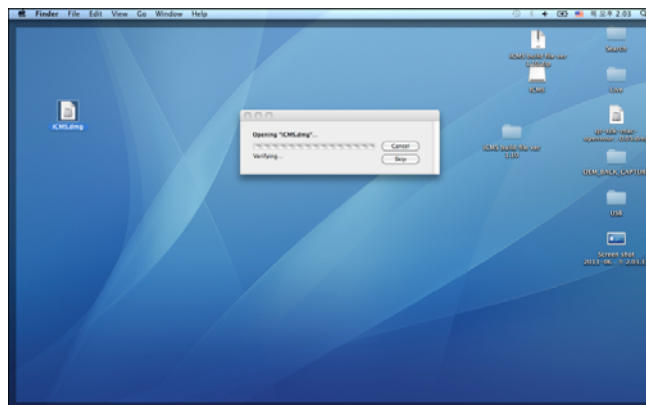

- Virtual driver will be installed (Driver name is "iCMS").

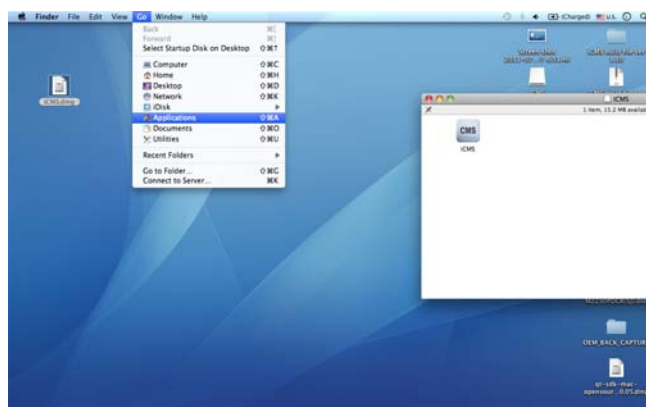

- In the virtual driver, users will find iCMS icon. Please move the iCMS icon to 'Application' folder ('Application' folder is located in the 'Go' Menu below).



7.2 Login


- After installation of the software, iCMS icon appears in '**Application**' folder.
- Please double click on the icon to execute the program.
- Select User Name by clicking upside down arrow and enter corresponding Password to login.



7.3 Watch Mode


7.3.1 Log-in Screen

- Please click 'Device manager' and the following screen will appear.

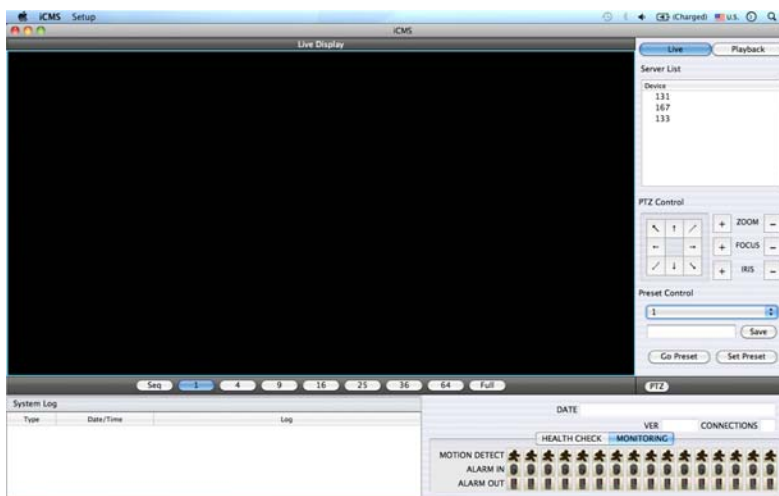


7.3.2 Local Setting

- Please click 'Setup' button on the top of the Toolbar and the following screen will appear.
- There are three types of setup such as Device Manager, Display Setup and Password Change.

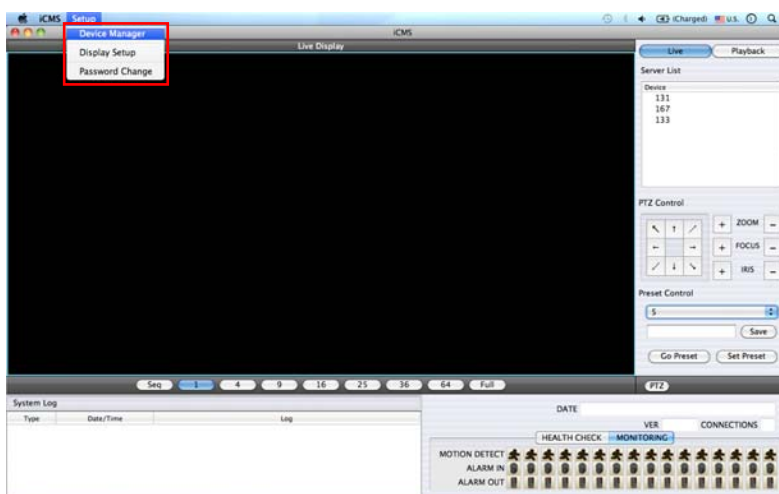

7.3.2.1. Display Manager

- Please click 'Device manager' and the following screen will appear.

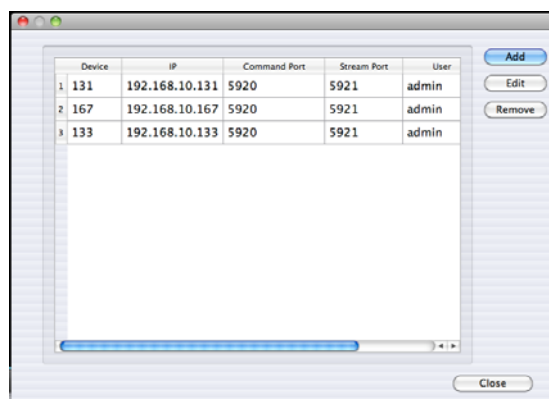

- Users will see the already existing DVRs on the list, if there is any added DVR previously.
- Please click '**Add**' to add new device.




A dialog box titled "Device Info" with several input fields and three buttons at the bottom.

Device Name	<input type="text"/>
Description	<input type="text"/>
IP	<input type="text"/>
Command Port	<input type="text"/>
Stream Port	<input type="text"/>
User Name	<input type="text"/>
Password	<input type="password"/>
Confirm Password	<input type="password"/>

Buttons: Scan Device, Cancel, OK

- Please type all the necessary information in the empty space and click 'OK' to submit the device information
- **Device Info**
 - Device Name: input the DVR site name which will be displayed on the Server list. Please note that this name has nothing to do with the ID registered in DVR. Users may create the name that is fairly easy to distinguish.
 - Description: type brief description of the site
 - IP Address: input IP address or Domain Name of DVR (check with SETUP>DEVICES>Network in DVR).
 - Command Port: input Administrator's number among port numbers set in DVR (check with SETUP>DEVICES>Network in DVR).
 - Stream Port: INPUT Video/Audio number among port numbers set in DVR (check with SETUP>DEVICES>Network in DVR).
 - User Name: Type authorized ID of the DVR. Default ID is **admin**.
 - Password: Type correspond password of the ID. Default Password is **1111**.
 - Confirm Password: Retype the password to confirm.
- If users want to scan the devices instead of typing the information manually, please click '**Scan device**'. It will automatically detect registered DVR units currently connected to local networks.
- Click "**Scan Device**", then following '**Dialog**' will pop up.

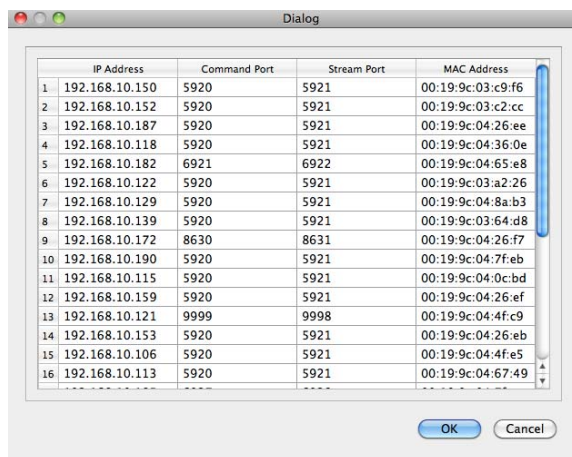

A dialog box titled "Dialog" containing a table with 4 columns: IP Address, Command Port, Stream Port, and MAC Address. The table lists 16 detected DVR units. At the bottom are "OK" and "Cancel" buttons.

	IP Address	Command Port	Stream Port	MAC Address
1	192.168.10.150	5920	5921	00:19:9c:03:c9:f6
2	192.168.10.152	5920	5921	00:19:9c:03:c2:cc
3	192.168.10.187	5920	5921	00:19:9c:04:26:ee
4	192.168.10.118	5920	5921	00:19:9c:04:36:0e
5	192.168.10.182	6921	6922	00:19:9c:04:65:e8
6	192.168.10.122	5920	5921	00:19:9c:03:a2:26
7	192.168.10.129	5920	5921	00:19:9c:04:8a:b3
8	192.168.10.139	5920	5921	00:19:9c:03:64:d8
9	192.168.10.172	8630	8631	00:19:9c:04:26:f7
10	192.168.10.190	5920	5921	00:19:9c:04:7f:eb
11	192.168.10.115	5920	5921	00:19:9c:04:0c:bd
12	192.168.10.159	5920	5921	00:19:9c:04:26:ef
13	192.168.10.121	9999	9998	00:19:9c:04:4f:c9
14	192.168.10.153	5920	5921	00:19:9c:04:26:eb
15	192.168.10.106	5920	5921	00:19:9c:04:4f:e5
16	192.168.10.113	5920	5921	00:19:9c:04:67:49


- Including IP address, the information of connected DVRs in the network will be listed.
- Select the one and click '**OK**'. Then, the following window will pop up.



The 'Device Info' dialog box contains the following fields and buttons:

- Device Name: [Text Field]
- Description: [Text Field]
- IP: 192.168.10.72
- Command Port: 5920
- Stream Port: 5921
- User Name: [Text Field]
- Password: [Text Field]
- Confirm Password: [Text Field]
- Buttons: Scan Device, Cancel, OK

- Please fill out all the necessary information including Device name, Description (not necessary), User Name and Password and confirm password. Please note that the User Name and Password have to be same as the DVR setting.
- When users want to edit the existing device information, please choose the device and click 'Edit'.
- When users want to delete the existing device information on the list, please select the device and click 'Remove'.
- If users click the 'Remove' button, it will show the message below.

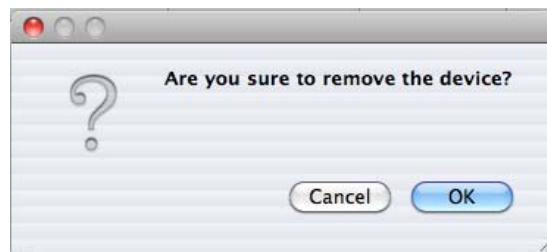


The dialog box displays a question mark icon and the text 'Are you sure to remove the device?'. It includes 'Cancel' and 'OK' buttons.

- Please click the 'OK' button to remove the connected device.

7.3.2.2. Display Setup

- Please click 'Display Setup' and the following screen will appear.

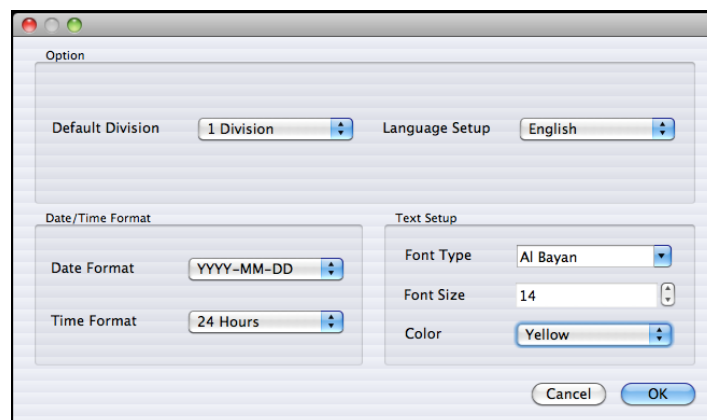

The 'Display Setup' dialog box is divided into several sections:

- Option:**
 - Default Division: 1 Division
 - Language Setup: English
- Date/Time Format:**
 - Date Format: YYYY-MM-DD
 - Time Format: 24 Hours
- Text Setup:**
 - Font Type: Al Bayan
 - Font Size: 14
 - Color: Yellow
- Buttons: Cancel, OK


- Users can adjust and set the environment of the display window.
 - Default Division: Users can select the number of division of display channels when the program initially displays the screen. (1, 4, 9, 16, 25, 36 or 64).
 - Users can choose either English or Korean in language setup.

NOTE

This option will be applied after program restarts.

- Date / Time format: Users can adjust and set the mode of date / time display in accordance with the location.

- Date Format: select the date format among YYYY-MM-DD/MM-DD-YYYY/DD-MM-YYYY.
- Time Format: select the time format between 24Hours/ 12 Hours AM/PM.
- Display Font: Users can change the font of the name and display time of each channel.
 - Font Type: select the type of font between Arial / Courier.
 - Font Size: select the size of the font from 10 to 20 and the default is 15.
 - Color: select the color among 16 different colors.

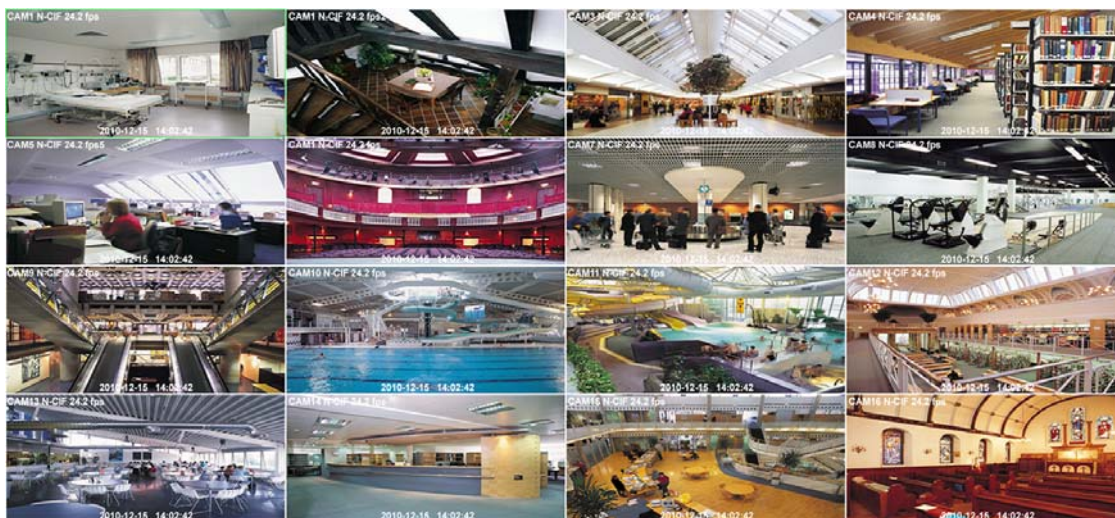

7.3.2.3. Password Change


- Please click Password Change in setup menu to change the password.

- Please select the ID from the drop down list and type original password.
- Please type new password and confirm the password below.
- If the information is filled out, click 'OK' to finish the Password change.


7.3.3 Live

7.3.3.1. Connection

- Please choose one of the registered sites in Server list on the right hand side of the 'Live Display' screen and the right click on the mouse button will pop up the menu with 'Connect'.
- Click 'Connect' to connect the DVR to the 'iCMS'.

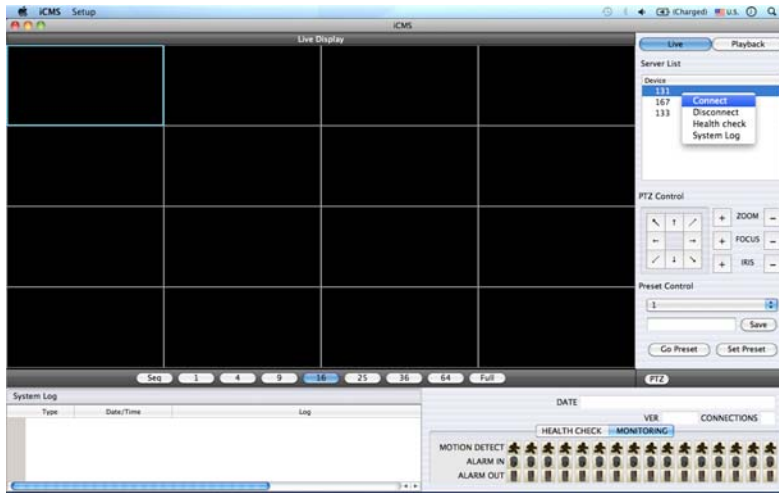

- To have multiple channels, please choose the channel from the bar below the 'Live Display' screen (1, 4, 9, 16, 25, 36, 64 and Full).

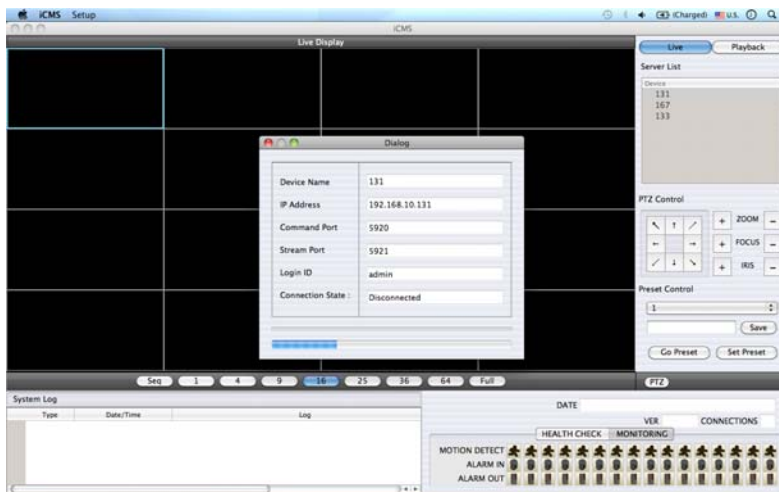


- **Full Screen Mode:** Select a channel and click on number "1" button. Then, the corresponding channel will display in Full Screen.
- **Quad Screen Mode:** Click on No.4 button and a quad screen will display. The quad screen is in combination of 1~4, 5~8, 9~12 and 13~16. If users select Channel No. 7 and click the button, 5~8 quad screen will display. Similarly, if users select Channel No. 16, 13~16 quad screen will display.
- **9-Split Screen Mode:** Click on No.9 button and 9-split screen will display. The 9-split screen is in combination of 1~9 and 8~16. If users select Channel No. 9 and click the button, 1~9 split screens will display. Similarly, if users select Channel No. 10, 8~16 split screens will display.
- **16-Split Screen Mode:** Click on No.16 button and 16-split screens will display.
- **25-Split Screen Mode:** Click on No.25 button and 25-split screens will display.
- **36-Split Screen Mode:** Click on No.25 button and 36-split screens will display.
- **64-Split Screen Mode:** Click on No.64 button and 64-split screens will display.
- **Seq:** Click 'Seq' and then it will show an ordered list of display which will change the channel of live display to next channels. For example, In 4 channel display CH5 to CH8 on the display screen will change to CH9 to CH12 sequentially.

NOTE


The selected channel is outlined in blue

7.3.3.2. Health Check


- Please choose one of the registered sites in Server list on the right hand side of the 'Live Display' and the right click on the mouse button will pop up the menu with 'Health Check'.
- Please choose 'Health check' function when users want to check the status of the DVRs.
- Now users can choose either Health Check or Monitoring to see the status of the DVR at the bottom of the right corner.

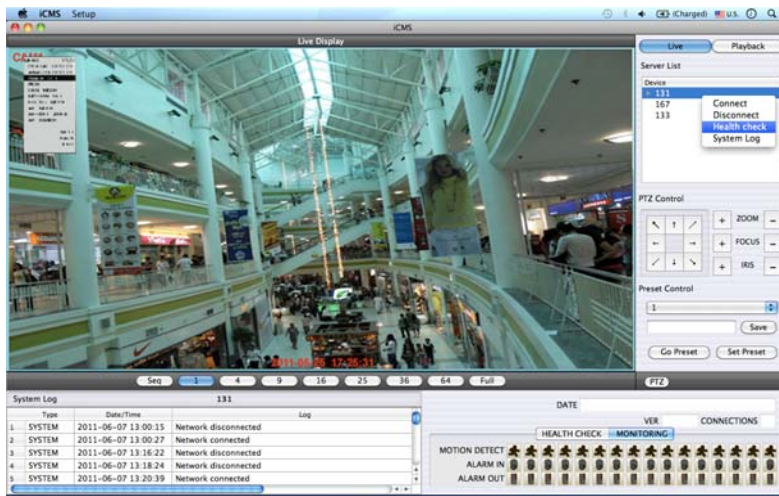

- Health check shows the status of how many cameras are activated, how many HDDs are available, and how many channels are recorded.

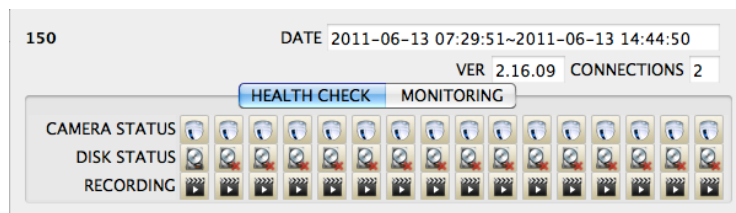


- Monitoring shows the status of the number of motion detection and how many alarm in and alarm out are activated.

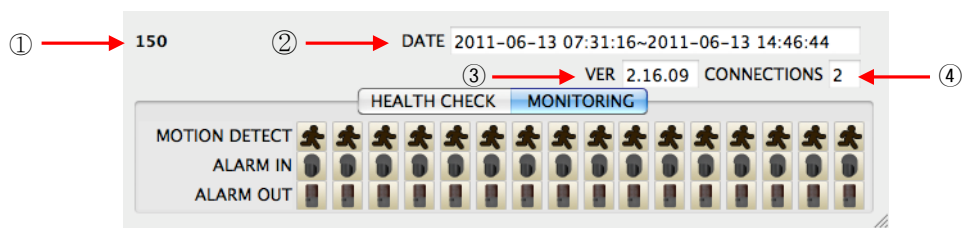


Number	Description
1	DVR name
2	Start and finish recorded date and time
3	The version of the firmware
4	The number of Connected network(ex. CMS, Mobile CMS, etc.) to the DVR

7.3.3.3. PTZ Control

- Under the server list, PTZ control can be found. This is for the control of Pan/Tilt/Zoom.
- Buttons on the screen have the following functions.
 - Up/Down/Left/Right direction buttons

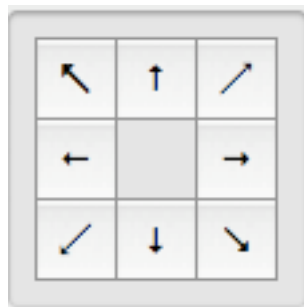

- Zoom In/Out, Focus Near/Far, Iris Close/Open

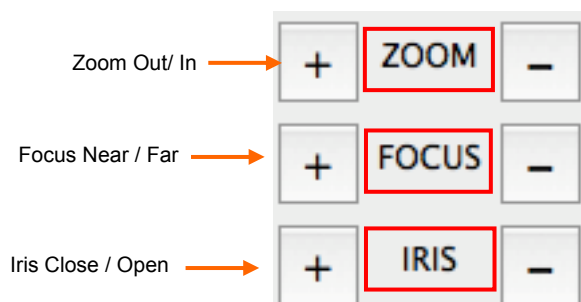

- Preset Control button



- Please choose the number from the drop down list from 1 to 256.
- After selecting the number, please type the description on the empty space below the drop down list and click "Save".
- If users think that the certain spot is important or need to have precautions, then they can set up the spot as '**Preset**'.
- When the preset is setup up, click '**Go Preset**' to move to preset spot.
 - PTZ control menu can be hidden by clicking PTZ ICON below the PTZ menu.

7.3.3.4. System Log

- In the Live mode, system Log is shown. This will allow users to check System Log of Remote Site (DVR).


System Log		131	
	Type	Date/Time	Log
1	SYSTEM	2011-06-07 13:16:22	Network disconnected
2	SYSTEM	2011-06-07 13:18:24	Network disconnected
3	SYSTEM	2011-06-07 13:20:39	Network connected
4	SYSTEM	2011-06-07 13:20:56	Network disconnected
5	SYSTEM	2011-06-07 13:22:04	Network connected

7.4 Search Mode

- This involves searching recorded video to playback the video of a specific date and time.
- Users are able to search the recorded data in the iCMS program by Date/Time, Event, POS/ATM Search.
 - **Date/Time Search:** search by inputting date/time.
 - **Event Search:** search by event.
 - **POS/ATM Search:** search by POS or ATM text with time.

7.4.1 Date/Time Search


- Click Playback and following screen will appear.

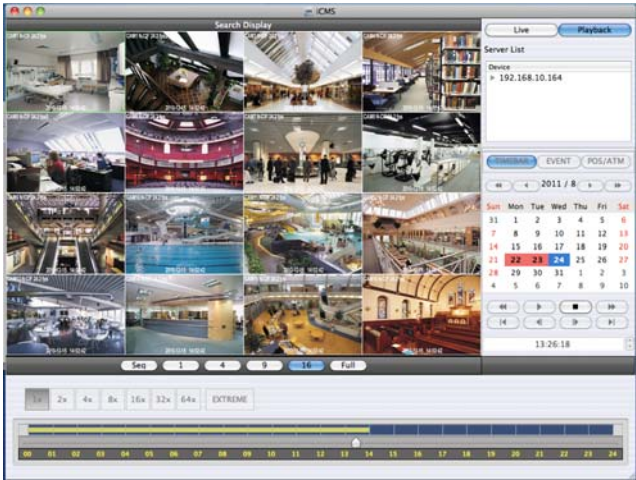

- Please choose one of the devices to playback from the Server List.
- Select Date
 - In calendar, dates with recorded data are marked in red.
- Select the date among the dates marked in red.
- Select Time
 - Please select the time that users want to playback by clicking ▲, ▼ buttons on the right-hand side to adjust the time or drag the Time Select Bar with mouse.



◀◀	Search previous 'Year'
▶▶	Search subsequent 'Year'
◀	Search previous 'Month'
▶	Search subsequent 'Month'

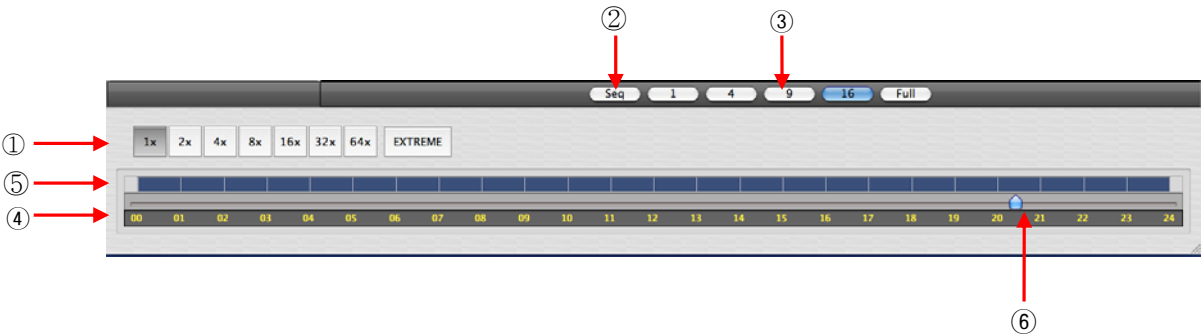


1	Fast Forward/Backward & Playback (Click the button to increase the speed by x1, x2, x4, x8, x16, x32, x64 and Extreme)
2	Sequence Mode
3	Display Mode(Click the button to divide the screen by 1, 4, 9, 16 and Full
4	Time Bar (24 Hour)
5	Data Bar (Recorded data)
6	Time Select Bar

- When Date/Time search is completed, please click Playback control button to begin playback.

7.4.2 Event Search

- The Event button allows users to search event recorded data of DVR.
- To start the event search, please click '**EVENT**' and users will see the following screen.

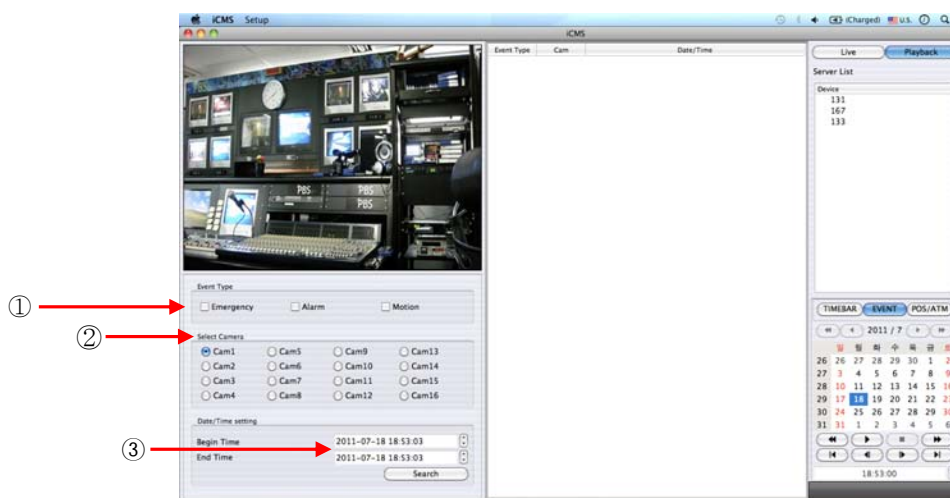

- Please choose one of the devices among the '**Server List**' and right click on the mouse to have popup menu with Connect.
- Please click '**Connect**' to start the event search
- Event search has three different parts called Event Type, Select Camera and Date/Time setting.
 - ① **Event Type**: it has three event types which are Emergency, Alarm and Motion. Please choose one event that users want to detect.
 - ② **Select Camera**: Please select the camera that users want to view from Cam1 to Cam 16 for the event (Only 1 camera can be selected).
 - ③ **Date/Time setting**: Please select the begin and end time by clicking the up/down arrows and click "Search"

7.4.3 POS/ATM

- POS/ATM button allows users to search for the POS/ATM text.
- Please click '**POS/ATM**' button right next to the '**EVENT**' and users will see the following screen.
- Please choose one of the devices among the 'Server List' and right click on the mouse to have popup menu.
- Please click '**Connect**' to start the event search
- Event search has three different parts called Event Type, Select Camera and Date/Time setting.
 - ① **Select Camera**: select a camera to search (Only 1 camera can be selected in this search).
 - ② **Date/Time setting**: please set up the start and end time
 - ③ **Text Option**
 - **Display Option**: Users are able to select the display option of the playback.
 1. Text window: The detected text will be shown on the '**Windows text**' right next to the '**Display screen**'.
 2. Overlay: The text will be overlaid on the playback video.
 3. Both: The text will be overlaid on the video and the text window as well.
 4. Hide All: The text will not be displayed in both video and the text window.


① → Select Camera

② → Date/Time Setting

③ → Text Option

Display Option: Text Window

POS / ATM: Search

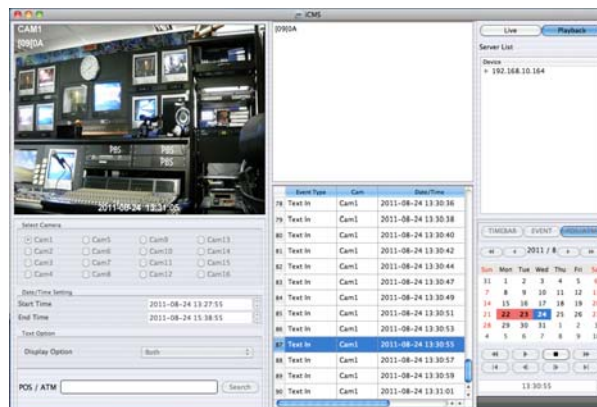

- Display Option – Users are able to select the display option of the playback.
 - ④ Text window: The detected text will be shown on the 'windows text' right next to the display screen.
 - ⑤ Overlay: The text will be overlaid on the playback video.
 - ⑥ Both: The text will be overlaid on the video and will be displayed in the text window as well.
 - ⑦ Hide All: The text will not be displayed in both video and the text window.
- Please fill out the text box with the searching word.

POS / ATM: Search


- Please click 'Search' when all the necessary requirements are filled out..
- The following screen shows the result of the POS/ATM search.

	Event Type	Cam	Date/Time
1	Text In	Cam1	2011-06-14 16:09:39
2	Text In	Cam1	2011-06-14 16:09:48
3	Text In	Cam1	2011-06-14 16:09:51
4	Text In	Cam1	2011-06-14 16:09:53
5	Text In	Cam1	2011-06-14 16:09:55
6	Text In	Cam1	2011-06-14 16:09:56
7	Text In	Cam1	2011-06-14 16:09:58
8	Text In	Cam1	2011-06-14 16:10:01
9	Text In	Cam1	2011-06-14 16:10:03
10	Text In	Cam1	2011-06-14 16:10:04
11	Text In	Cam1	2011-06-14 16:10:06
12	Text In	Cam1	2011-06-14 16:10:09
13	Text In	Cam1	2011-06-14 16:10:12



- Double click on the event to playback of the data.

7.5 Disconnection

- When disconnect, please right click on the connected site and choose 'Disconnect'

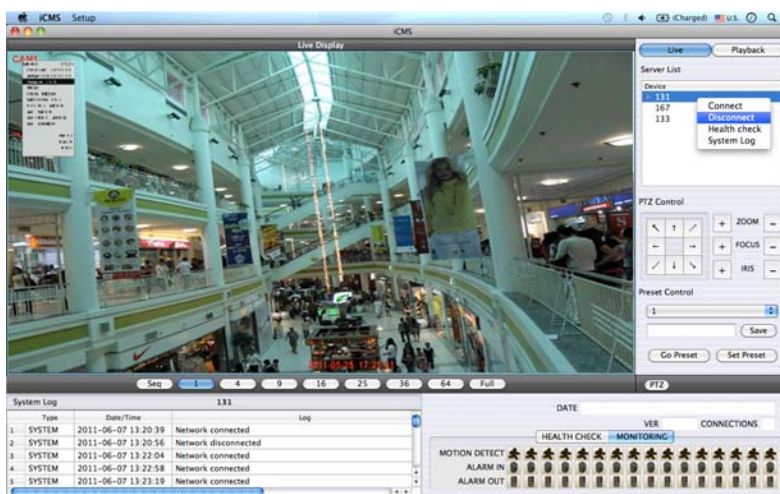

- if users click 'Disconnect', the message box below will appear

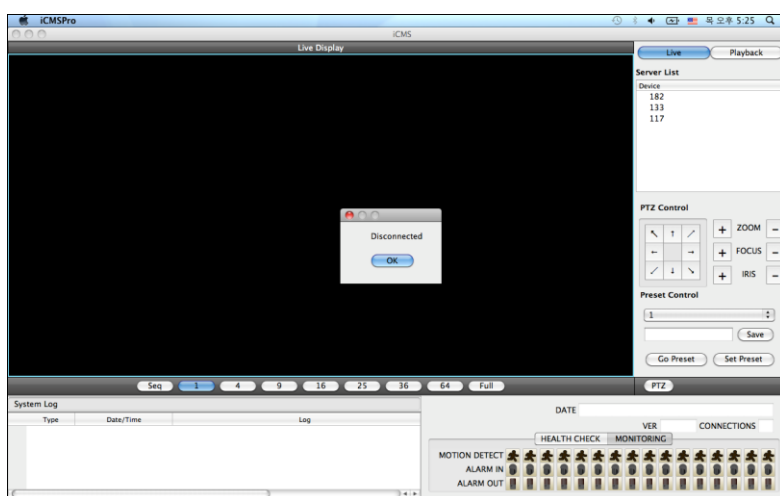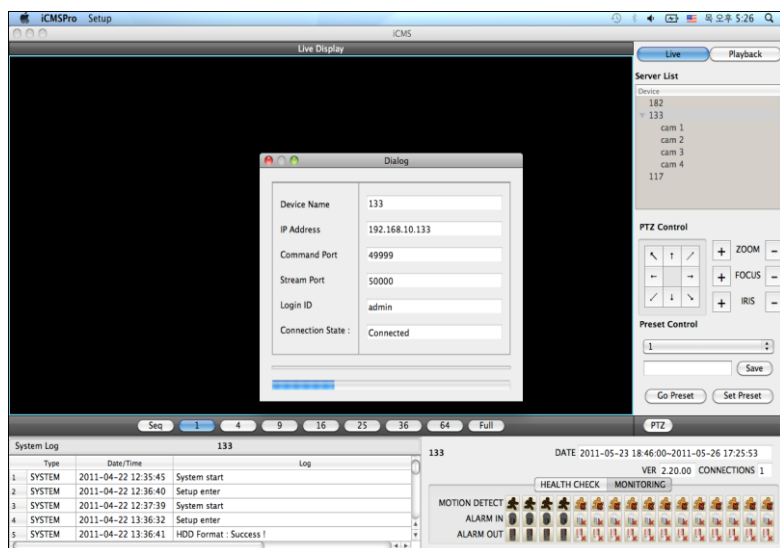

xCMS

User`s Manual



8. xCMS VIEWER

8.1 System Recommendations

8.1.1 Program Installation Method


- Please follow the program installation procedures below.
- Please select the '**Activities**' on the top left side of the corner, and choose Home directory




- Please select the '**xCMS**' file and move the file to the Home directory




- Right click on the mouse and select '**Properties**'.

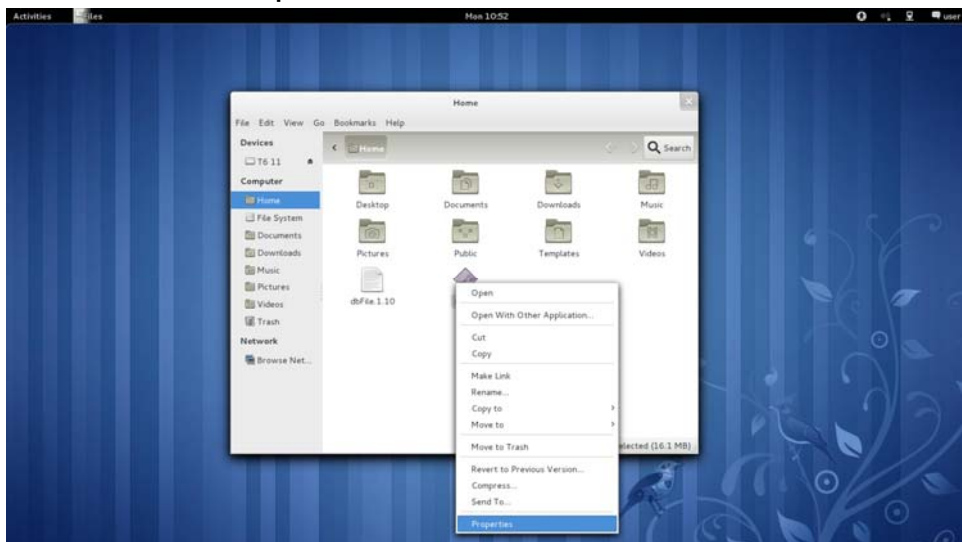


- Please select the '**Permission**' on the bar menu.

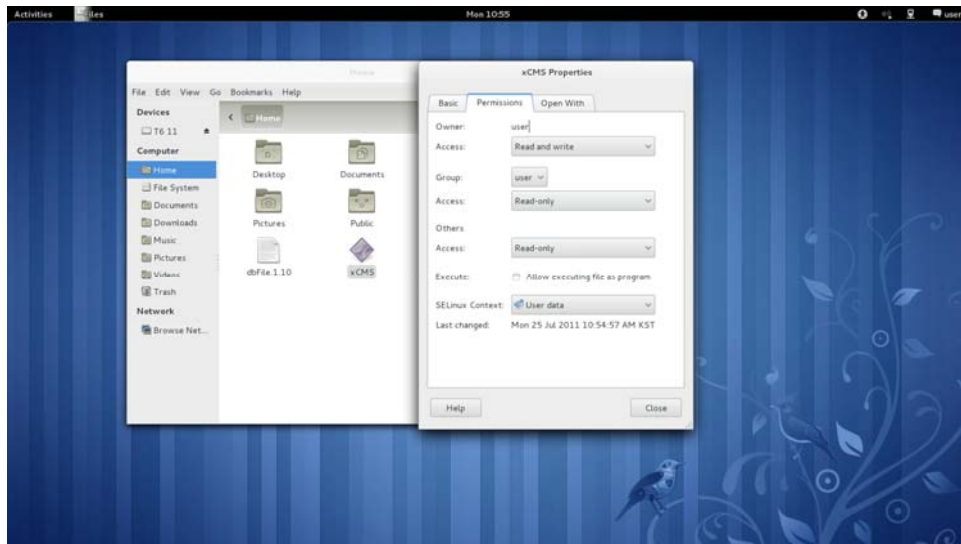

- Please check the box right next to the "**Allow executing file as program**" and if users want to give access to other groups, please change the access level to Read and write.

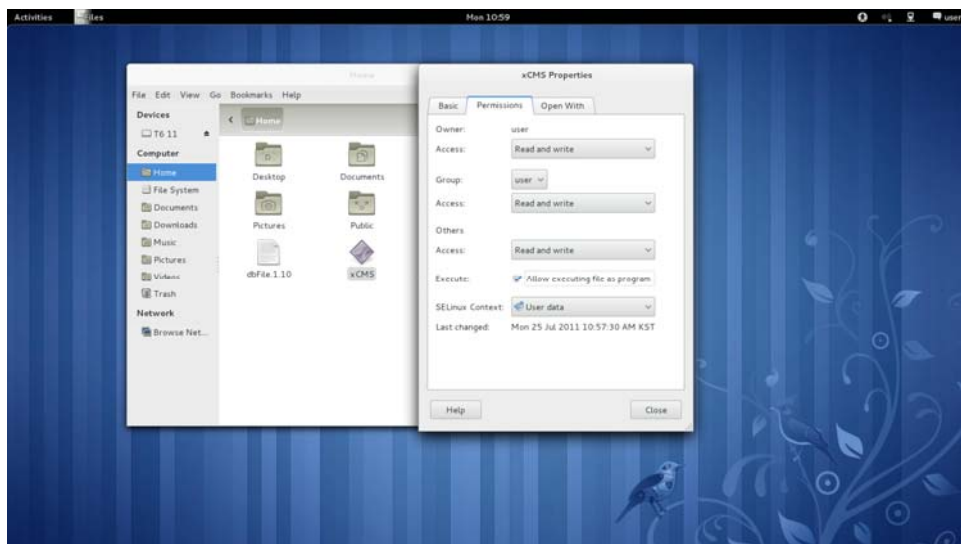


- Right click on the 'xCMS' and select 'Open'

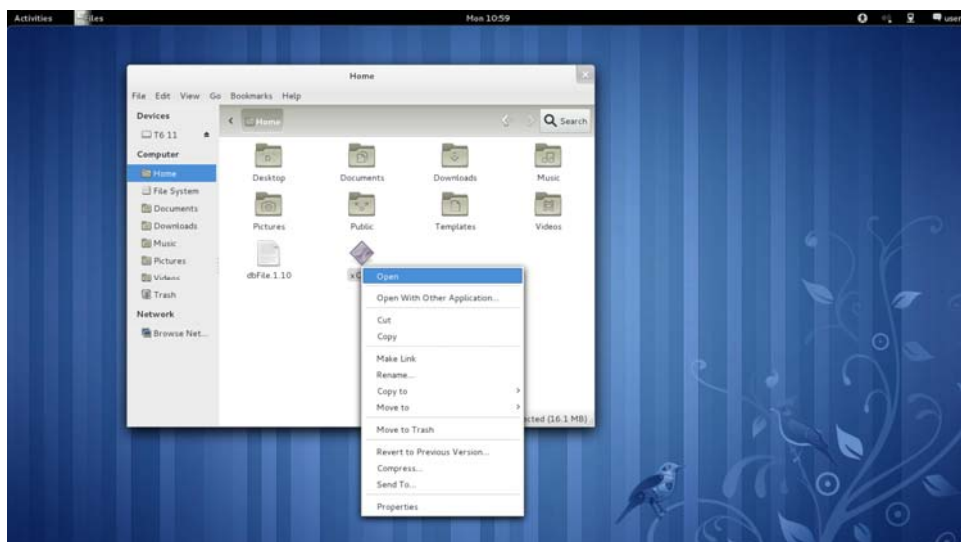

8.2 Login


- Please right-click on the icon and select open to execute the program.
- Select User Name by clicking upside down arrow and enter corresponding Password to login.

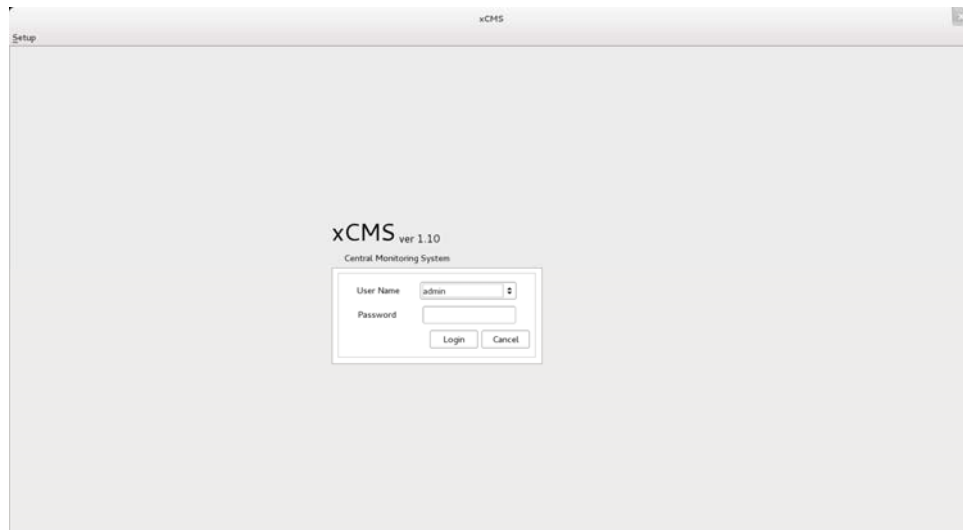

8.3 Watch Mode

8.3.1 Login Screen

- After users log into the 'xCMS', the following screen will appear.

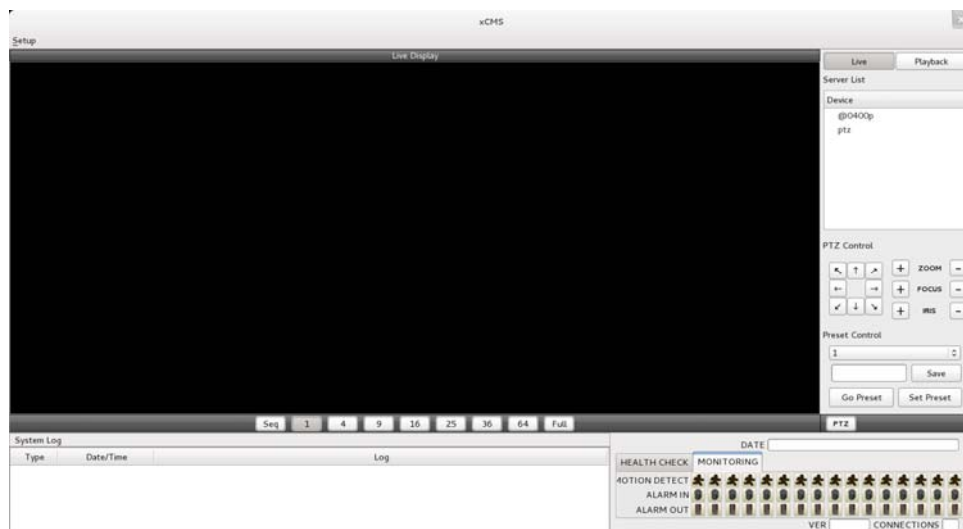


8.3.2 Local Setting

- Please click '**Setup**' button on the top of the Toolbar and the following screen will appear.
- There are three types of setup menu such as Device Manager, Display Setup and Password Change.



8.3.2.1 Device Manager


- Please click '**Device manager**' and the following screen will appear.

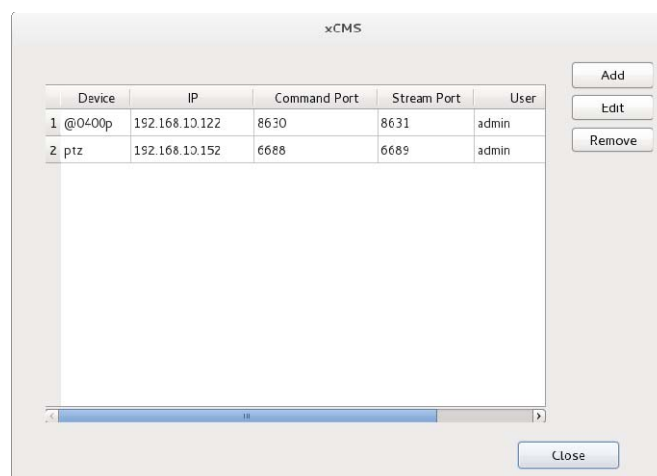

- Users will see the already existing DVRs on the list, if there is any added DVR previously.
- Please click '**Add**' to add new device.

The screenshot shows the 'Device Info' form in xCMS. It contains several input fields for device configuration: 'Device Name', 'Description', 'IP', 'Command Port', 'Stream Port', 'User Name', 'Password', and 'Confirm Password'. At the bottom, there are three buttons: 'Scan Device', 'Cancel', and 'OK'.

- Please type all the necessary information in the empty space and click 'OK' to submit the device information
- **Device Info**
 - Device Name: input the DVR site name which will be displayed on the Server list. Please note that this name has nothing to do with the ID registered in DVR. Users may create a name that is fairly easy to distinguish.
 - Description: type brief description of the site.
 - IP Address: input IP address or Domain Name of DVR (check with SETUP>DEVICES>Network in DVR).
 - Command Port: input Administrator's number among port numbers set in DVR (check with SETUP>DEVICES>Network in DVR).
 - Stream Port: INPUT Video/Audio number among port numbers set in DVR (check with SETUP>DEVICES>Network in DVR).
 - User Name: Type authorized ID of the DVR. Default ID is **admin**.
 - Password: Type correspond password of the ID. Default Password is **1111**.
 - Confirm Password: Retype the password to confirm.
- If users want to scan the devices instead of typing the information manually, please click '**Scan device**'. It will automatically detect registered DVR units currently connected to local networks.
- Click "**Scan Device**", then following '**Dialog**' will pop up.

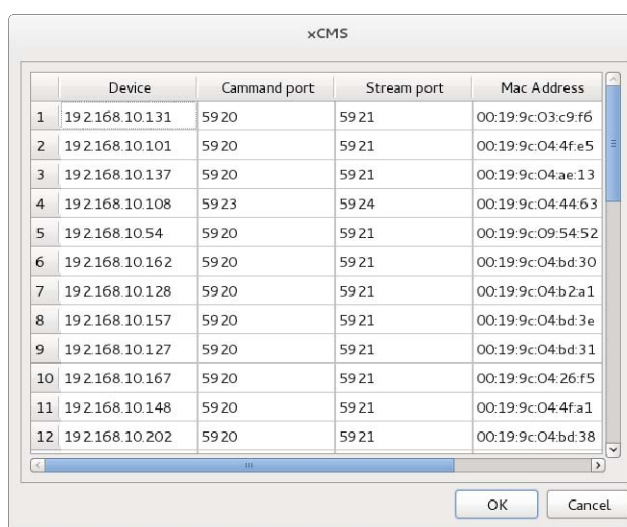

The screenshot shows a window titled 'xCMS' with a table of detected devices. The table has five columns: 'Device', 'Command port', 'Stream port', and 'Mac Address'. There are 12 rows of data, each representing a detected DVR unit. At the bottom of the window are 'OK' and 'Cancel' buttons.

	Device	Command port	Stream port	Mac Address
1	192.168.10.131	5920	5921	00:19:9c:03:c9:f6
2	192.168.10.101	5920	5921	00:19:9c:04:4f:e5
3	192.168.10.137	5920	5921	00:19:9c:04:ae:13
4	192.168.10.108	5923	5924	00:19:9c:04:44:63
5	192.168.10.54	5920	5921	00:19:9c:09:54:52
6	192.168.10.162	5920	5921	00:19:9c:04:bd:30
7	192.168.10.128	5920	5921	00:19:9c:04:b2:a1
8	192.168.10.157	5920	5921	00:19:9c:04:bd:3e
9	192.168.10.127	5920	5921	00:19:9c:04:bd:31
10	192.168.10.167	5920	5921	00:19:9c:04:26:f5
11	192.168.10.148	5920	5921	00:19:9c:04:4f:a1
12	192.168.10.202	5920	5921	00:19:9c:04:bd:38


- Including IP address, the information of connected DVRs in the network will be listed.
- Select the one and click '**OK**'. Then, the following window will pop up.



The screenshot shows a window titled 'xCMS' with a section labeled 'Device Info'. It contains several input fields for device information. At the bottom are 'Scan Device', 'Cancel', and 'OK' buttons.


Device Name	
Description	
IP	192.168.10.149
Command Port	6688
Stream Port	6689
User Name	
Password	
Confirm Password	

- Please fill out all the necessary information including Device name, Description (not necessary), User Name and Password and confirm password. Please note that the User Name and Password have to be same as the DVR setting.
- When users want to edit the existing device information, please choose the device and click 'Edit'.
- When users want to delete the existing device information on the list, please select the device and click 'Remove'.
- If users click the 'Remove' button, it will show the message below.

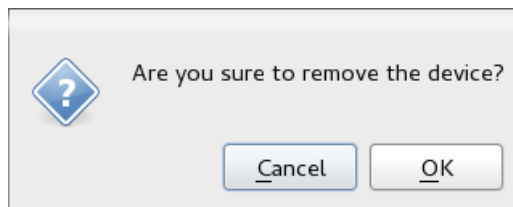

8.3.2.2 Display Setup

- Please click 'Display Setup' and the following screen will appear.

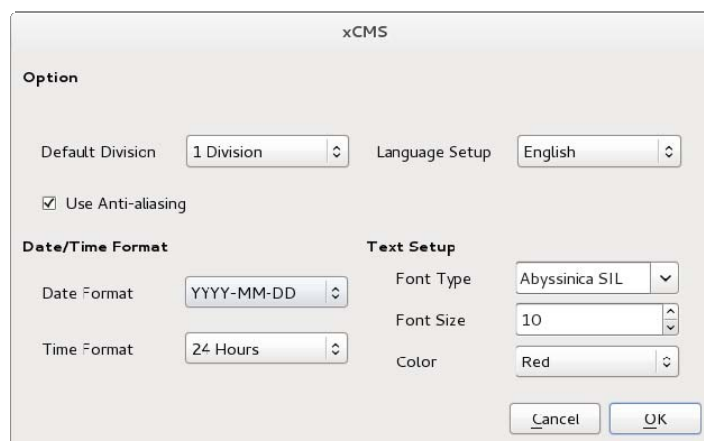

- Users can adjust and set the environment of the display window.
 - Default Division: Users can select the number of division of display channels when the program initially displays the screen. (1, 4, 9, 16, 25, 36 or 64).
 - Users can choose either English or Korean in language setup.

NOTE

This option will be applied after program restarts.

- Date / Time format: Users can adjust and set the mode of date / time display in accordance with the location.
 - Date Format: select the date format among YYYY-MM-DD/MM-DD-YYYY/DD-MM-YYYY.
 - Time Format: select the time format between 24Hours/ 12 Hours AM/PM.
- Display Font: Users can change the font of the name and display time of each channel.
 - Font Type: select the type of font between Arial / Curier.
 - Font Size: select the size of the font from 10 to 20and the default is 15.
 - Color: select the color among 16 different colors.



8.3.2.3 Password Change

- Please click Password Change in setup menu to change the password.




The image shows a dialog box titled 'xCMS' with the subtitle 'Password change'. It contains four input fields: 'ID' (a dropdown menu showing 'admin'), 'Password', 'New Password', and 'Confirm Password'. At the bottom, there are two buttons: 'Cancel' and 'OK'.

- Please select the ID from the drop down list and type original password.
- Please type new password and confirm the password below.
- If the information is filled out, click 'OK' to finish the Password change.


8.3.3 Live

8.3.3.1 Connection

- Please choose one of the registered sites in Server list on the right hand side of the 'Live Display' screen and the right click on the mouse button will pop up the menu with 'Connect'.
- Click 'Connect' to connect the DVR to the 'xCMS'.

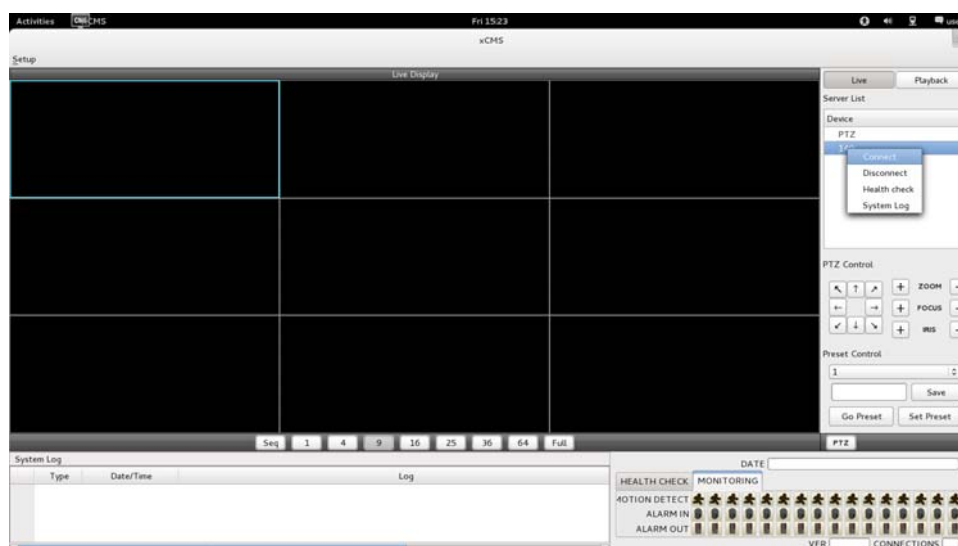

- To have multiple channels, please choose the channel from the bar below the 'Live Display' screen (1, 4, 9, 16, 25, 36, 64 and Full).

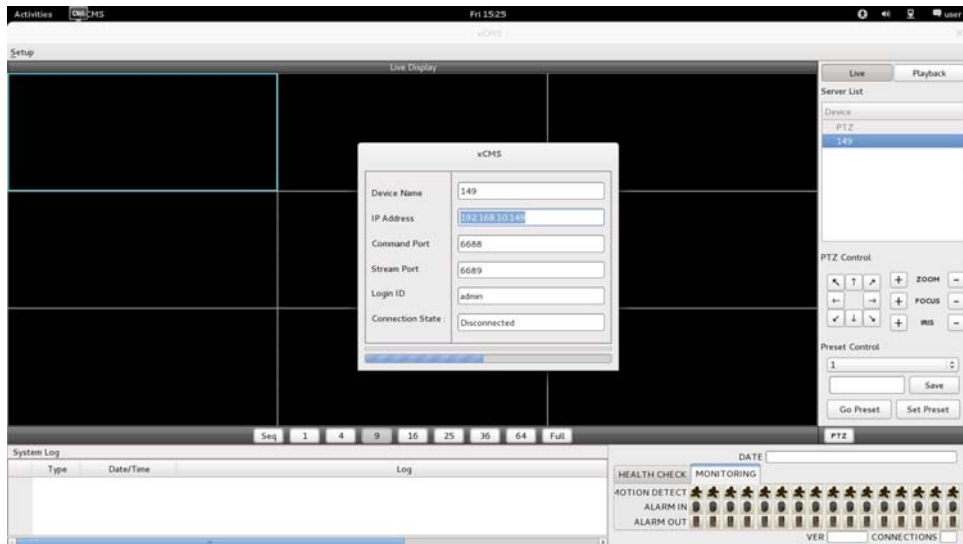


- **Full Screen Mode:** Select a channel and click on number “1” button. Then, the corresponding channel will display in Full Screen.
- **Quad Screen Mode:** Click on No.4 button and a quad screen will display. The quad screen is in combination of 1~4, 5~8, 9~12 and 13~16. If users select Channel No. 7 and click the button, 5~8 quad screen will display. Similarly, if users select Channel No. 16, 13~16 quad screen will display.
- **9-Split Screen Mode:** Click on No.9 button and 9-split screen will display. The 9-split screen is in combination of 1~9 and 8~16. If users select Channel No. 9 and click the button, 1~9 split screens will display. Similarly, if users select Channel No. 10, 8~16 split screens will display.
- **16-Split Screen Mode:** Click on No.16 button and 16-split screens will display.
- **25-Split Screen Mode:** Click on No.25 button and 25-split screens will display.
- **36-Split Screen Mode:** Click on No.25 button and 36-split screens will display.
- **64-Split Screen Mode:** Click on No.64 button and 64-split screens will display.
- **Seq:** Click ‘Seq’ and then it will show an ordered list of display which will change the channel of live display to next channels. For example, In 4 channel display, CH5 to CH8 on the display screen will change to CH9 to CH12 sequentially.

NOTE


The selected channel is outlined in blue

8.3.3.2 Health Check


- Please choose one of the registered sites in Server list on the right hand side of the ‘Live Display’ and then right click on the mouse button will pop up the menu with ‘Health Check’.
- Please choose ‘Health check’ function when users want to check the status of the DVRs.
- Now users can choose either Health Check or Monitoring to see the status of the DVR at the bottom of the right corner.

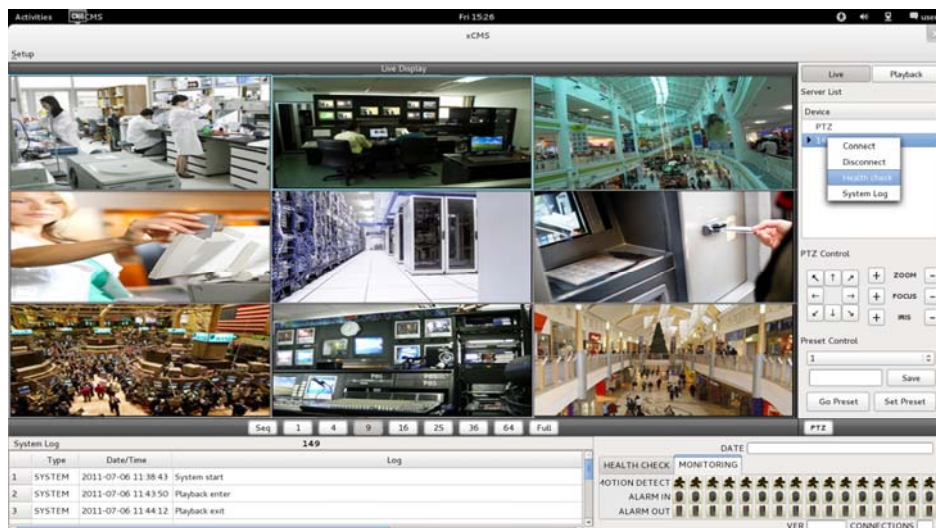

- Health check shows the status of how many cameras are activated, how many HDDs are available, and how many channels are recorded.

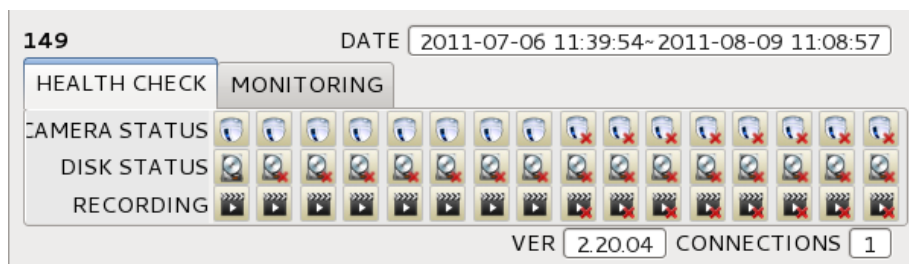

- Monitoring shows the status of the number of motion detection and how many 'Alarm In' and 'Alarm Out' are activated.

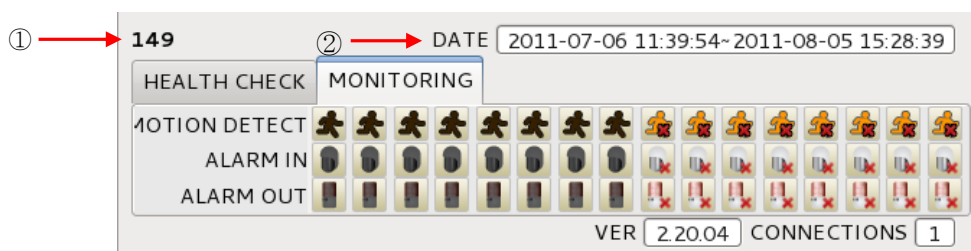


Number	Description
(1)	DVR name
(2)	Start and finish recorded date and time

8.3.3.3 PTZ Control


- Under the server list, PTZ control can be found. This is for the control of Pan/Tilt/Zoom of DVR.
- Buttons on the screen have the following functions.
 - Up/Down/Left/Right direction buttons



- Zoom In/Out, Focus Near/Far, Iris Close/Open

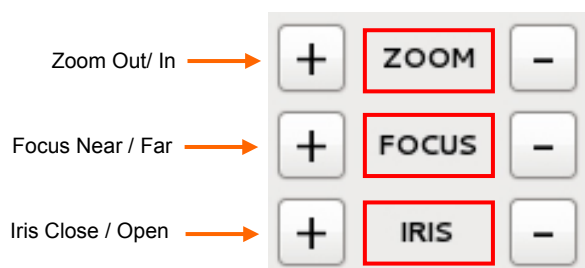

- Preset Control button

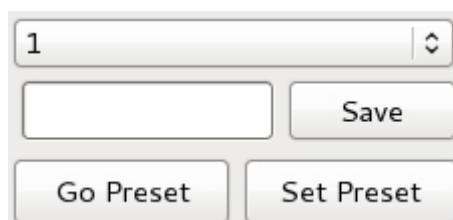

- Please choose the number from the drop down list from 1 to 256.
- After selecting the number, please type the description on the empty space below the drop down list and click “Save”.
- If users think that the certain spot is important or need to have precautions, then they can set up the spot as ‘Preset’.
- When the preset is setup up, click ‘Go Preset’ to move to preset spot.
 - PTZ control menu can be hidden by clicking PTZ ICON below the PTZ menu.

8.3.3.4 System Log

- In the Live mode, system Log is shown. This will allow users to check System Log of Remote Site (DVR).


System Log 149			
	Type	Date/Time	Log
1	SYSTEM	2011-07-06 11:38:43	System start
2	SYSTEM	2011-07-06 11:43:50	Playback enter
3	SYSTEM	2011-07-06 11:44:12	Playback exit

8.4 Search Mode


- This involves searching recorded video to playback the wanted video of a specific date and time.
- Users are able to search the recorded data in the xCMS program by Date/Time, Event, POS/ATM Search.
 - **Date/Time Search:** search by inputting date/time.
 - **Event Search:** search by event.
 - **POS/ATM Search:** search by POS or ATM text with time.

8.4.1 Date/Time Search


- Click Playback and following screen will appear.

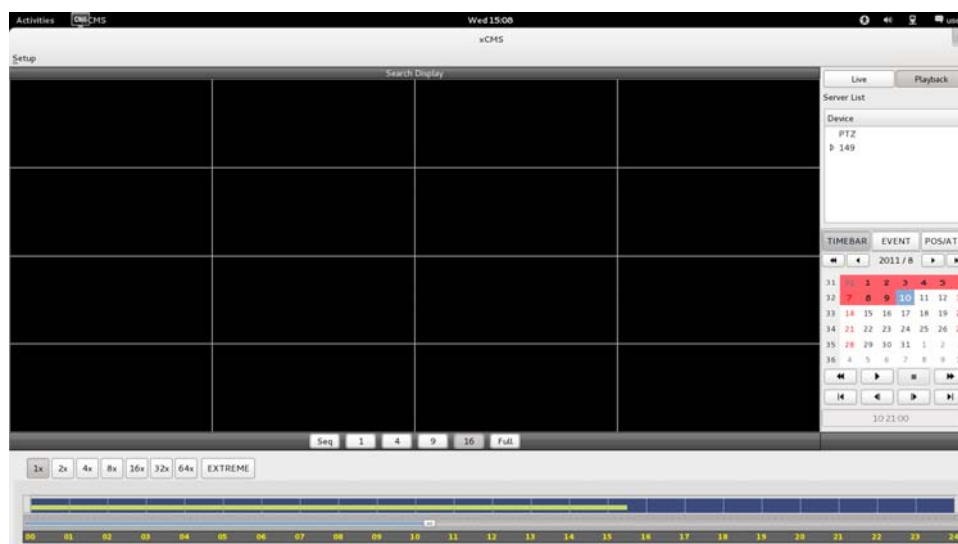

- Please choose one of the devices to playback from the Server List.
- Select Date
 - In calendar, dates with recorded data are marked in red.
- Select the date among the dates marked in red.
- Select Time
 - Please select the time that users want to playback by click ▲, ▼ buttons on the right-hand side to adjust the time or drag the Time Select Bar with mouse.

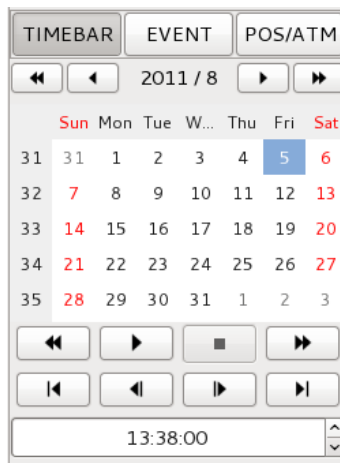

◀◀	Search previous 'Year'
▶▶	Search subsequent 'Year'
◀	Search previous 'Month'
▶	Search subsequent 'Month'

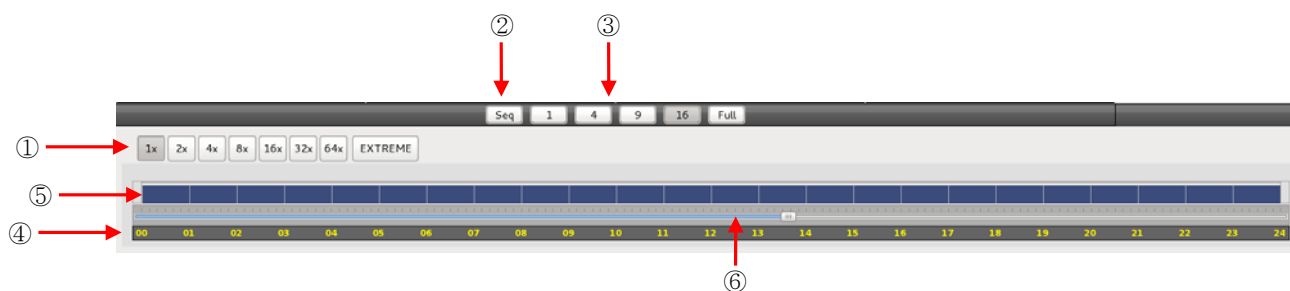


1	Fast Forward/Backward & Playback (Click the button to increase the speed by x1, x2, x4, x8, x16, x32, x64 and Extreme)
2	Sequence Mode
3	Display Mode(Click the button to divide the screen by 1, 4, 9, 16 and Full
4	Time Bar (24 Hour)
5	Data Bar (Recorded data)
6	Time Select Bar

- When Date/Time search is completed, please click 'Play' button to begin playback.

8.4.2 Event Search


- The Event search allows users to search event recorded data of DVR.
- To start the event search, please click '**EVENT**' and users will see the following screen.

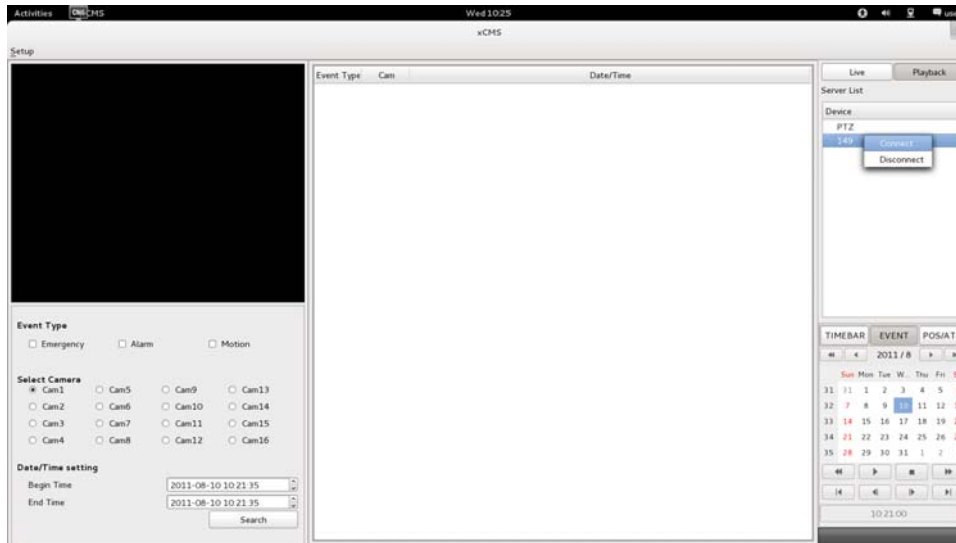

- Please choose one of the devices among the '**Server List**' and right click on the mouse to have popup menu with Connect.
- Please click '**Connect**' to start the event search
- Event search has three different parts called Event Type, Select Camera and Date/Time setting.
 - ① **Event Type**: it has three event types which are Emergency, Alarm and Motion. Please choose one event that users want to detect.
 - ② **Select Camera**: Please select the camera that users want to view from Cam1 to Cam 16 for the event (Only 1 camera can be selected).
 - ③ **Date/Time setting**: Please select the begin and end time by clicking the up/down arrows and click "Search"


8.4.3 POS/ATM

- POS/ATM button allows users to search for the POS/ATM text.
- Please click '**POS/ATM**' button right next to the '**EVENT**' and users will see the following screen.

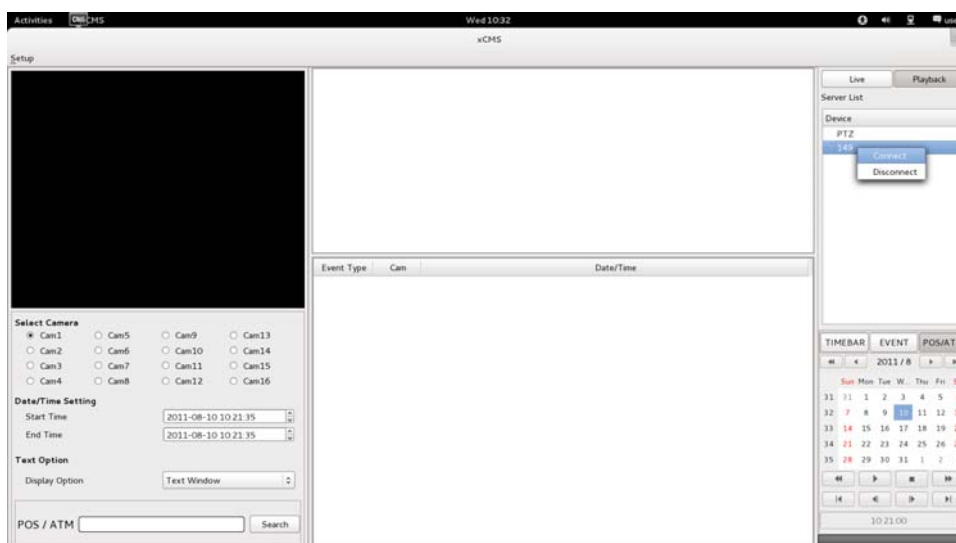

- Please choose one of the devices among the 'Server List' and right click on the mouse to have popup menu.
- Please click '**Connect**' to start the event search
- Event search has three different parts called Event Type, Select Camera and Date/Time setting.
 - ① **Select Camera**: select a camera to search (Only 1 camera can be selected in this search).
 - ② **Date/Time setting**: please set up the start and end time

- ③ **Text Option (Display Option:** Users are able to select the display option of the playback.)
- Text window: The detected text will be shown on the **‘Windows text’** right next to the **‘Display screen’**.
 - Overlay: The text will be overlaid on the playback video in the **‘Display Screen’**.
 - Both: The text will be overlaid on the video and the text window as well.
 - Hide All: The text will not be displayed in both video and the text window.

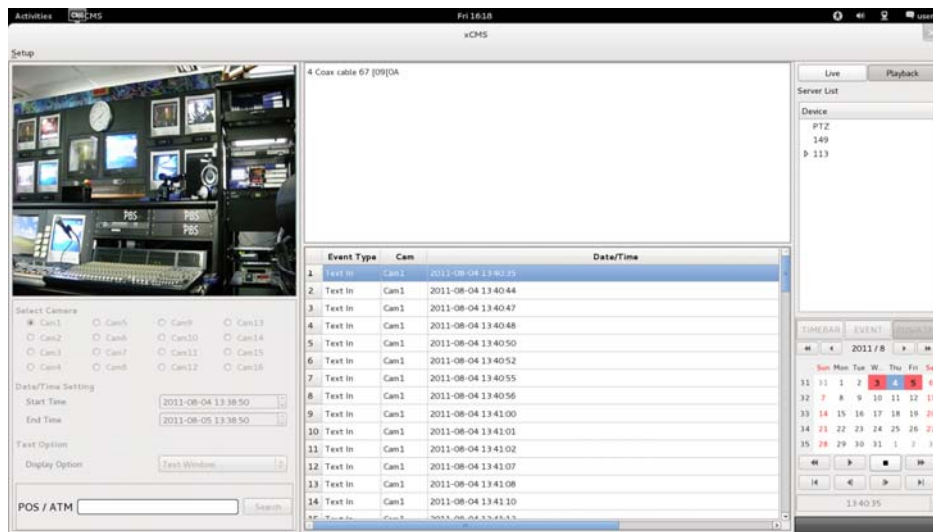

- To search the word, please fill out the text box with the searching word.

POS / ATM


- Please click 'Search' when all the necessary requirements are filled out.
- The following screen shows the result of the POS/ATM search

	Event Type	Cam	Date/Time
1	Text In	Cam1	2011-08-04 13:40:35
2	Text In	Cam1	2011-08-04 13:40:44
3	Text In	Cam1	2011-08-04 13:40:47
4	Text In	Cam1	2011-08-04 13:40:48
5	Text In	Cam1	2011-08-04 13:40:50
6	Text In	Cam1	2011-08-04 13:40:52
7	Text In	Cam1	2011-08-04 13:40:55
8	Text In	Cam1	2011-08-04 13:40:56
9	Text In	Cam1	2011-08-04 13:41:00
10	Text In	Cam1	2011-08-04 13:41:01
11	Text In	Cam1	2011-08-04 13:41:02
12	Text In	Cam1	2011-08-04 13:41:07
13	Text In	Cam1	2011-08-04 13:41:08
14	Text In	Cam1	2011-08-04 13:41:10
15	Text In	Cam1	2011-08-04 13:41:13


- Double click on the event that users want to display.

8.5 Disconnection

- When disconnect, please right click on the connected site and choose **'Disconnect'**

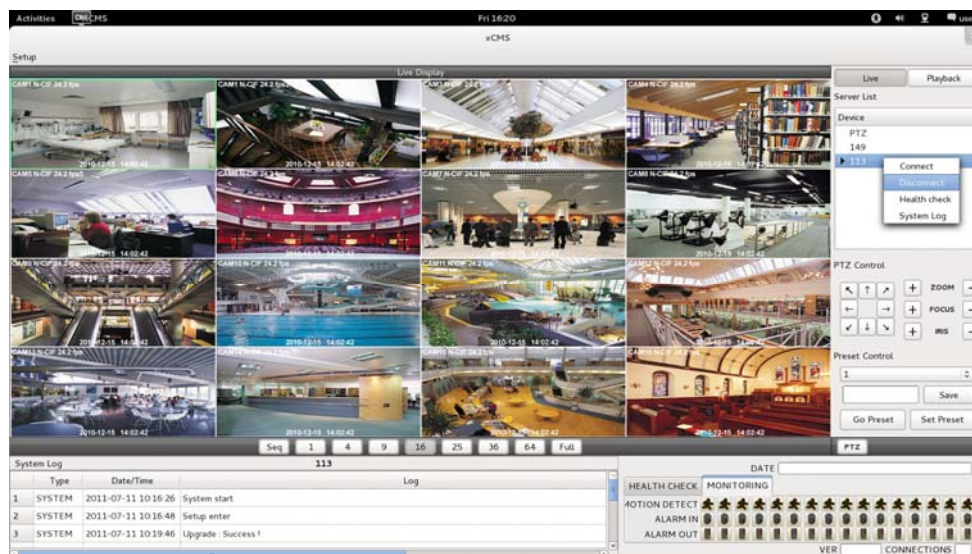


- Once users click **'Disconnect'**, following screen will appear with the message of **'Disconnected'**.

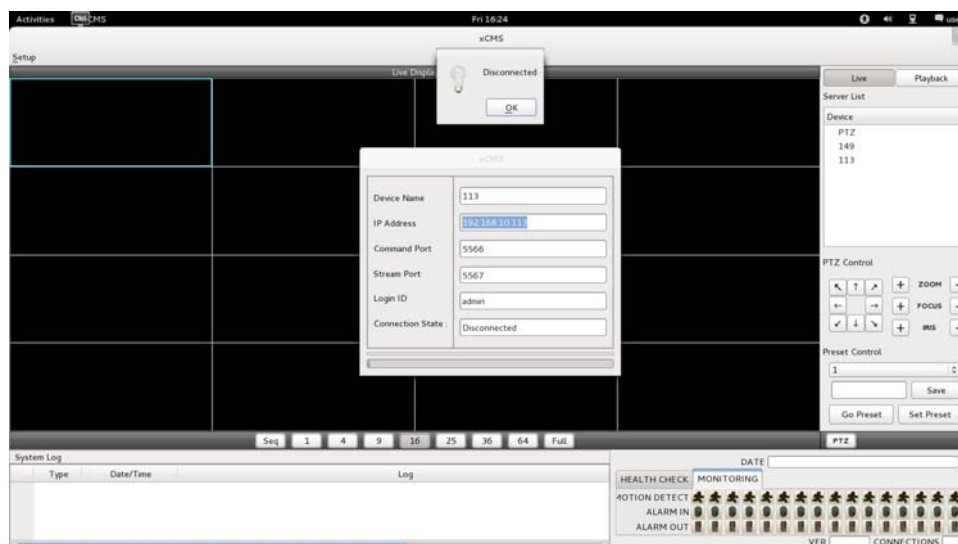

8.6 Uninstallation

- Please go into the '**Home**' folder and right click on the xCMS icon.
- Please choose '**Move to Trash**' to uninstall the xCMS program

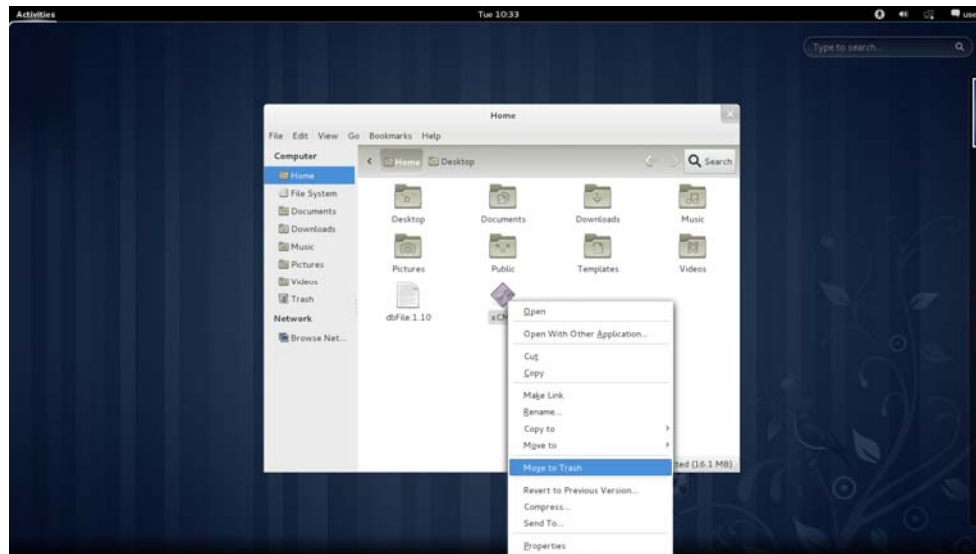

CMS Web Client


User`s Manual




9. CMS WEB CLIENT

9.1 Setup and Login

- MS Explorer web browser is required for installation and using this program.
- Open a browser and type the IP address of DVR.
- It is required to install ActiveX in the first connection.
- Basically, Explorer limits automatic ActiveX installation.
- Click the message above in the screen, then following menu box will appear.

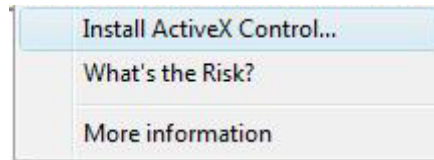


- Click "Install ActiveX Control..." and start installation.
- Installation box will appear and click "Install" for next step.
- After complete installation, Login panel will appear.
- Enter User ID and password of registered DVR then click

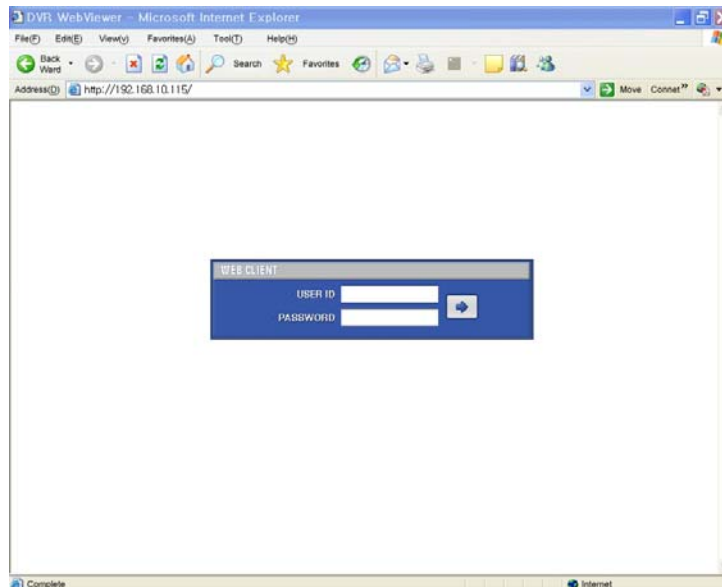**NOTE**

Before network connection, be sure that HDD is installed. Otherwise, the DVR will not be connected over network.

9.2 Live Display

- After Login, the following screen will appear.

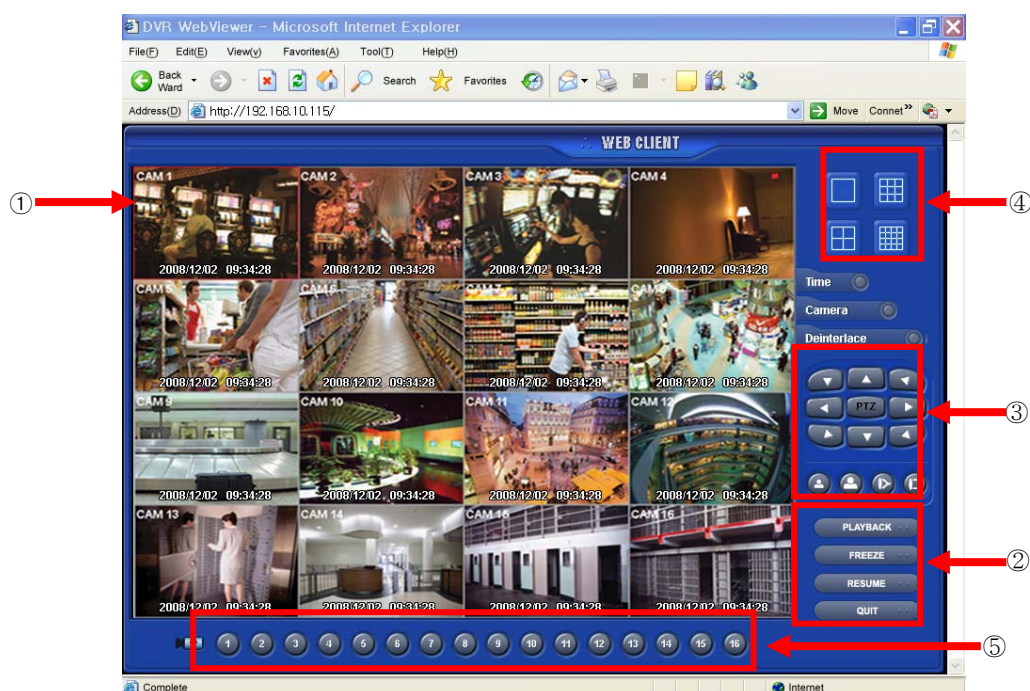

- The screen contains following features:

- ① Display current live video
- ② Setting display mode
 - Playback : Transferring search mode.
 - Freeze : Pause current display.
 - Resume : Resume paused display.
 - Quit : Finish program and close browser.
- ③ PTZ controller – Must complete the control setting on its DVR and Cameras first.



- Pan/Tilt direction button.



- Zoom In / Zoom Out control button.




- Focus Near / Focus Far control button.

- ④ Select display split mode. User can choose 1, 4, 9, 16 split display consequently.
 - Check boxes for hiding/showing text from OSD.
- ⑤ Channel selection button - available to check the channel (camera) number of current display.

9.3 Playback Screen

- Click [Playback] then following screen will appear.

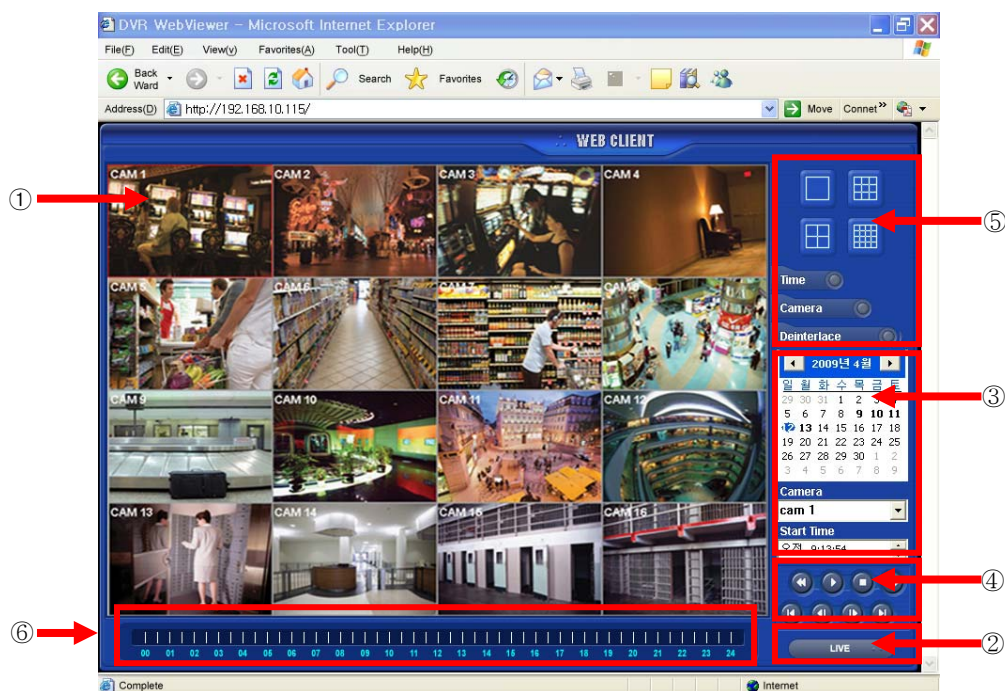

- The screen contains following features:

- ① Searched playback video displays.
- ② Transferring Live mode.
- ③ Setting Date/Time to search.
 - Click a date in calendar, then recorded data will be showed up in Time bar.
 - Start Time : Setting start time.
 - Camera : Choosing camera number from 1~16 individually or all channels.
- ④ Play functions for playback.

⏮	Fast Backward Play
⏭	Fast Forward Play
▶	Play
■	Stop
⏮	Go to the First Image
⏭	Go to the Last Image
⏮	Go to the Previous Image
⏭	Go to the Next Image

- ⑤ Select display split mode. User can choose 1, 4, 9, 16 split display consequently.
 - Check boxes for hiding/showing text on OSD.
- ⑥ Indicate the recorded data in Time bar figure.

CMS Mobile Viewer

User`s Manual




10. CMS MOBILE VIEWER

10.1 iPhone Mobile


10.1.1 System Requirements


- There are no other requirements to run this program because it is specialized to perform on iPhone interface.

10.1.2 Installation

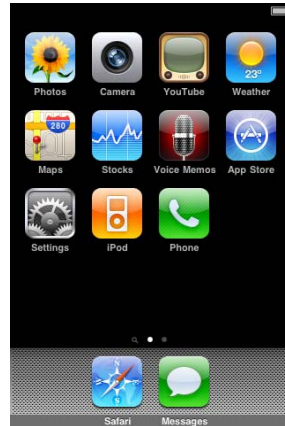

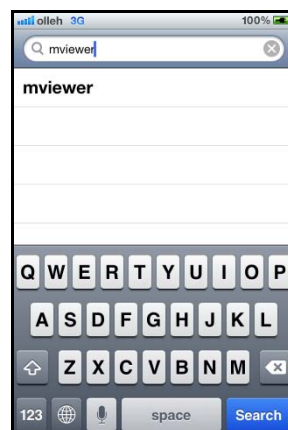


- Turn on the iPhone then connect to App Store.




- Move to search menu and type “mviewer” then click “”.




- Select “” program which is offered by dvrdomain for free.
- When user clicks a “” button, it will be turned to “”
- Click “” to start installation.



- If user already has iTunes account, then input user's account to download the program.

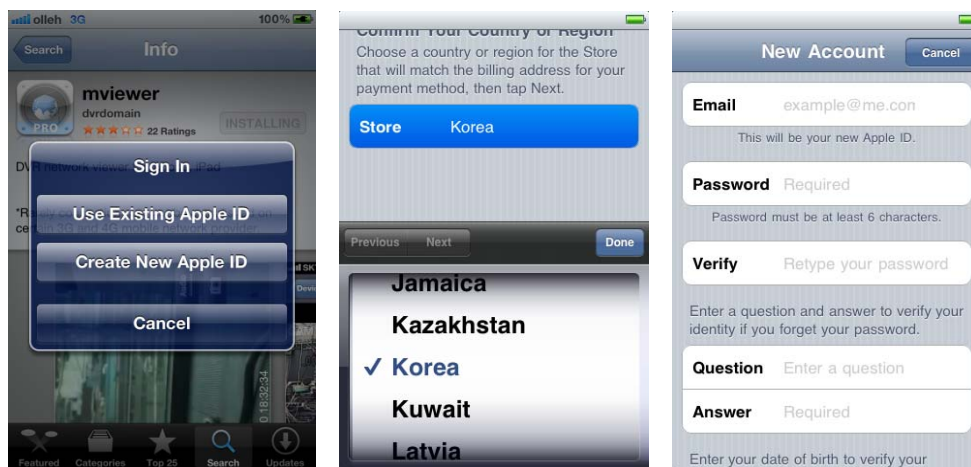

- If user does not have the account, then click “” and it is registered by free.

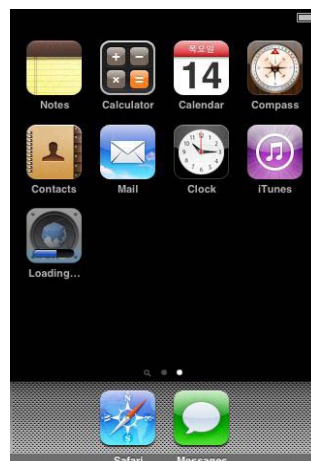

- When user registered the account, the program will be automatically installed.


10.1.3 Site Registration

- Click “” icon on iPhone then below will show.







- Tap “**MONITORING**” then below will show.




- Tap “” and enter site information which are same as CMS site registration.



- Enter Site Name, IP or DDNS address.
- Enter Admin/Stream port value.
- Enter ID/Password.
- Click “” to save the setting.
- To edit the saved site, tap “” next to site Name, then change the value, and tap “”.
- To delete the saved site, slide the finger from right to left across Device Name. Then tap “” to remove the site.

10.1.4 Connection

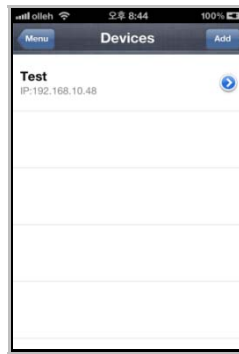




 


- Tap on Device Name to connect the DVR to iPhone.

10.1.5 Live View (Portrait View)



- To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “1 channel 4 channels 9 channels 16 channels” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.











 

- Tap “” to take Snapshot.
- Tap “” to enable PTZ function. Please refer to 10.1.7 PTZ Control for more detail.
- Tap “” to remove Camera Name and Date/Time from OSD.
- Tap “” to switch from Live mode to Playback mode.
- Tap “” to enable audio. (1CH display ONLY)
- Tap “” to disable audio. (1CH display ONLY)
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)

NOTE

Audio, Zoom and PTZ are available only in full screen mode.(1channel only)

10.1.6 Live View (Landscape View)




- To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “   ” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.
- Tap “” to go back to main menu.
- Tap “” to enable PTZ function. Please refer to 10.1.7 PTZ Control for more detail. 
- Tap “” to take Snapshot. 
- Tap “” to enable audio. (1CH display ONLY)
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)






NOTE

Audio, Zoom and PTZ are available only in full screen mode.(1channel only)

10.1.7 PTZ Control

- Users are able to control PTZ with iPhone by touching the screen.
- Tap “” to execute PTZ function.



- Tap Arrow for Pan and Tilt movement.
- Touch “” to zoom out.
- Touch “” to zoom in.
- If users already set up the presets on DVR, users may use them by touching “  ”.

10.1.8 Search

- Users are able to search the recorded data with iPhone.
- Click “**PLAYBACK**” on Main menu or “**Playback**” on Live monitoring to use search function.



- Choose date that wish to search from Calendar



- Choose time to search by sliding the Hour and Minute bar.
- Tap “**Search**” to execute search.



- To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “1 channel 4 channels 9 channels 16 channels” or “ ” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.
- Tap “ ” to control the playback.
- Tap “” or “” to take Snapshot.
- Tap “**OSD**” or tap screen to remove Camera Name and Date/Time from OSD.
- Tap “**Live**” to switch from Live mode to Playback mode.
- Tap “**Audio on**” or “**Audio**” to enable audio. (1CH display ONLY)


- Tap “Audio off” or “Audio” to disable audio. (1CH display ONLY)
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)

NOTE

Audio, Zoom and PTZ are available only in full screen mode.(1channel only)



10.1.9 Snapshot gallery

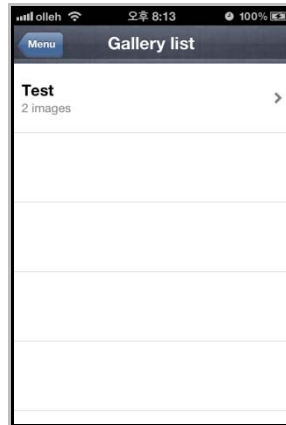- Users are able to watch the snapshot taken with mViewer while Live monitoring and Playback.
- Tap “Snapshot gallery” from main menu.



- Select the device and snapshot taken from the selected device will appear.



- To see other pictures slide finger across the screen.
- Tap “” to send the snapshot to the Photos.
- Tap “” to delete the selected snapshot.


10.1.10 Setting


SETTING



- Tap “SETTING” to check the information of the application.
- User can read the manual.



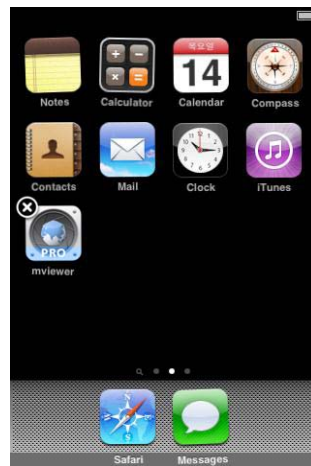

10.1.11 Uninstallation

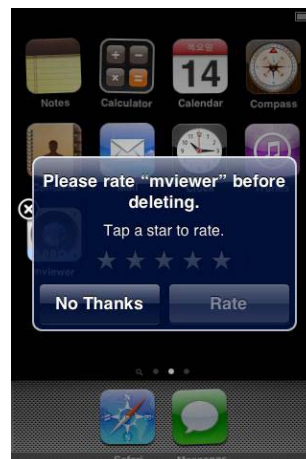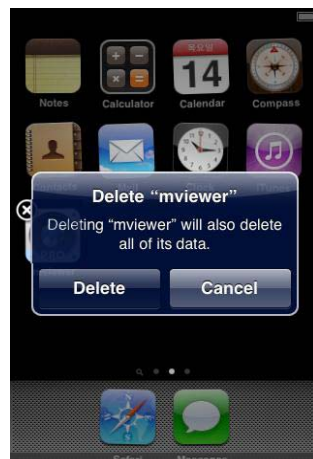

- Click the “” icon and hold for a while until the program icon shows x mark on the top-left side.




- Click the “” icon then it will ask to delete the program.
- Click “” button to successfully uninstall the program.

10.2 iPad Mobile


10.2.1 System Requirements

- There are no other requirements to run this program because it is specialized to perform on iPad interface.

10.2.2 Installation

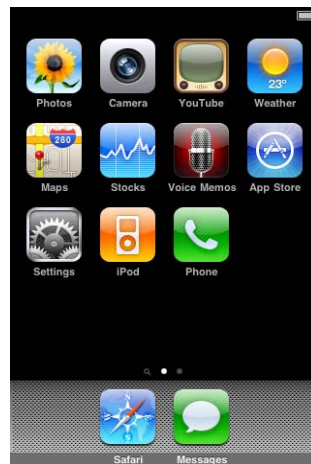


- Turn on the iPad then connect to App Store.

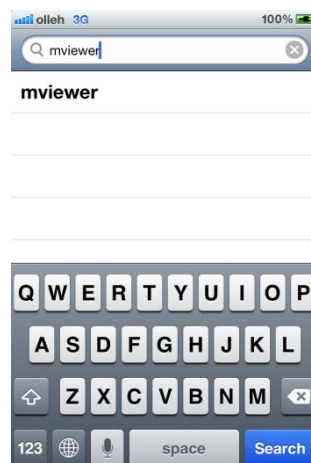


- Move to search menu and type “mviewer” then click “**Search**”.




- Select “” program which is offered by dvrdomain for free.
- When user clicks a “**FREE**” button, it will be turned to “**INSTALL**”
- Click “**INSTALL**” to start installation.



- If user already has iTunes account, then input user's account to download the program.

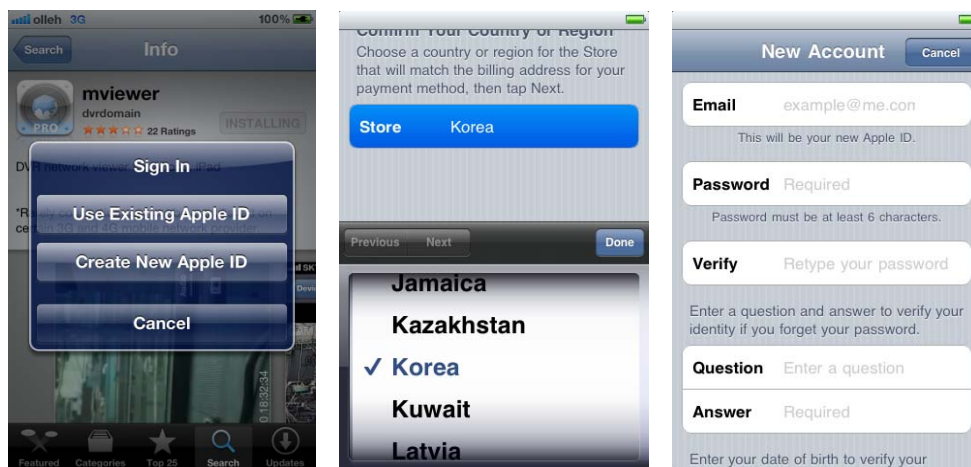


- If user does not have the account, then click “” and it is registered by free.

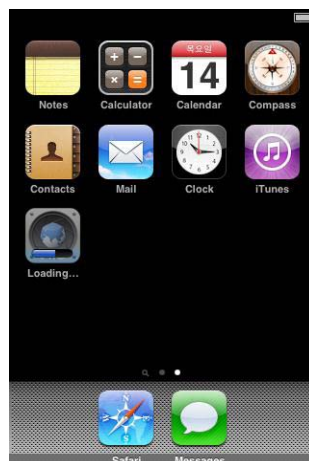


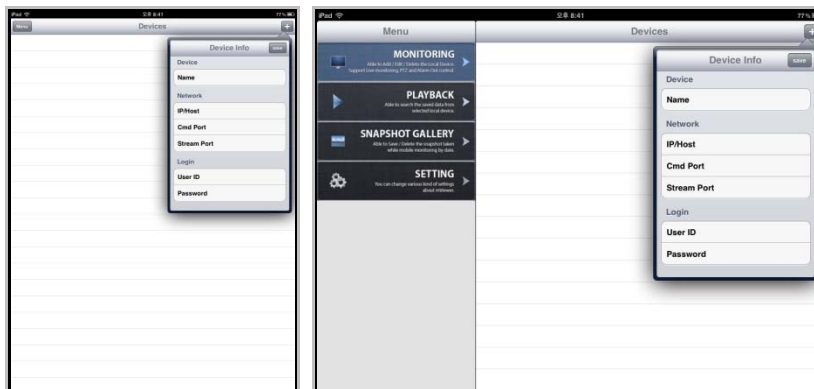
- When user registered the account, the program will be automatically installed.




 
10.2.3 Site Registration

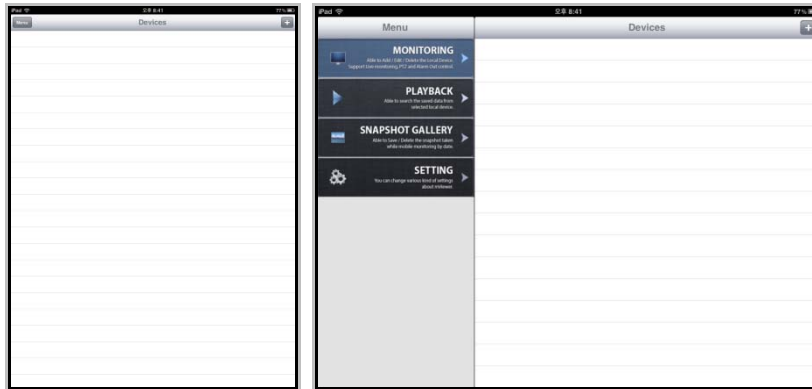- Click “” icon on iPad then below will show.




- Tap “” and enter site information which are same as CMS site registration.



- Enter Site Name, IP or DDNS address.
- Enter Admin/Stream port value.
- Enter ID/Password.
- Click “” to save the setting.
- To edit the saved site, tap “” next to site Name, then change the value, and tap “”.
- To delete the saved site, slide the finger from right to left across Device Name. Then tap “” to remove the site.

10.2.4 Connection

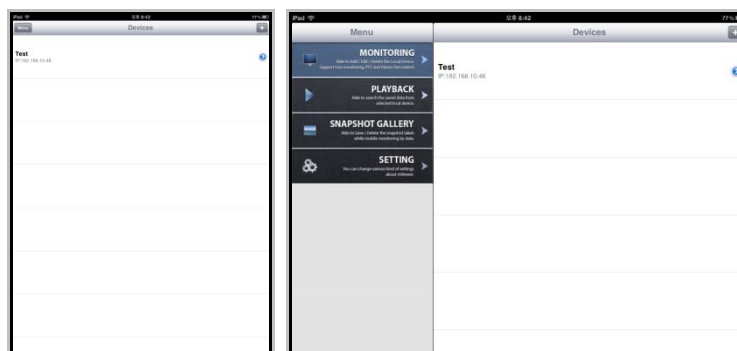

- Tap on Device Name to connect the DVR to iPad.

10.2.5 Live View (Portrait View)



- To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “ 1 channel 4 channels 9 channels 16 channels ” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.










 
- Tap “ **Capture** ” to take Snapshot.
- Tap “ **PTZ** ” to enable PTZ function. Please refer to 10.2.7 PTZ Control for more detail.
- Tap “ **OSD** ” to remove Camera Name and Date/Time from OSD.
- Tap “ **Playback** ” to switch from Live mode to Playback mode.
- Tap “ **Audio on** ” to enable audio. (1CH display ONLY)
- Tap “ **Audio off** ” to disable audio. (1CH display ONLY)
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)

NOTE

Audio, Zoom and PTZ are available only in full screen mode.(1channel only)

10.2.6 Live View (Landscape View)




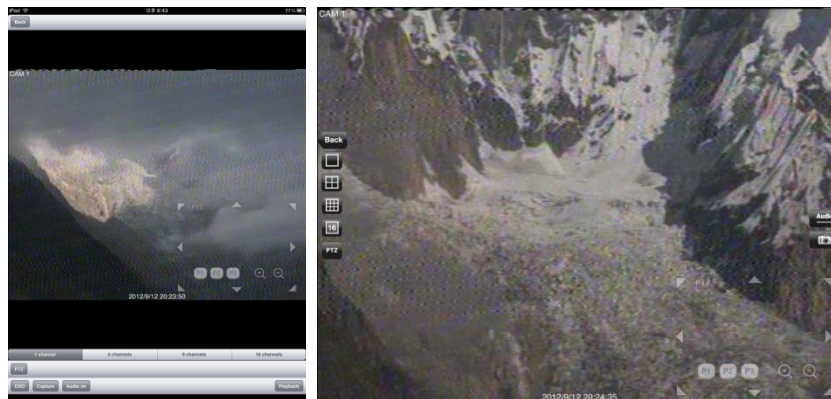
- To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “    ” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.
- Tap “ ” to go back to main menu.
- Tap “ ” to enable PTZ function. Please refer to 10.2.7 PTZ Control for more detail.
- Tap “ ” to take Snapshot.
- Tap “ ” to enable audio. (1CH display ONLY)
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)






NOTE

Audio, Zoom and PTZ are available only in full screen mode.(1channel only)

10.2.7 PTZ Control

- Users are able to control PTZ with iPad by touching the screen.
- Tap “ ” to execute PTZ function.





- Tap Arrow for Pan and Tilt movement.
- Touch “ ” to zoom out.
- Touch “ ” to zoom in.
- If users already set up the presets on DVR, users may use them by touching “   ”.



10.2.8 Search

- Users are able to search the recorded data with iPad.

- Click **PLAYBACK** on Main menu or **Playback** on Live monitoring to use search function.

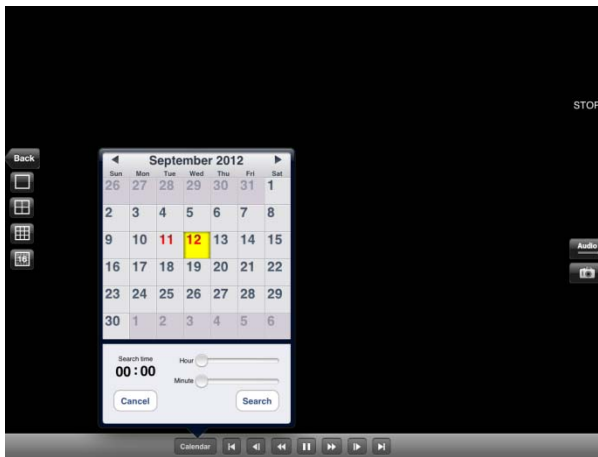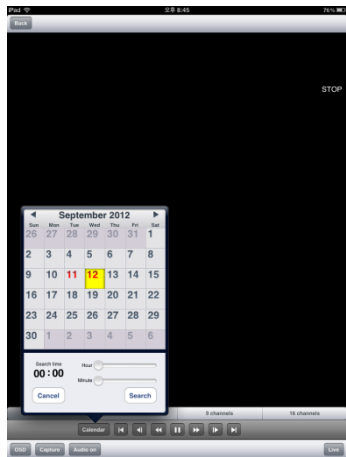

- Choose date that wish to search from Calendar

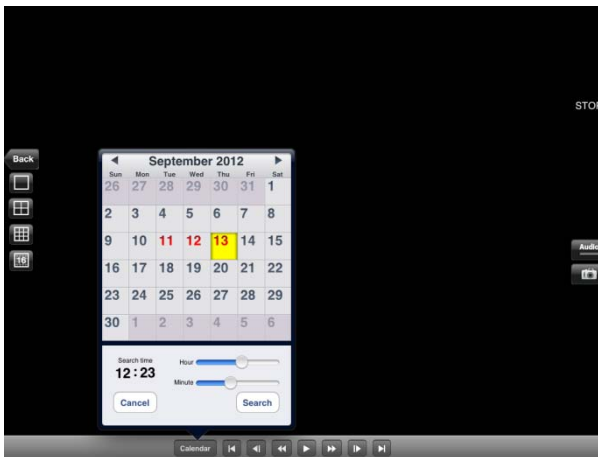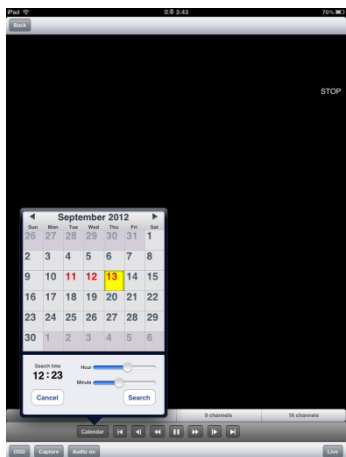








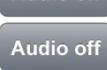



- Choose time that wish to search by sliding the Hour and Minute bar.

- Tap **Search** to execute search.



- To select other channels,
 - Slide finger from Right to Left to ascend
 - Slide finger from Left to Right to descend.

 - Tap on **1 channel** **4 channels** **9 channels** **16 channels** or **1** **4** **9** **16** to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.


- Tap “  ” to control the playback.
- Tap “” or “” to take Snapshot.
- Tap “” or tap screen to remove Camera Name and Date/Time from OSD.
- Tap “” to switch from Live mode to Playback mode.
- Tap “” or “” to enable audio. (1CH display ONLY)
- Tap “” or “” to disable audio. (1CH display ONLY)
- To use Zoom feature, simply pinch and drag in 1CH display. (1CH display ONLY)

NOTE


Audio and Zoom are available only in full screen mode.(1channel only)



10.2.9 Snapshot gallery

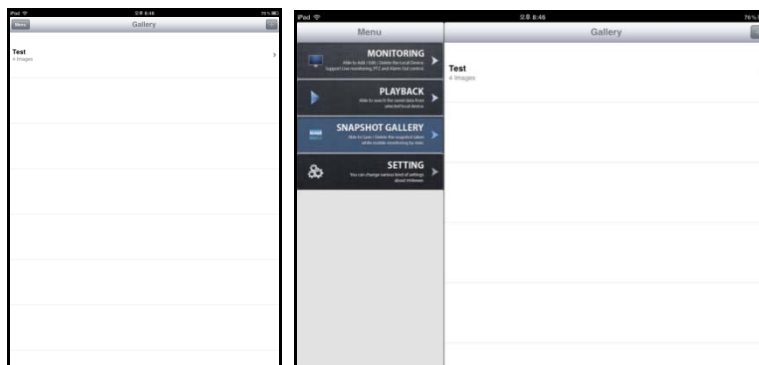- Users are able to watch the snapshot taken with mViewer while Live monitoring and Playback.
- Tap “Snapshot gallery” from main menu.

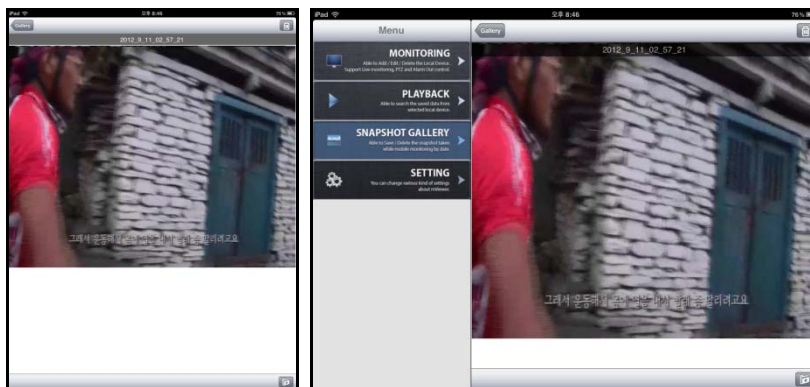


- Select the device and snapshot taken from the selected device will appear.




- To see other pictures slide finger across the screen.
- Tap “” to send the snapshot to the Photos.
- Tap “” to delete the selected snapshot.


10.2.10 Setting

- **Setting** Tap “**SETTING**” to check the information of the application.
- User can read the manual.

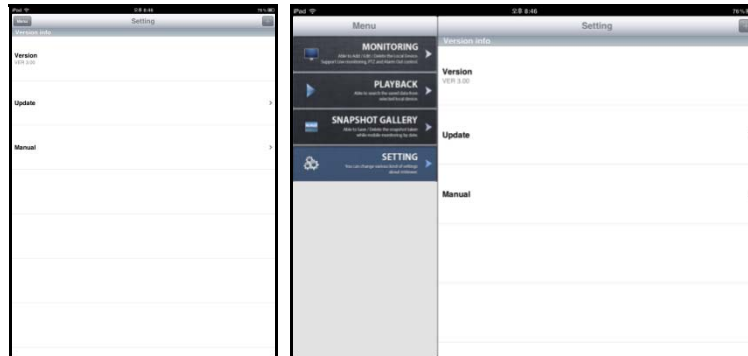

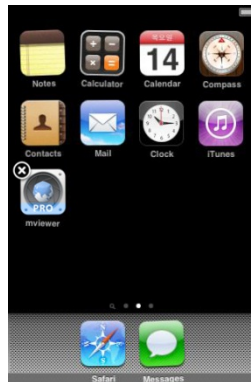

10.2.11 Uninstallation



- Click the “” icon and hold for a while until the program icon shows x mark on the top-left side.



- Click the “” icon then it will ask to delete the program.
- Click “” button to successfully uninstall the program.

10.3 Android Phone(mViewer Pro)

10.3.1 System Requirements


- This program is designed and applied only for Android OS(version 2.3 or higher) based mobile device.
- Display: Min. 3.7 inch screen

NOTE


mViewer Pro might not work even though Android OS version is high enough. It is due to the hardware specification of Android device. Please download mViewer instead.

10.3.2 Installation

- Turn on the mobile device then connect to Play Store.
- Move to search menu and type “mViewerpro” then select “” program which is offered from dvrdomain by free.

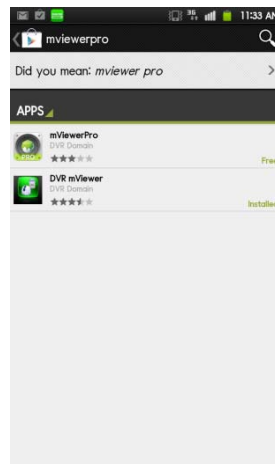

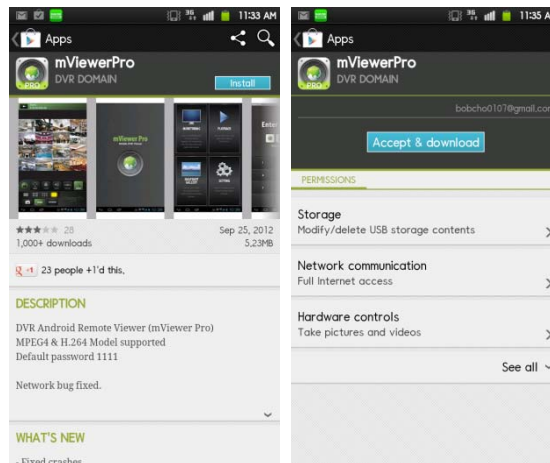

- Click “” then “” to start installation.





- The program will be automatically installed in user's application menu.




10.3.3 Site Registration

- Click “” icon on application menu then below will show.
- Tap “**MONITORING**” on the main menu.
- Tap “” on top right corner.

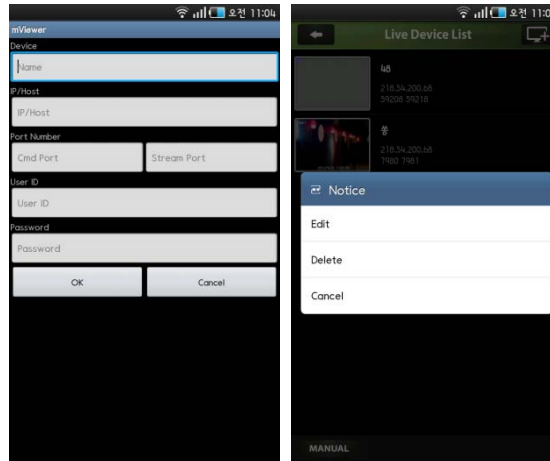

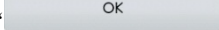
- Enter Device Name, IP/Host address.
- Enter Cmd/Stream port value.
- Enter User ID/Password.
- Click “” to save the setting.
- To edit or delete the saved site, press the Device Name for 2 sec from Live Device List and popup menu will appear.

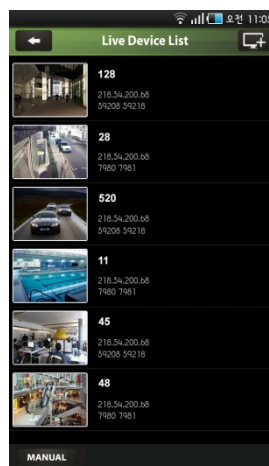

10.3.4 Connection






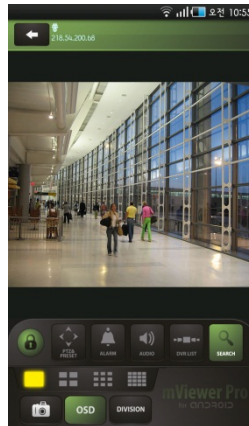


 
 


- Tap on Device Name to connect the DVR to mobile device.

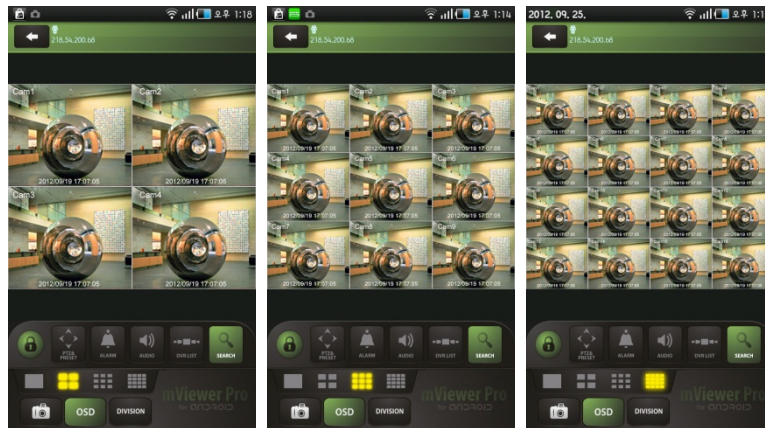10.3.5 Live View (Portrait View)



- To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “” or “” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.




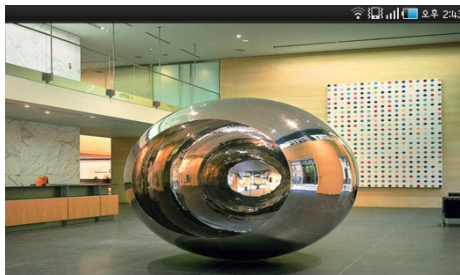
- Tap “” to enable Landscape view when the device is tilted
- Tap “” to enable PTZ function. Please refer to 10.3.7 PTZ Control for more detail.
- Tap “” to enable Alarm Out control. Please refer to 10.3.8 Alarm Out Control for more detail.
- Tap “” to enable audio.
- Tap “” to change to other Device if there is any.
- Tap “” to switch to Search mode.
- Tap “” to take Snapshot.
 - Enter file name and press “” to save the image.
- Tap “” to remove Camera Name and Date/Time from OSD.

NOTE


Audio and Alarm Out are available only in full screen mode.(1channel only)





10.3.6 Live view (Landscape View)


- Tap “” to enable landscape view when the device is tilted horizontally.




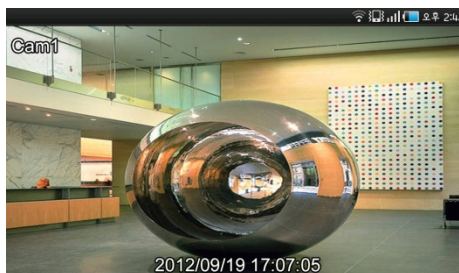



- Tap screen once and menu bar will appear on each side of OSD.



    - To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “   ” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.

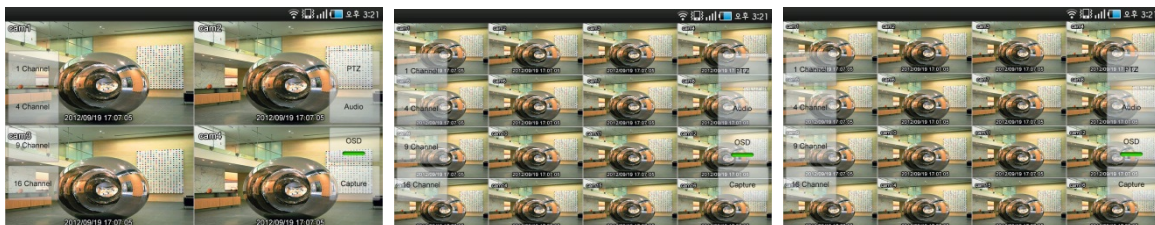


- Tap “” to enable PTZ function. Please refer to 10.3.7 PTZ Control for more detail.
- Tap “” to enable audio.
- Tap “” to remove Camera Name and Date/Time from OSD.
- Tap “” to take Snapshot.
 - Enter file name and press “” to save the image.




NOTE

Audio is available only in full screen mode.(1channel only)


10.3.7 PTZ control

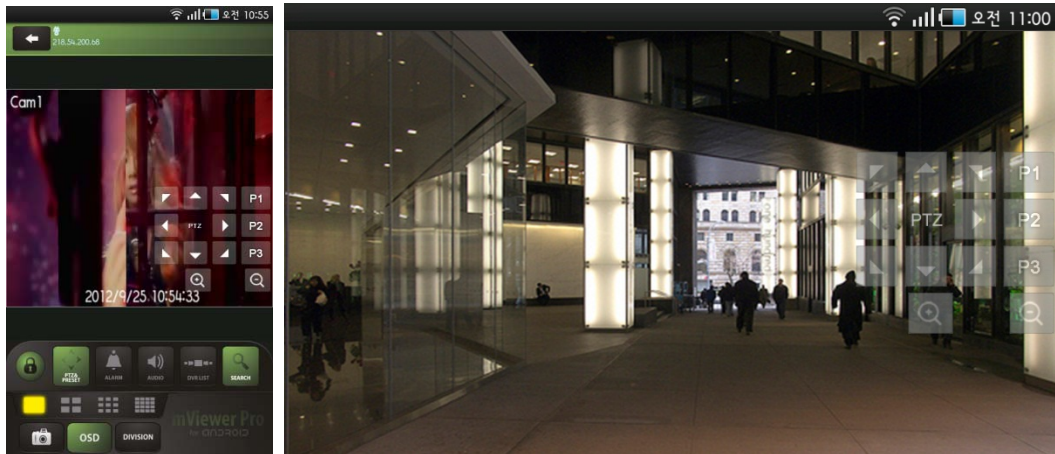
- Users are able to control PTZ with mobile device by touching the screen.
- Tap “PTZ& PRESET” or “PTZ” to execute PTZ function.



- Tap Arrow for Pan and Tilt movement.
- Touch “” to zoom out.
- Touch “” to zoom in.
- If users already set up the presets on DVR, users may use them by touching “”.

10.3.8 Alarm Out Control

- Users are able to manually send Alarm out command with the mobile device.
- Tap “” to enable the Alarm Out control and it will appear on lower left corner of Live screen.

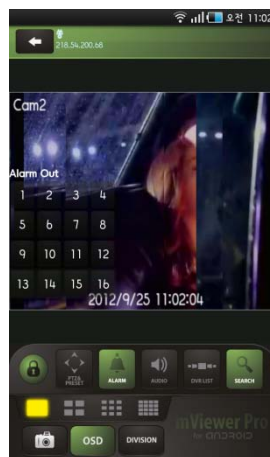


 - Tap the numbers to send out Alarm from the connected DVR to its output source.






 
 





 
 
 
 
 



 
 
10.3.9 Search

- Users are able to search the recorded data with mobile device.
- Tap “PLAYBACK” on main menu or “” on Live monitoring to use search function.

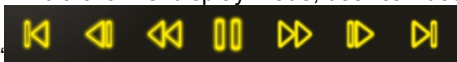

- Choose date and time that wish to search from Calendar
- Tap “” to execute search.



- To select other channels,
 - Slide finger from Right to Left to ascend.
 - Slide finger from Left to Right to descend.
- Tap on “   ” or “” or “   ” to choose split mode between 1, 4, 9 and 16.
 - In Multi channel display mode, user can double tap on certain channel to change to 1CH display mode.
- Tap “” to control the playback.
- Tap “” to enable Landscape view when the device is tilted.
- Tap “” to change date/time of Search.
- Tap “” or “” to enable select FF and REW speed from x1, x2, x4, x8, x16 and Extreme.
- Tap “” or “to enable audio.
- Tap “” to change to other Device if there is any.
- Tap “” to switch to Live mode.
- Tap “” or “” to take Snapshot.
 - Enter file name and press “” to save the image.
- Tap “” or “” to remove Camera Name and Date/Time from OSD.


NOTE

Audio and Alarm Out are available only in full screen mode.(1channel only)

10.3.10 Snapshot Gallery

- Users are able to watch snapshot with the mobile device.

- Tap **SNAPSHOT GALLERY** on main menu to enter the gallery.

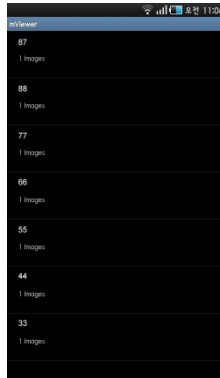



- Tap Device name to view snapshot.
- To see other pictures, slide finger across the screen or touch the thumbnail below.
- To delete the picture/folder,
 - Press the device name for 2-3 seconds till pop-up window appears.
 - Tap "OK" to delete.


10.3.11 Setting


- Tap **SETTING** to check the information of the application.
- User can read the manual.
- Users are able to set Password Lock.
 - Tap "Password Lock" from the setting menu.
 - Enter password. (Default password is 1111)




- Tap  to enable Password Lock when launching the mViewer.
- Tap  to change the password.


10.3.12 Uninstallation

- Move to Setup > Application > Manage Applications then select “”.

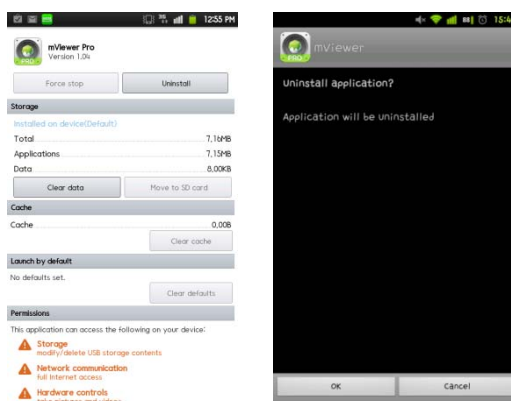

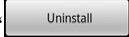- Click “” icon then it will ask to delete the program.

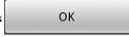


- Click “” button to successfully uninstall the program.

10.4 Android Phone


10.4.1 System Requirements

- This program is designed and applied only for Android OS(version 1.6 or higher) based Smart phones.


10.4.2 Installation

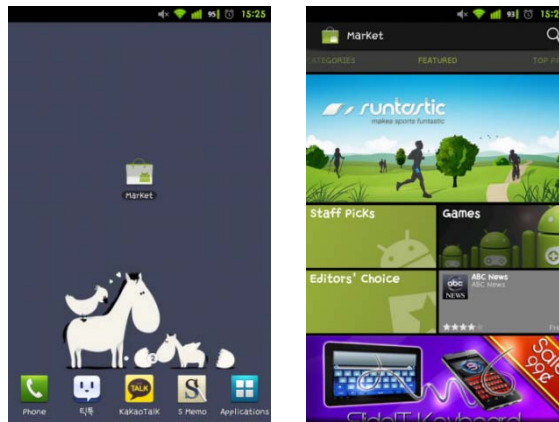


- Turn on the phone then connect to Android Market.

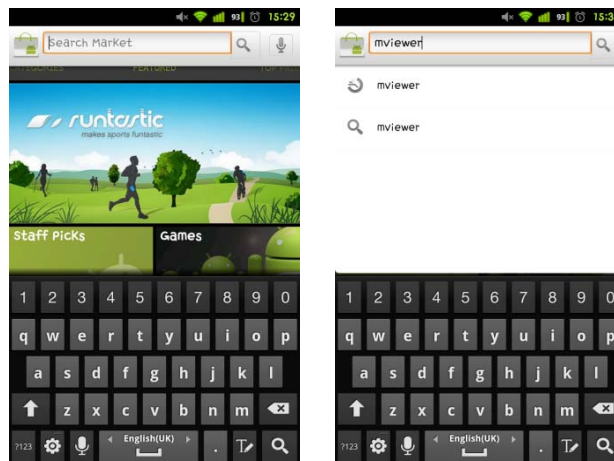

- Move to search menu and type “mviewer” then select “” program which is offered from dvrdomain by free.

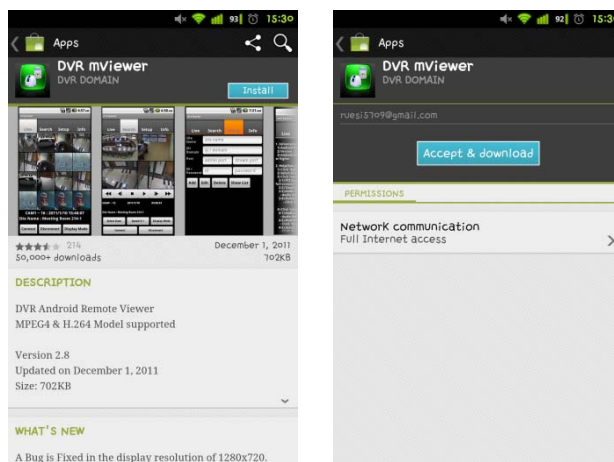


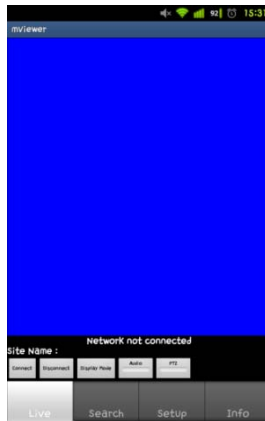
- Click “” then “” to start installation.

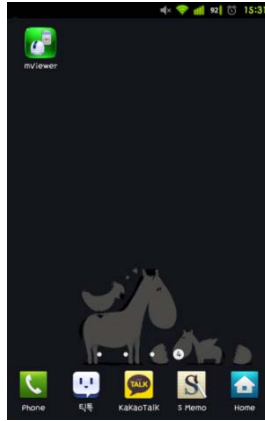


- The program will be automatically installed in user's application menu.

10.4.3 Site Registration


- Click “” icon on application menu then below will show.




- Move to “” tab and enter site information which are same as CMS site registration.




- Enter Site Name, IP or DDNS address.
- Enter Admin/Stream port value.
- Enter ID/Password.

- Click “” to save the setting.

10.4.4 Connection

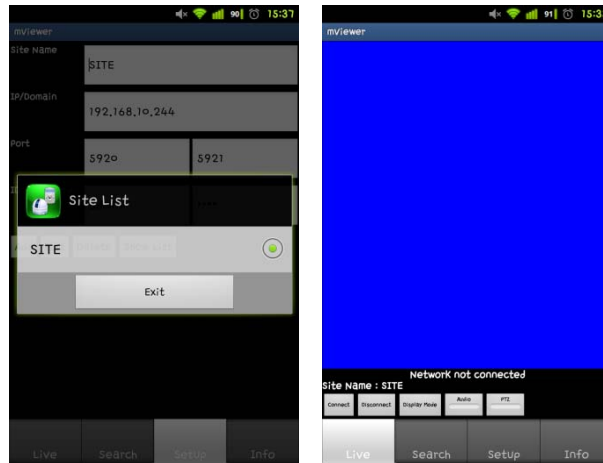


- Click “**Show SiteList**” icon and select one of the registered site and click “**Exit**”.
- Move to “**Live**” tab and click “**Connect**” icon.

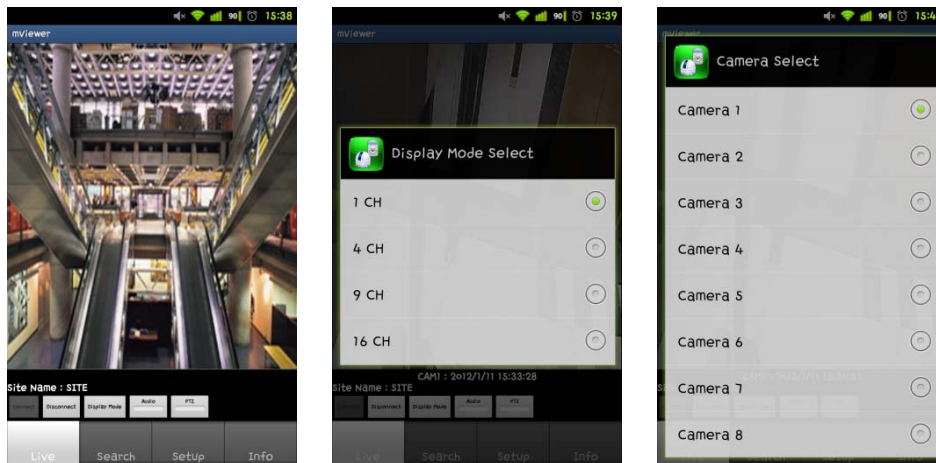


- To change the display mode, click the “**Display Mode**” and select among 1ch (full screen), 4ch, 9ch and 16ch multi view.
- To select other channels, click the “**Camera Select**” icon below the Site Name.
- 16 channel multi view is available for CIF resolution.
- 4 channel multi view is available for H.D1 and D1 resolution.
- Only 1 channel view(full screen) is available for 720p and 1080p.

10.4.5 Search

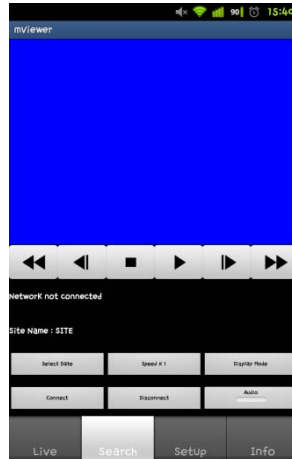

- Users are able to search the recorded data in the mobile CMS program.
- Click “**Connect**” to use search function of the application.
- click “**Select Date**” to select the month, the date and the time in order.

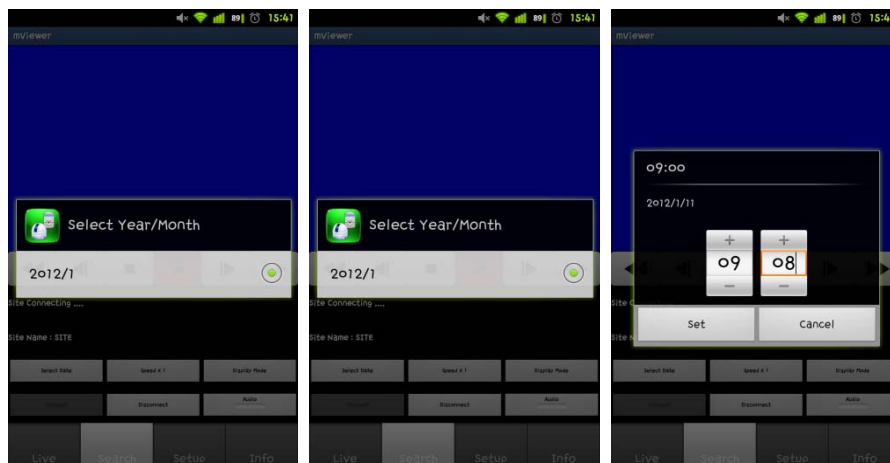

- Click “**Select Date**” to select the month, the date and the time in order.
- Users can adjust the speed of playback from x1 to x 64 or extreme.
- Please note that this function is same as the one of “Playback Control Button” in 9.5.1.
- Click “**Display Mode**” to select the display mode among 1ch, 2ch and 9ch.
(The number of display channel varies according to the recording resolution of the model.)
- Click “**Disconnect**” to quit the search function of the application.

10.4.6 Audio


- Users can hear the audio of 1channel in live and playback mode.

NOTE

Audio out is available only in full screen mode.(1channel only)

10.4.7 PTZ control

- Users are able to control PTZ with Android Phone.
- Press volume up button on the right side of the phone to zoom in.
- Press volume down button on the right side of the phone to zoom out.

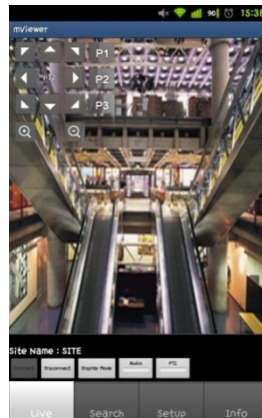


- Touch sides and corners of the screen to change the direction as user want.
- Touch right side of the screen to move right and left side to move left.
- Touch up side of the screen to move up and down side to move down.
- In the same way, touch any corners to change the directions.

10.4.8 Information

- Click “**Info**” to get more information, containing how to setup and use the application.




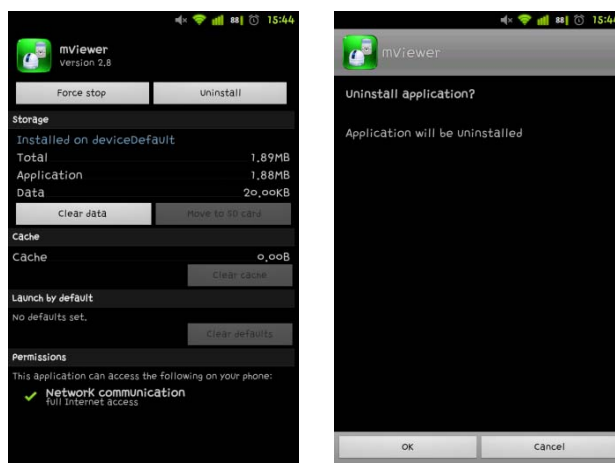
10.4.9 Disconnection

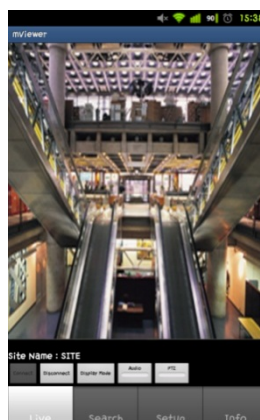


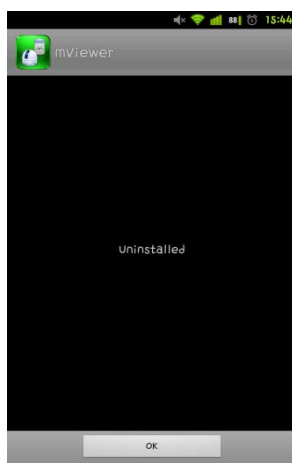
- When disconnecting, please click “**Disconnect**” and exit the mobile viewer program.


10.4.10 Uninstall

- Move to Setup > Application > Manage Applications then select “”.



- Click “” icon then it will ask to delete the program.



- Click “” button to successfully uninstall the program.


10.5 Blackberry Mobile

10.5.1 System Requirements


- This Program is designed and applied only for RIM Blackberry OS based Smart Phones.

10.5.2 Installation


- Turn on the phone and connect to Blackberry App World.

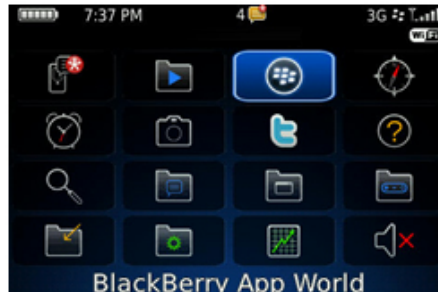


- Click “search” icon and type “DVR Viewer” program.

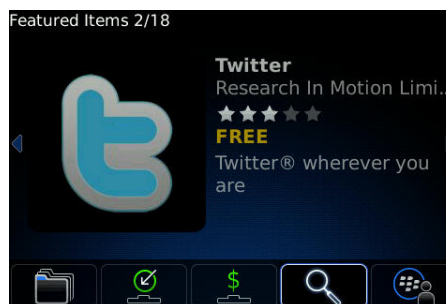


- Select the “DVR viewer” which is offered from dvrdomain by free and start to install the program by clicking the icon.

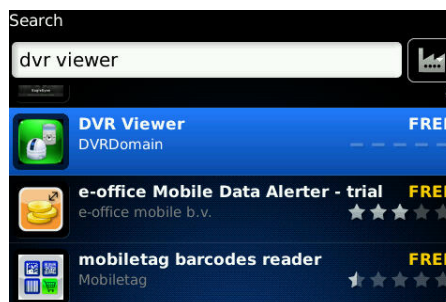

10.5.3 Site Registration

- After downloading the program, click “” icon in the download folder or applications folder and the following screen will be shown.

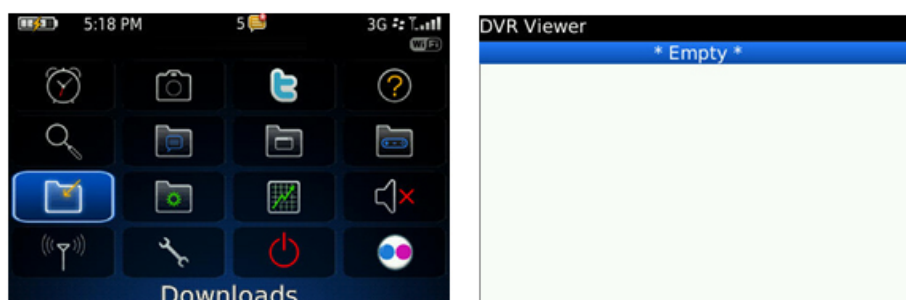

- Click “menu>New” to type the same site information with CMS site registration.

DVR Viewer

Site Name :

IP/Domain :

Admin Port :

Stream Port :

ID :

Password :

Add

Cancel

- Enter Site Name and IP/Domain.
- Enter Admin and Stream port.
- Enter ID and Password.
- Click “Add” to save the setting.

10.5.4 Connection

- If the site is registered appropriately, the following screen will be shown.

DVR Viewer

dvr152

dvr190

- Click “Menu>Connect” to connect the site.

DVR Viewer

123

130

133v8

137L16

Connect

New

Edit


Delete

About


Switch Application

Close

- Users can select the display mode from 1, 4, 9 and 16 multi view.

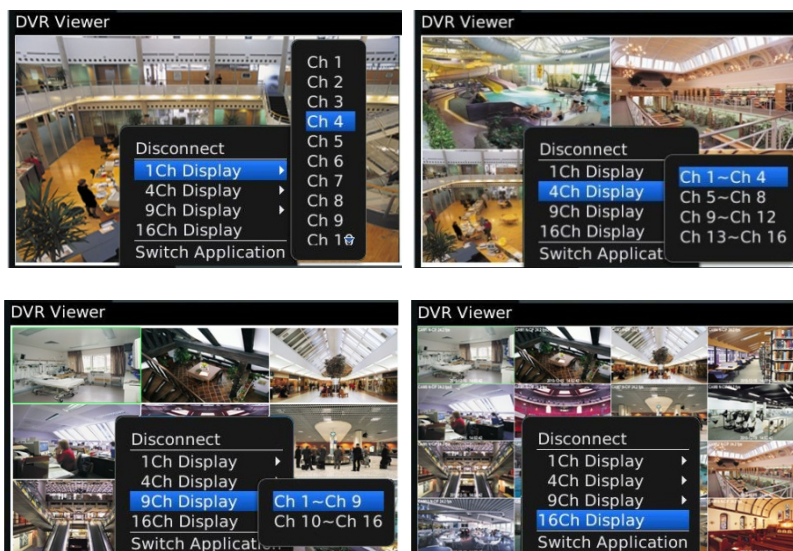

- 16 channel multi view is available for CIF resolution.
- 4 channel multi view is available for H.D1 and D1 resolution.
- Only 1 channel view(full screen) is available for 720p and 1080p.
- The message as below pops up when users try to see the multi view which exceeds its resolution.

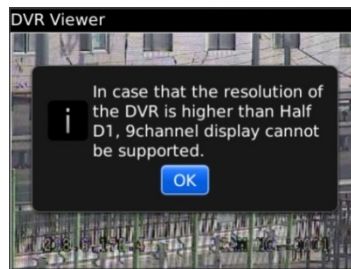

10.5.5 PTZ Control

- Users are able to control PTZ by blackberry phone.
- Press volume up button on the right side of the phone to zoom in.
- Press volume down button on the right side of the phone to zoom out.




- Press 1~9 number buttons to change directions as user want.
- For example, click no. 4 to move left and no.6 to move right.
- In the same way, click no.2 to move upside and no.8 to move downside.



NOTE

As for the touch type of blackberry phone (ex. Storm), users may control PTZ in the same way as Android Phone.


10.5.6 Disconnection

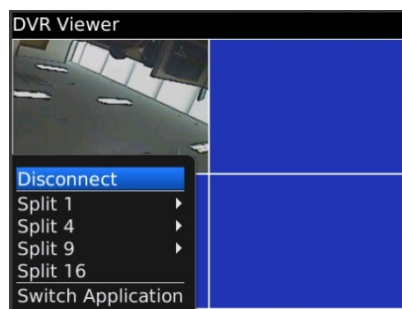

- When disconnecting, please click "Disconnect" and exit the mobile viewer program.

10.5.7 Uninstallation

- Click "Menu>Delete" on the "DVR Viewer" icon in the download folder to uninstall the program.

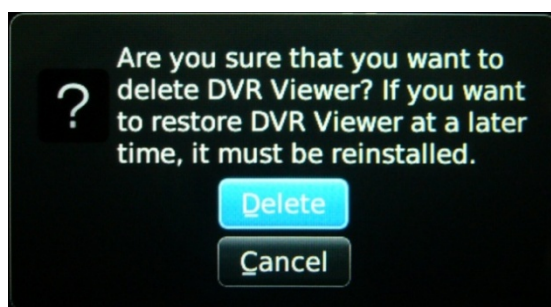

Keyboard Controller CP1200A

User`s Manual




11. KEYBOARD CONTROLLER

11.1 Connection

- User may connect cameras and Keyboard through DVR in various ways.
- Below shows the major probable connection methods through RS-485;


11.1.1 Configuration Diagram I

- Single system configuration (1 Camera, 1 DVR)

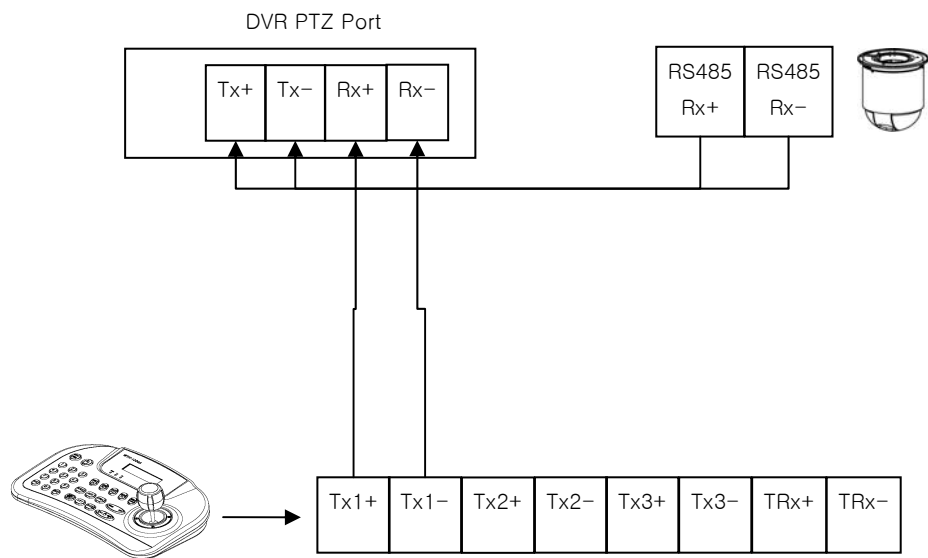


11.1.2 Configuration Diagram II

- Multiple system configuration (Multi Cameras, 1 DVR)

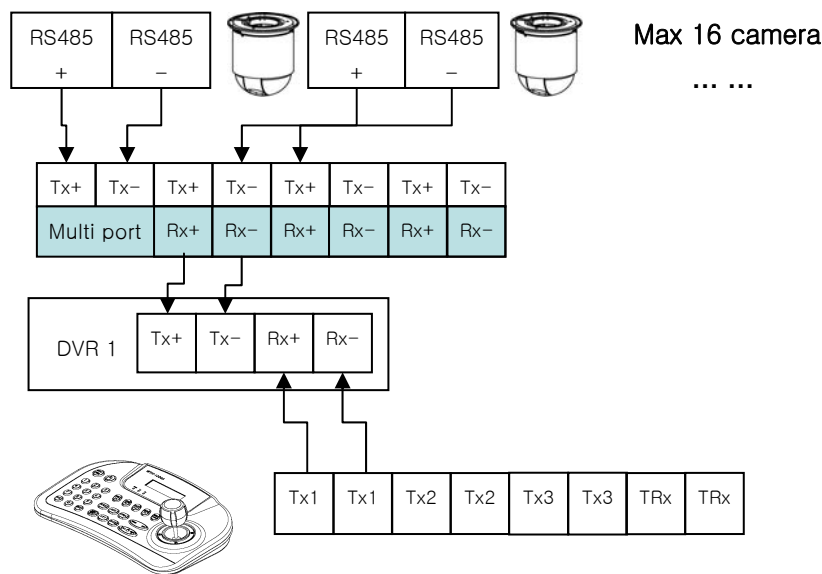

11.1.3 Configuration Diagram III


- Multiple system configuration (Multi Cameras, Multi DVRs)

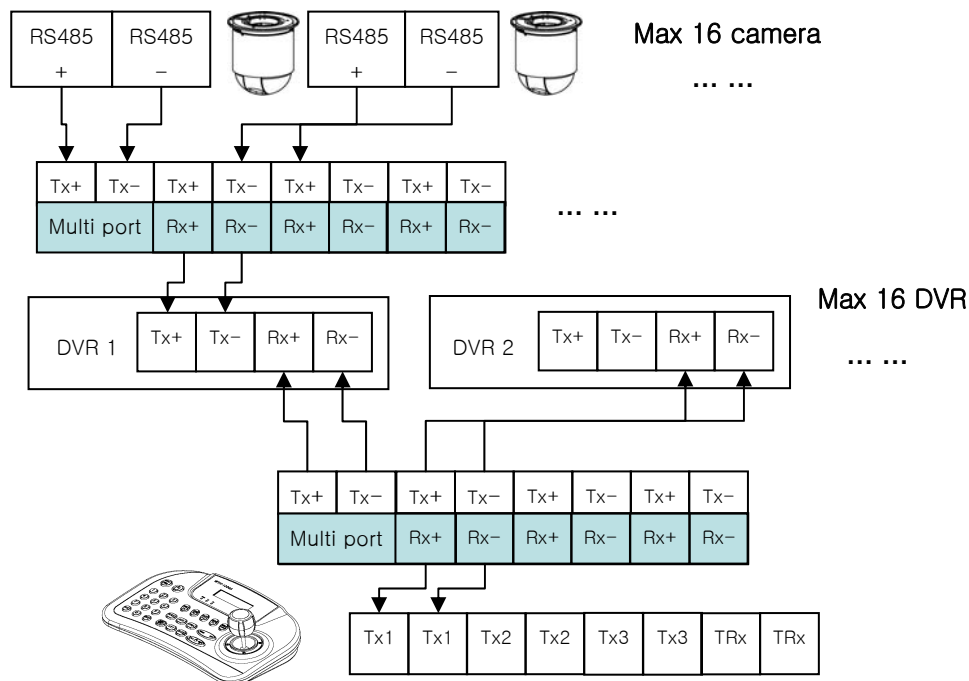


- Please make sure to connect “Tx to Rx” or “Rx to Tx” with positive polarity. (+ to +) and (- to -).

11.2 Keyboard Setup in DVR


- Enter “Setup>SYSTEM>Information: System ID” and define the ID of DVR.
- When user connects more than two DVRs then each DVR has to have a different ID.

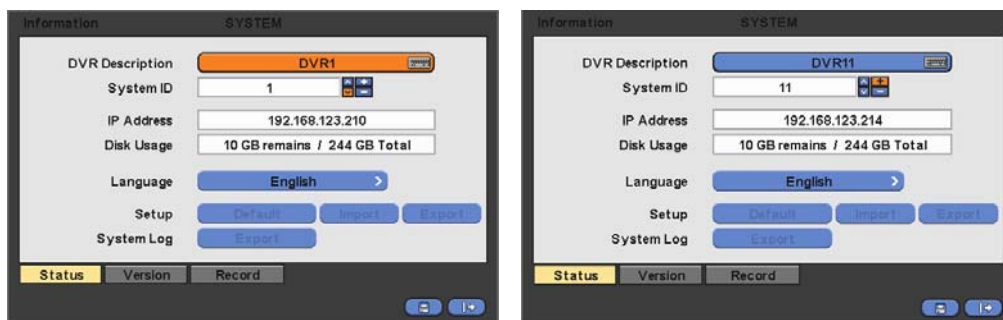

- Then move to “Setup>Device>Camera/PTZ: Keyboard” and select CP1200A.
- Then, choose PTZ protocol and Camera ID.

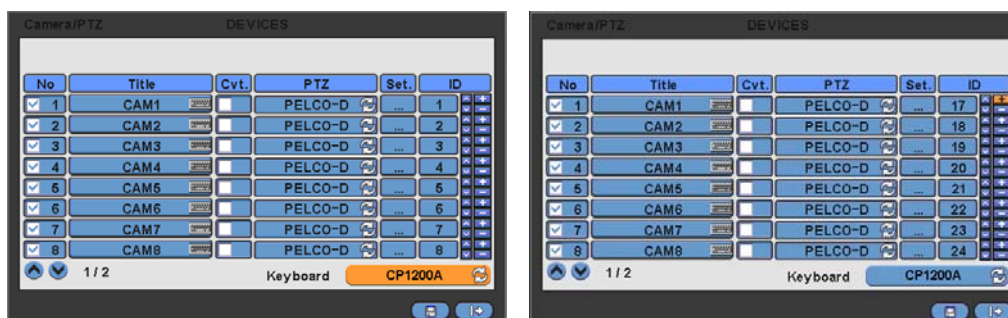


11.3 Keyboard Configuration

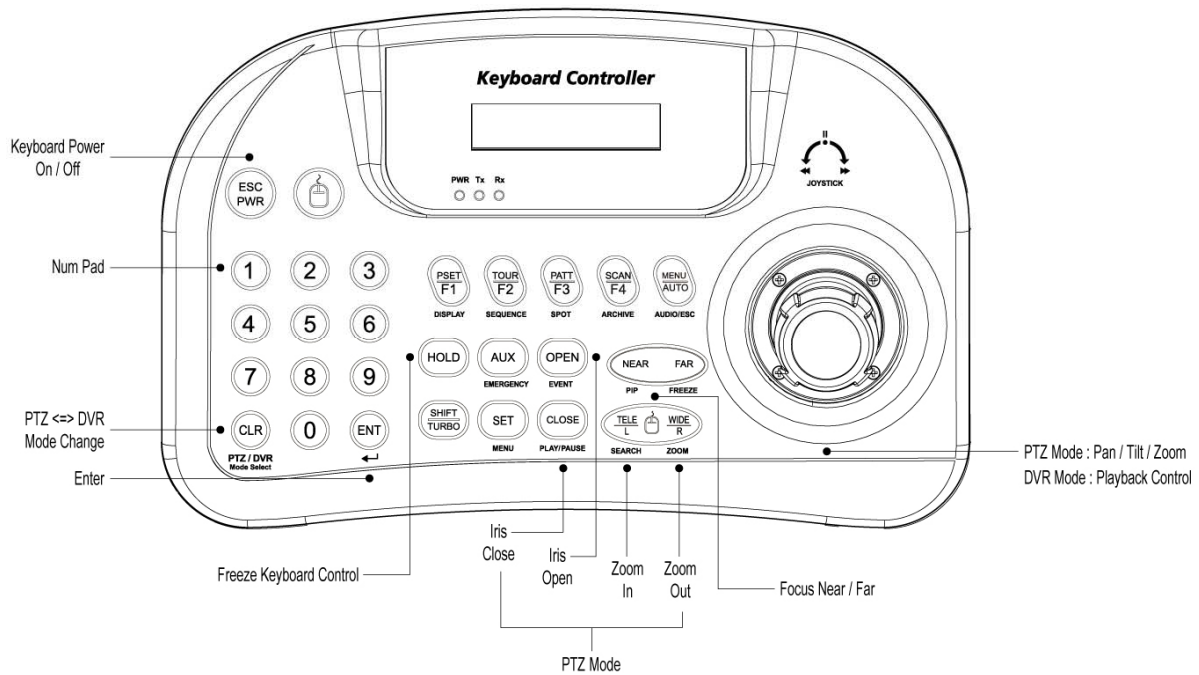

11.4 Operation

11.4.1 DVR/PTZ Mode conversion

- Press System ID number (For example, ID: 001 press Num Pad **1**) with **PTZ / DVR Mode Select** button.
- OSD will show "KBD:1" in right-bottom side that the keyboard is on DVR mode as below picture;

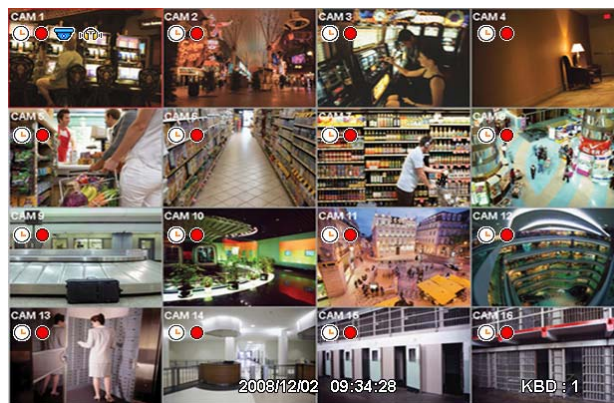

- Then, user should be able to operate the DVR functions by the keyboard controller.

11.4.2 DVR Control Mode

- In DVR control mode, all buttons are operated according to texts written underneath of each button. The functions are same as Front buttons of DVR as follows:
 - **DISPLAY**: change channel split screens in sequence of 1>4>9>16>1.
 - **SEQ**: turn on/off Sequence function.
 - **SPOT**: change the channel of a screen connected to the Spot monitor.
 - **ARCHIVE**: pop up Archive window.
 - **AUDIO/ESC**: shut down window when Setup window appears. Otherwise, it activates the AUDIO function. Any setup changes during shutdown are not saved.(same as Cancel)
 - **EMERGENCY**: turn on/off Emergency record function.

- **EVENT**: pop up a window to see System Log.
- **PIP**: turn on/off PIP screen in case of 1 channel screen. If PIP function is on, user **number key(s) + ENT** key to change the PIP channel. In case of 4 or 9 channel screen, it changes the screen to a next one in the sequence.
- **FREEZ**: freeze a current image.
- **SETUP**: pop up Setup window.
- **PLAY/PAUSE**: play/pause recorded data in play mode.
- **SEARCH**: pop up Search window, or switches play mode to search mode.
- **ZOOM**: zoom in a current image.
- **JOYSTICK (REW)**: rewind in sequence of 2X, 4X, 8X, 16X, 32X, 62X, Extreme in play mode.
- **JOYSTICK (FF)**: fast forward in sequence of 2X, 4X, 8X, 16X, 32X, 62X, Extreme in play mode.
- **JOYSTICK(SETUP)**: operate with direction keys if Setup window is popped up. (up/down/left/right).
- **ENT**: view a channel in full screen (by selecting a number with ENTER button).

11.4.3 PTZ Control Mode



- Push once to exit DVR mode and turn PTZ mode.
- Press number keys + “ENT”(Hold for a while until double beep sounds) key to change to Camera ID that wish to control. If there is a corresponding Camera ID, a full camera image will show up and PTZ control is possible.
- It is able to control 255 devices.
- **PSET**:
 - Preset save : Number keys + PSET (Hold for a while until double beep sounds).
 - Preset shift : Number keys + PSET
- **TELE**: Zoom Out
- **WIDE**: Zoom In

NOTE

- **When a Key does not Work after Set up**
 - If the communication speed of DVR and CP are not co-related, it may not work. Please make sure the Baud rate of Keyboard sets on 9.6kbps.
 - Press the button to enter PTZ mode and switch to DVR mode again.
 - Please reboot the DVR.
- **When Tx Blinks Continually on the LED Window**
 - If Tx blinks continually without any operation, it may be mistakenly set up for Joystick.
 - OFFSET of the Joystick may not appropriately set up.
 - Please touch the Joystick and position it on the center.

Serial In (POS)

User`s Manual





12.SERIAL IN (POS)

12.1 Usage of Serial-In Function

- Enables to record/search/display all transactions on monitoring screen by connecting POS/Cash Register.
- User can choose the data whether to record/display on their taste without limitedly designated protocols.

12.2 Connection Method

- Four ATM/POS channels are available as a default.
- Connect the USB slot of DVR by using USB to RS-232 Converter Cable and it is available to connect up to 4 serial-in devices by using the converter.
- Applicable converters as follows
 - FTDI chipset included converter
 - Prolific PL2303 / PL2303X / PL2303HX chipset included converter
 - Winchiphead chipset included converter
- When using a converter, please connect USB slot of DVR first, then restart in order to the DVR recognizes the USB converter.
- When using a multi-converter, the port recognizes as Number 1 as its shortest line of converter consequently.
- When using both single and multi-converters, single converter is recognized as Port Number 1.

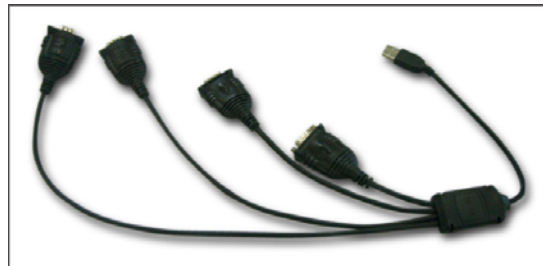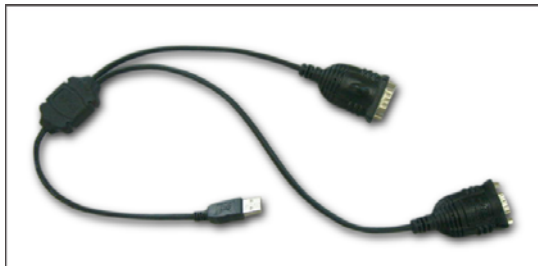



NOTE

It is available to connect 1 Serial-In application without additional option.
This function is only supports English alphabetical characters.
The maximum extension length for RS-232 cable is 15 meters approximately.

12.3 Connection Diagram

- Users can connect RS-232 port to USB port at front/rear of DVR by using a converter.

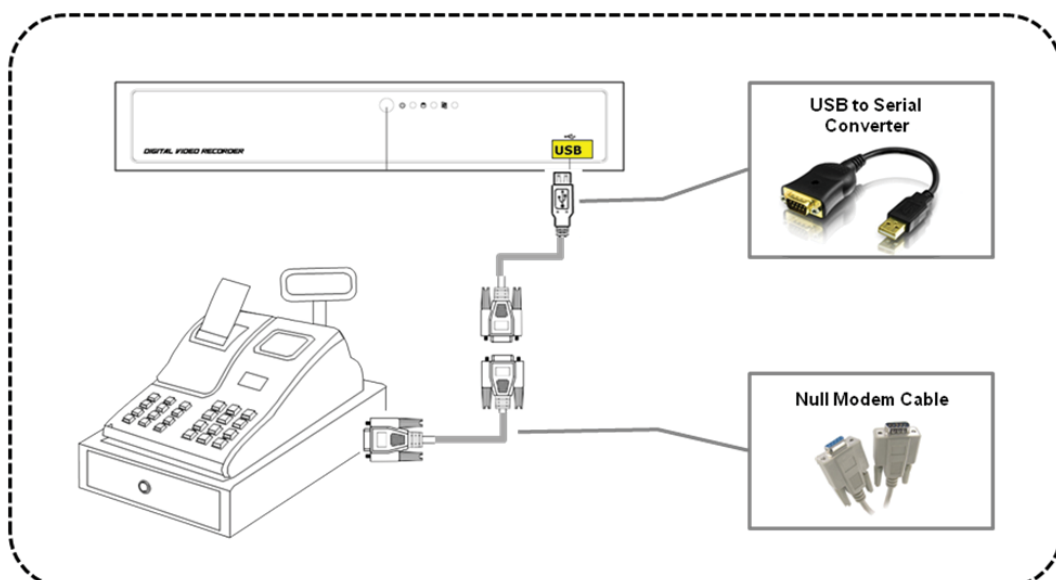

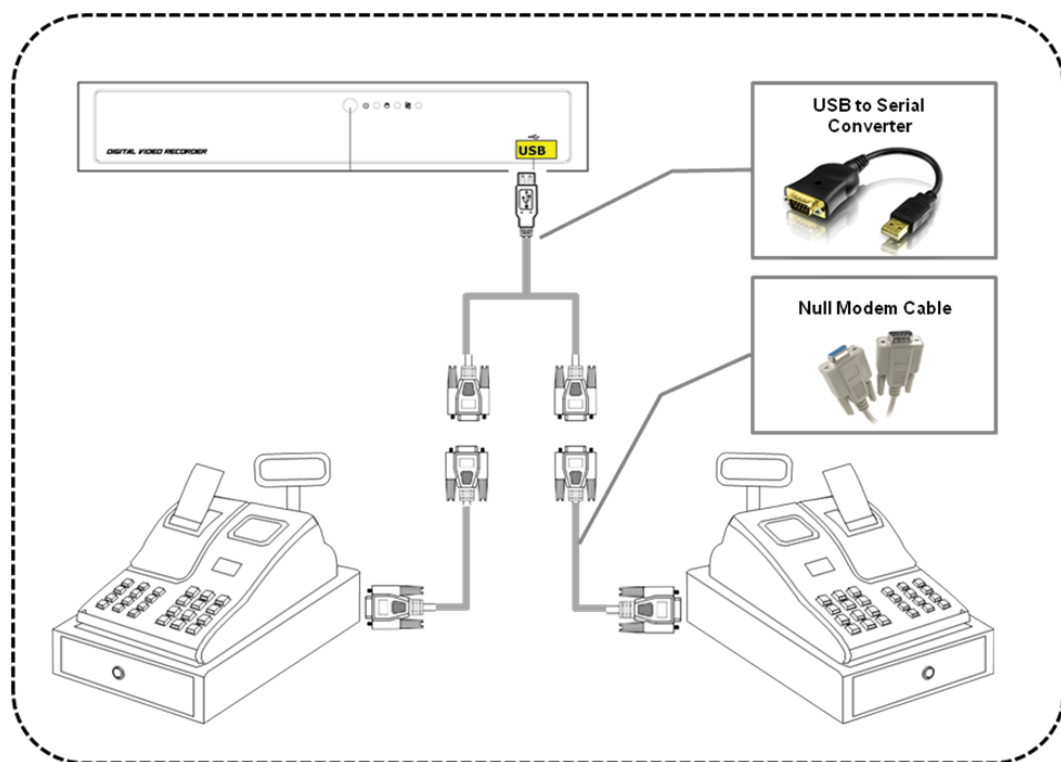


NOTE


- DVR and POS terminals, cabling and installation When you completed, Please restart the DVR.
DVR is "usb to serial cable" to restart the DVR to recognize the device will need to be sure.
- POS terminals to connect to the DVR and Null Modem cable connections.
If you have completed all the configuration and settings, and does not result in state action, RS232c cable's pin in the map, please change the Rx and Tx lines.

Direct connection



Cross connection[Null modem]

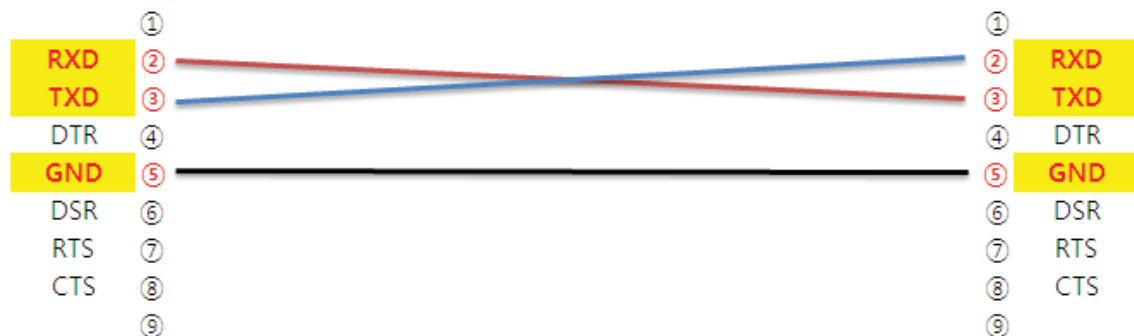

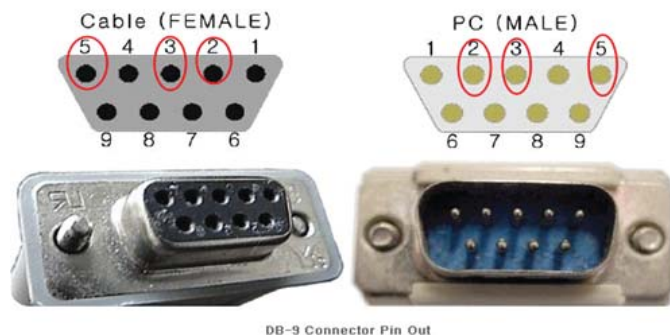


Pin Number	Signal	info
1	CD	Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground /Common
6	DSR	Data Set Ready
7	RTS	Request To send
8	CTS	Clear to send
9	RI	Ring indicator

12.4 Link

12.4.1 Link Setup

- Click “Setup>Link>” then shows as below.

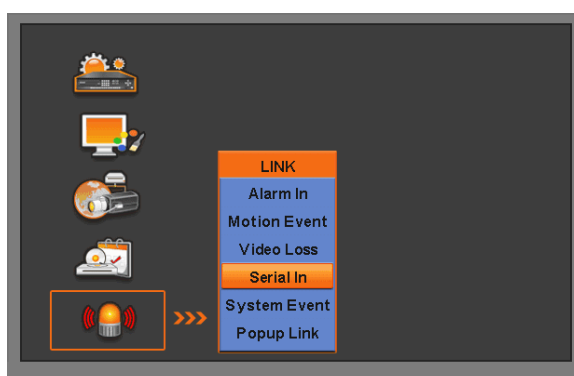

NOTE

The above menu is only available on the DVR model with Serial-In function.

- Click “Serial In” to appear following screen.



- Select POS/ATM port by clicking ‘Serial In’ button.
- Assign the port to display/record channel by clicking a “Link Camera”.
- Select “Link Alarm Out” item to run alarm output when the serial in events occur.
- Designate the E-Mail address or IP/Domain name at “Link Notification” box when the serial in events occur.


NOTE

E-Mail address or IP/Domain configuration is possible to set in ‘Setup>Network>Notification’ menu.

- Set other POS/ATM port as above.
- Click “OK” to save the configuration.

12.4.2 Schedule Setup

- Click “Record>Schedule>” then shows as below.

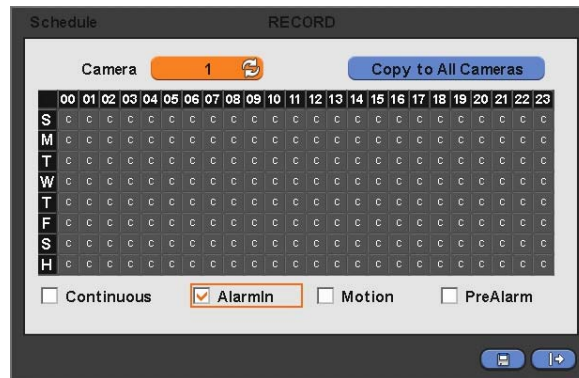



- Tick the box(☐) item Alarm In.
- Click the Time/Date that wishes to activate ATM/POS function on schedule.
- It is possible to activate all the time by clicking top-right side of table.
- Click “OK” to save the schedules.

NOTE

Please do not select the Alarm In and Motion simultaneously on schedule setup. Otherwise, POS/ATM text will be displayed improperly.

12.5 Setup

- Please click (←) “System>Devices>Serial-In”, then user will see the display below.

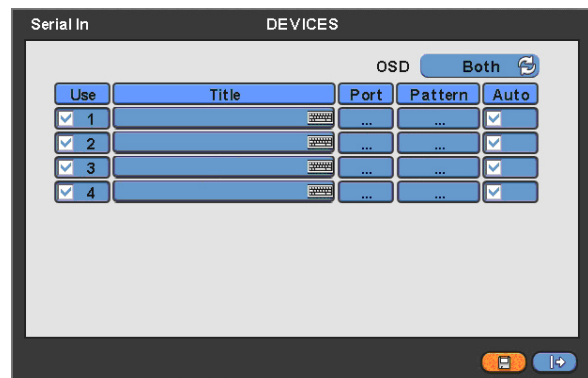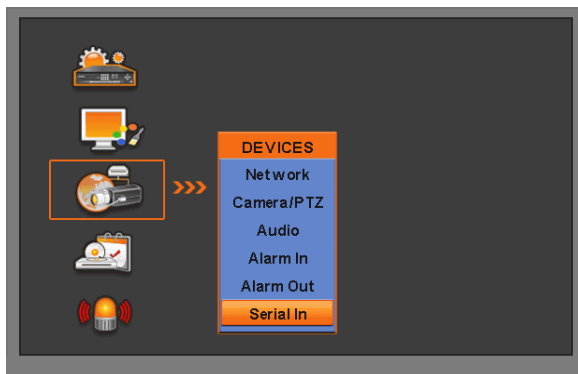


12.5.1 Title

- Click “Title” item then virtual keyboard will appear.
- Input the title then click (←) to save.

12.5.2 Port Setting

- Press (↵) the “Port Setting” button in order to set up the port. Default values are Baud rate 2400 bps, Data Bit 5 bit, Stop Bit 1 bit, Parity None.

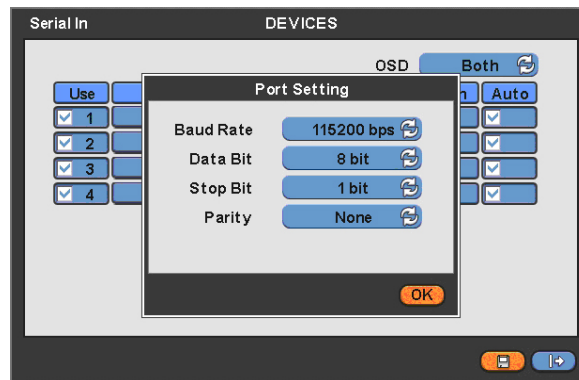

- When the setup is done, press enter (↵) to save the setting.

12.5.3 OSD Display


- OSD items are to decide whether to display the information from the serial port connected to the rs232 port on OSD screen.
- They have 4 menus as followings:
 - None: displays nothing on the OSD screen.
 - Live: displays incoming information from the serial port in real time on the OSD screen.
 - Playback: displays the saved information on the OSD screen during replay.
 - Both: displays all the information on both Live and Playback mode.

12.5.4 Pattern Setting

- User can select the name of serial device if click (↵) the keyboard button of Title.
- When “Use” items of Numbers 1-4 are checked ☒ on Serial-In page, it receives the data from the applicable serial device.
- Check ☒ the “Auto” item so as to capture automatically all the data which includes unnecessary dummy data out of serial device as below.



- Analyze among the automatically captured data which will be displayed or discarded then enter Pattern Setting.
 - Unless user checks “Auto” item, make sure to set up “Start Pattern” and “End Pattern”
 - “Discard Pattern”, “Line Delimiter” and “MCPL” are utilized independently, not relation to “Auto” mode.
- It is possible to input and analyze the serial data by clicking “Pattern” after tick the “Auto” box(☐) off.

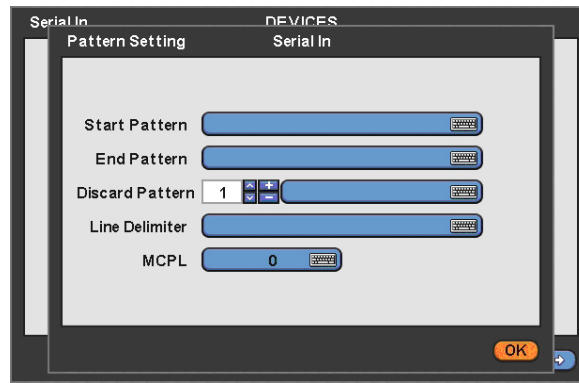


- Each item explains below:
 - Start Pattern: Indicates the beginning of the new data when new designated data are received from a serial device.
 - End Pattern: Indicates the end of the data when designated data are received from a serial device.
 - Discard Pattern: Does not show the designated data on OSD screen. Sets up in order to designate dummy data or characters which is not favorably to be displayed. Can be designated up to 64 of discard patterns in total.
 - Line Delimiter: Inputs characters to be used as delimiter between lines.
 - MCPL (Minimum Character Per Line): Sets up the number of the minimum strings each line. Does not show the characters on OSD screen if there is a character of which number is below the designated number in each line divided by the line delimiter.

Example


- When it firstly connected, the data will be displayed as below.




- Input a certain repeated string to "Line Delimiter".

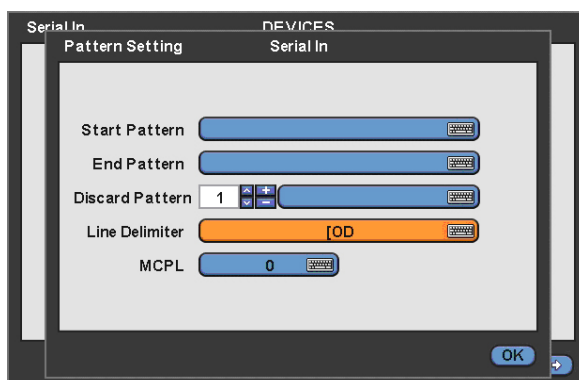



- Decide the number of minimum characters in "MCPL" item to hide data under the designated number of characters.

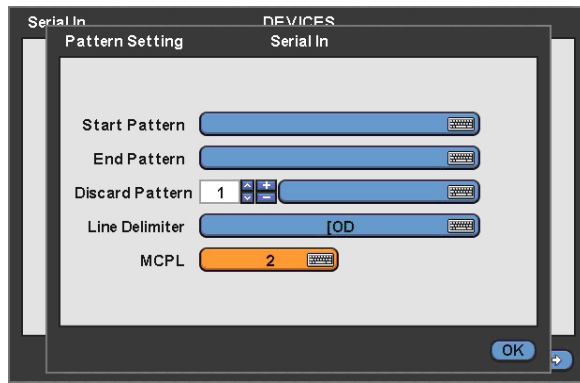

- Input the pattern of dummy data to Discard Pattern.

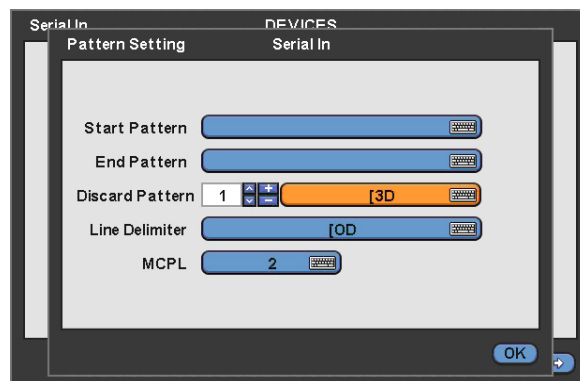

- Choose the data which willing to display and enter the Start Pattern and End Pattern.

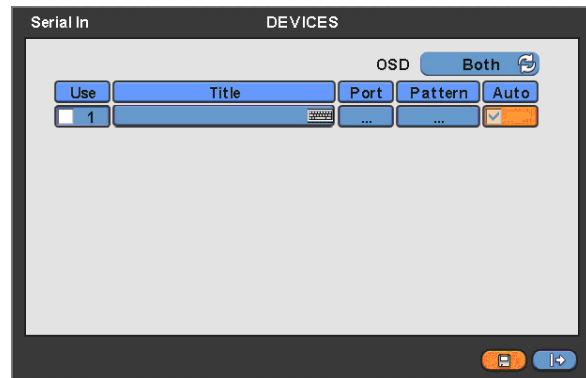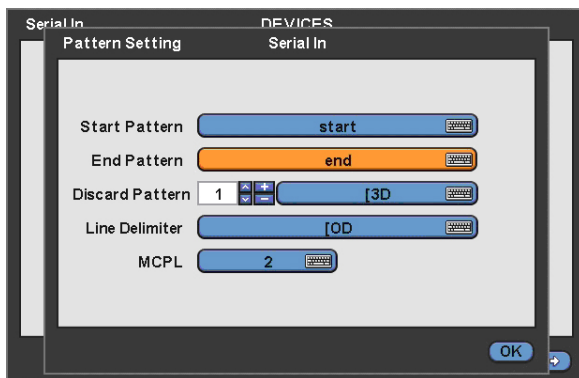

- Then tick the Auto box off in order to make the DVR recognizes the data between the Start and End patterns.



- Finally, test again and adjust data to remove missed dummy data.

12.6 Search

- Using event search function.
- Please click (←) the “Search>Event Search” menu on the pop-up menu of the wallpaper, then user will see the following screen.

The screenshot displays the 'Event SEARCH' window. At the top, it has tabs for 'Event' and 'SEARCH'. Below the tabs, there are 'From' and 'To' date/time pickers. The 'From' date is 2007/08/01 16:51:40 and the 'To' date is 2007/08/02 13:10:17. On the left, there are checkboxes for 'Camera', 'Motion', 'Alarm In', 'Emergency', and 'Serial In (POS/ATM)'. The 'Serial In (POS/ATM)' checkbox is checked. Below these checkboxes is a 'Coffee' button and a '14' indicator. The main area shows a list of search results with columns for 'Time' and 'Type'. The results are as follows:

Time	Type
2007/08/02 10:44:37	Espresso \$3.25
2007/08/02 10:45:50	Cappuccino \$4.75
2007/08/02 10:46:55	Caffe latte \$4.75
2007/08/02 10:48:10	Americano \$4.00
2007/08/02 10:56:21	Cappuccino \$4.75
2007/08/02 11:05:30	Espresso \$3.25
2007/08/02 12:10:17	Espresso \$3.25

At the bottom right, there is a 'Search Index' button and a 'Q' button.

- It is possible to search the recorded data which is set up on Serial In and Linking pages.
- The keyboard button for setting up the characters to be searched activates only when the Serial In item is checked ☒.